


EtherCAT[®]

for Capacitance Diaphragm Gauges

- CDG025D2
- CDG045D
- CDG045D2
- CDG045Dhs
- CDG100D
- CDG100D2
- CDG100Dhs
- CDG160D
- CDG160Dhs
- CDG200D
- CDG200Dhs

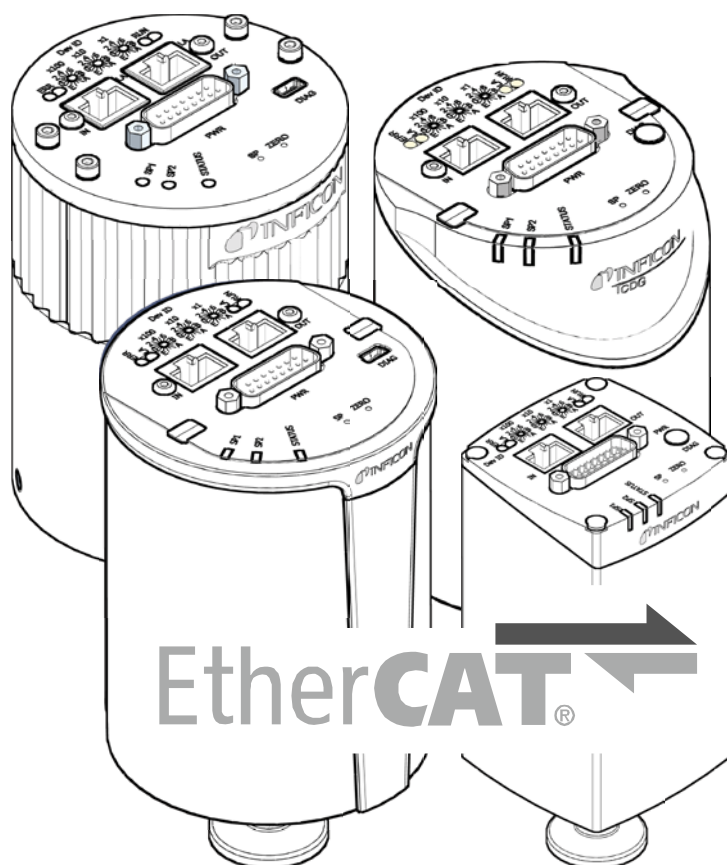

General Information

Caution

Data transmission errors

Any attempt to simultaneously operate the gauge via the RS232C Serial Interface and EtherCAT interface or the diagnostic port may result in incorrect data and data transmission errors.

Therefore, it is inadmissible to simultaneously operate the gauge via the RS232C Serial Interface and EtherCAT interface, or the diagnostic port.

Intended Use

This Communication Protocol contains instructions for operating EtherCAT interfaces (slaves) together with a master.



For safety information, specifications and operation instructions of the vacuum gauges refer to the appropriate documents:

CDG025D2	→		[4]	CDG160D	→		[3]
CDG045D	→		[1]	CDG160Dhs	→		[8]
CDG045D2	→		[5]	CDG200D	→		[3]
CDG045Dhs	→		[6]	CDG200Dhs	→		[8]
CDG100D	→		[2]				
CDG100D2	→		[5]				
CDG100Dhs	→		[7]				

EtherCAT-Interface

The following description of the EtherCAT interface is compliant to the EtherCAT specification of the EtherCAT Technology Group (ETG) and to the "EtherCAT Semiconductor Device Profile".


This manual describes the functionality of a EtherCAT slave and supports

- ETG.5003.1 S (R) V1.1.0: Part 1 Common Device Profile (CDP) (→ [17]) and
- ETG.5003.2080 S (R) V1.3.0: Part 2080: Specific Device Profile (SDP) Vacuum Pressure Gauge (→ [18]).

For operating the gauge via EtherCAT, prior installation of the device specific ESI file is required on the bus master side. This file can be downloaded from our web-site.

Product Identification

In all communications with INFICON, please specify the information on the product nameplate. For convenient reference copy that information into the space provided below.

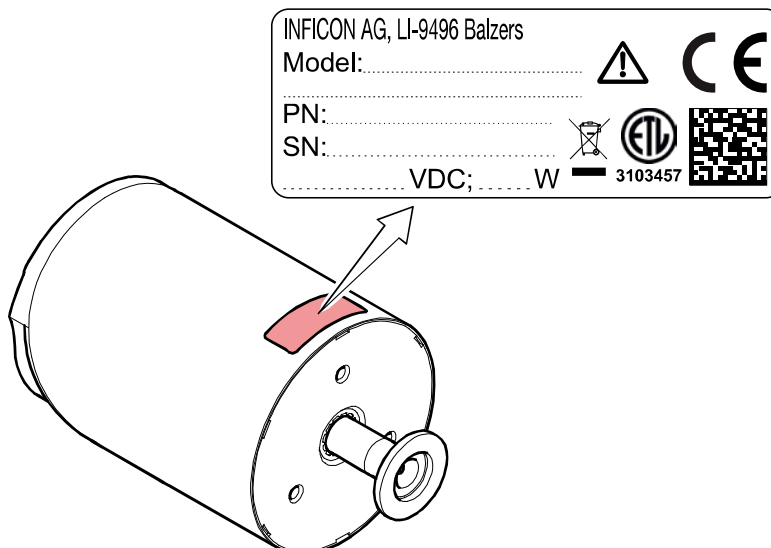

Validity


This document applies to products of the CDG025D2, CDG045D, CDG045D2, CDG045Dhs, CDG100D, CDG100D2, CDG100Dhs, CDG160D, CDG160Dhs, CDG200D and CDG200Dhs series with EtherCAT interface.

This manual is based on firmware version 1.3.0.0.

If your unit does not work as described in this document, please check that it is equipped with the above firmware version:

- CDG025D2, CDG045D, CDG045D2, CDG100D, CDG100D2, CDG160D and CDG200D → [14](#), Index 100A
- CDG045Dhs, CDG100Dhs, CDG160Dhs and CDG200Dhs → [38](#), Index 100A

Part numbers of standard products are indicated below. OEM products have other part numbers and different parameter settings (e.g. factory setting of setpoint) as defined in the corresponding ordering information.

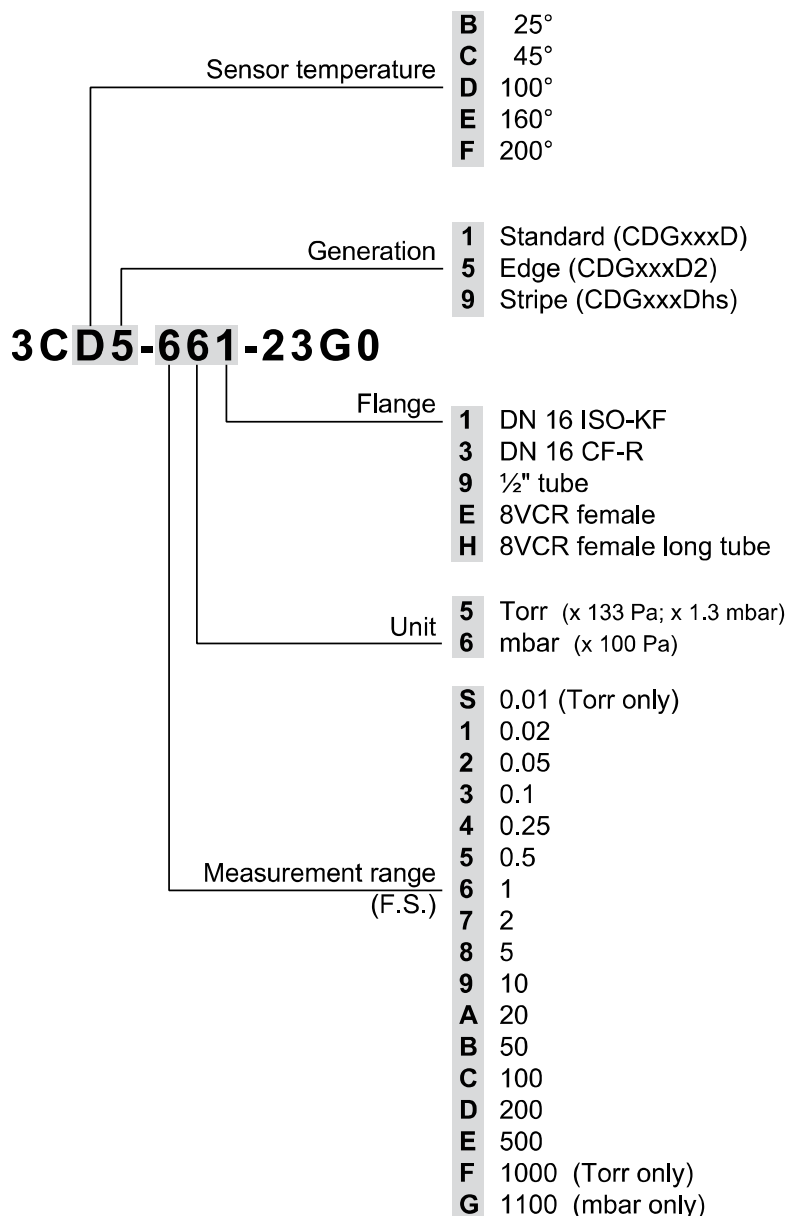

The part number (PN) can be taken from the product nameplate.

If not indicated otherwise in the legends, the illustrations in this document correspond to CDG045D gauges with the DN 16 ISO-KF vacuum connection. They apply to other vacuum connections and to the other gauges by analogy.

We reserve the right to make technical changes without prior notice.

Trademarks

EtherCAT[®] Beckhoff Automation GmbH, Deutschland
Edge[™] INFICON GmbH
Stripe[™] INFICON GmbH



Patents

EP 1070239 B1, 1040333 B1
US Patents 6528008, 6591687, 7107855, 7140085

Contents

General Information	2
Intended Use	2
EtherCAT–Interface	2
Product Identification	2
Validity	3
Trademarks	4
Patents	4
1 Technical Data	7
2 Interface Connection	8
3 Operation	10
3.1 Introduction	10
3.2 Front View	10
3.3 Indicators and Switches	11
3.3.1 <RUN> LED	11
3.3.2 <ERR> LED	11
3.3.3 <LA> LED (<IN> Port)	11
3.3.4 <LA> LED (<OUT> Port)	11
3.3.5 Device Address Switch	12
4 Object Structure CDG025D2, CDG045D, CDG045D2, CDG100D, CDG100D2, CDG160D, CDG200D	13
4.1 Object Dictionary structure	13
4.2 Communication Profile Objects (0x1000...0x1FFF)	14
4.2.1 Process Data Objects (PDO's)	14
4.3 Manufacturer-specific Profile Objects (0x2000...0x5FFF)	15
4.3.1 Manufacturer Status	15
4.3.2 Manufacturer Configuration (Module 1)	16
4.3.3 Manufacturer Configuration (Module 2)	17
4.4 Input Area (0x6000...0x6FFF)	17
4.4.1 Input Common	17
4.4.2 Input Capacitance Diaphragm	17
4.4.3 Input Common	18
4.4.4 Input Piezo	18
4.4.5 Input Trip Point 1	18
4.4.6 Input Trip Point 2	19
4.5 Configuration Area (0x8000...0x8FFF)	19
4.5.1 Configuration Capacitance Diaphragm	19
4.5.2 Configuration Trip Point	19
4.5.3 Configuration Trip Point 1	20
4.5.4 Configuration Trip Point 2	21
4.6 Information Area (0x9000...0x9FFF)	22
4.6.1 Information Common Capacitance Diaphragm	22
4.6.2 Information Capacitance Diaphragm	23
4.6.3 Information Common Piezo	23
4.6.4 Information Piezo	24
4.6.5 Information Trip Point 1 / 2	24
4.7 Device Area (0xF000...0xAFFF)	24
4.7.1 Semiconductor Device Profile	24
4.7.2 Module Profile List	24
4.7.3 Exceptions	25
4.7.4 Active Exception Status	25
4.7.5 Active Device Warning Details	25
4.7.6 Active Device Error Details	26
4.7.7 Active Global Device Warning Details	26
4.7.8 Active Global Device Error Details	27
4.7.9 Latched Device Warning Details	27
4.7.10 Latched Device Error Details	27
4.7.11 Latched Global Device Warning Details	28
4.7.12 Latched Global Device Error Details	28
4.7.13 Device Warning Mask	28
4.7.14 Device Error Mask	29
4.7.15 Global Device Warning Mask	29
4.7.16 Global Device Error Mask	29
4.7.17 Manufacturer Information Device	29
4.7.18 Trip Point Output All	29
4.7.19 Input Latch Local Timestamp	30












4.7.20	Configure Device	30
4.7.21	Information Device	31
4.7.22	Command Zero Adjust	32
4.7.23	Full Scale Adjust	32
4.7.24	Device Reset Command	33
4.7.25	Exception Reset Command	33
4.7.26	Store Parameters Command	34
4.7.27	Calculate Checksum Command	35
4.7.28	Load Parameters Command	36
5	Object Structure CDG045Dhs, CDG100Dhs, CDG160Dhs, CDG200Dhs	37
5.1	Object Dictionary structure	37
5.2	Communication Profile Objects (0x1000...0x1FFF)	38
5.2.1	Process Data Objects (PDO's)	38
5.3	Manufacturer-specific Profile Objects (0x2000...0x5FFF)	39
5.3.1	Manufacturer Status	39
5.3.2	Manufacturer Configuration (Module 1)	40
5.3.3	Manufacturer Configuration (Module 2)	40
5.4	Input Area (0x6000...0x6FFF)	41
5.4.1	Input Common	41
5.4.2	Input Capacitance Diaphragm	41
5.4.3	Input Common	42
5.4.4	Input Piezo	42
5.4.5	Input Trip Point 1	42
5.4.6	Input Trip Point 2	43
5.5	Configuration Area (0x8000...0x8FFF)	43
5.5.1	Configuration Capacitance Diaphragm	43
5.5.2	Configuration Trip Point	43
5.5.3	Configuration Trip Point 1	44
5.5.4	Configuration Trip Point 2	45
5.6	Information Area (0x9000...0x9FFF)	47
5.6.1	Information Common Capacitance Diaphragm	47
5.6.2	Information Capacitance Diaphragm	48
5.6.3	Information Common Piezo	48
5.6.4	Information Piezo	48
5.6.5	Information Trip Point 1 / 2	49
5.7	Device Area (0xF000...0xAFFF)	49
5.7.1	Semiconductor Device Profile	49
5.7.2	Module Profile List	49
5.7.3	Exceptions	49
5.7.4	Active Exception Status	49
5.7.5	Active Device Warning Details	50
5.7.6	Active Device Error Details	50
5.7.7	Active Global Device Warning Details	51
5.7.8	Active Global Device Error Details	51
5.7.9	Latched Device Warning Details	52
5.7.10	Latched Device Error Details	52
5.7.11	Latched Global Device Warning Details	53
5.7.12	Latched Global Device Error Details	53
5.7.13	Device Warning Mask	53
5.7.14	Device Error Mask	53
5.7.15	Global Device Warning Mask	54
5.7.16	Global Device Error Mask	54
5.7.17	Manufacturer Information Device	54
5.7.18	Trip Point Output All	54
5.7.19	Input Latch Local Timestamp	54
5.8	Configure Device	55
5.8.1	Information Device	56
5.8.2	Command Zero Adjust	57
5.8.3	Full Scale Adjust	57
5.8.4	Device Reset Command	58
5.8.5	Exception Reset Command	58
5.8.6	Store Parameters Command	59
5.8.7	Calculate Checksum Command	60
5.8.8	Load Parameters Command	61
Appendix		62
A:	Overview Setting Trip Points	62
B:	Literature	64

For cross-references within this document, the symbol (→  XY) is used, for cross-references to further documents, listed under literature, the symbol (→  [Z]).


 
1 Technical Data



For further technical data refer to the appropriate documents:

CDG025D2	→	 [4]	CDG160D	→	 [3]
CDG045D	→	 [1]	CDG160Dhs	→	 [8]
CDG045D2	→	 [5]	CDG200D	→	 [3]
CDG045Dhs	→	 [6]	CDG200Dhs	→	 [8]
CDG100D	→	 [2]			
CDG100D2	→	 [5]			
CDG100Dhs	→	 [7]			

EtherCAT interface

Communication protocol	protocol specialized for EtherCAT
Communication standards	ETG.5003.1 S (R) V1.1.0: Part 1 Common Device Profile (CDP) (→  [17]) ETG.5003.2080 S (R) V1.3.0: Part 2080: Specific Device Profile (SDP) Vacuum Pressure Gauge (→  [18])
Data rate	100 Mbps
Node address	Explicit Device Identification
Physical layer	100BASE-Tx (IEEE 802.3)
EtherCAT connector	2 × RJ45, 8-pin (socket) <IN>: EtherCAT input <OUT>: EtherCAT output
Cable	shielded, special Ethernet Patch Cable (CAT5e quality or higher)
Cable length	≤100 m
Process data	Fixed PDO mapping and configurable PDO mapping
Mailbox (CoE)	SDO requests, responses and information

2 Interface Connection

Making an EtherCAT interface cable

 
For operating the temperature controlled CDGxxxD gauge via EtherCAT, two interface cables conforming to the EtherCAT standard are required. If no such cables are available, make two according to the following indications.

Cable type

Ethernet Patch Cable Cable (CAT5e quality) with FCC68 connector.


Procedure

1 Pin assignment:




FCC68, 8-pin,
male, soldering side

Pin	Signal	Description
1	TD+	Transmission Data +
2	TD-	Transmission Data -
3	RD+	Receive Data +
4	nu	not used
5	nu	not used
6	RD-	Receive Data -
7	nu	not used
8	nu	not used

Pin assignment of the D-sub 15-pin sensor connector according to the respective operating manual (→  [1] ... [8]).

- 2** Plug the EtherCAT (and sensor) cables connector into the gauge: From the previous device the cable connected to OUT port has to be connected to the CDGxxxD <IN> port. And the cable from the CDGxxxD <OUT> port has to be connected to the next device's <IN> port.

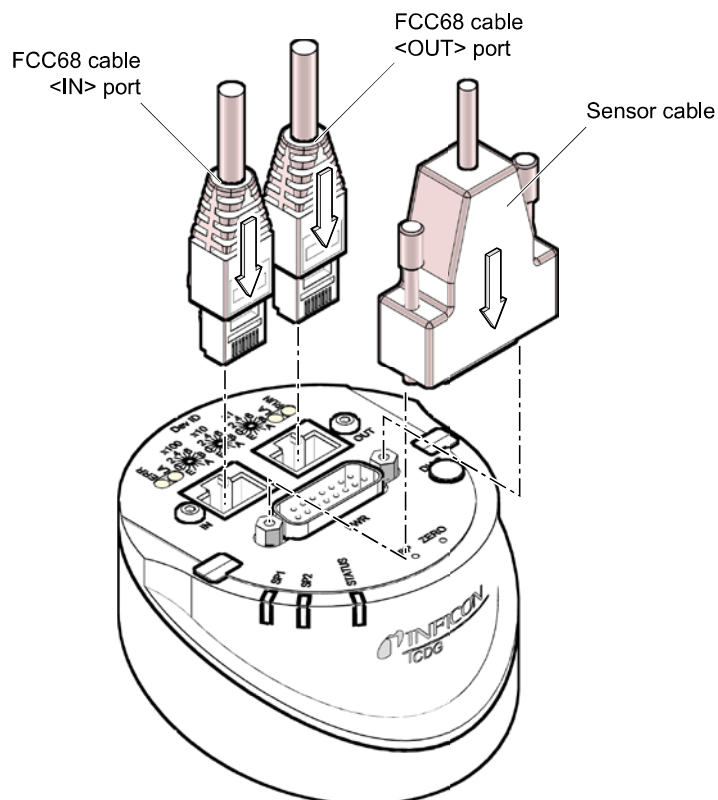

3 Operation

3.1 Introduction

Via the EtherCAT interface, the following and further data are exchanged in the standardized EtherCAT protocol:

- Pressure reading
- Pressure unit (Torr, mbar, Pa)
- Zero adjustment
- Status and error messages
- Status of the switching functions
- Set Trip Point for switching functions



Caution




Data transmission errors

Any attempt to simultaneously operate the gauge via the RS232C Serial Interface and EtherCAT interface or the diagnostic port may result in incorrect data and data transmission errors.

Therefore, it is inadmissible to simultaneously operate the gauge via the RS232C Serial Interface and EtherCAT interface or the diagnostic port.

3.2 Front View

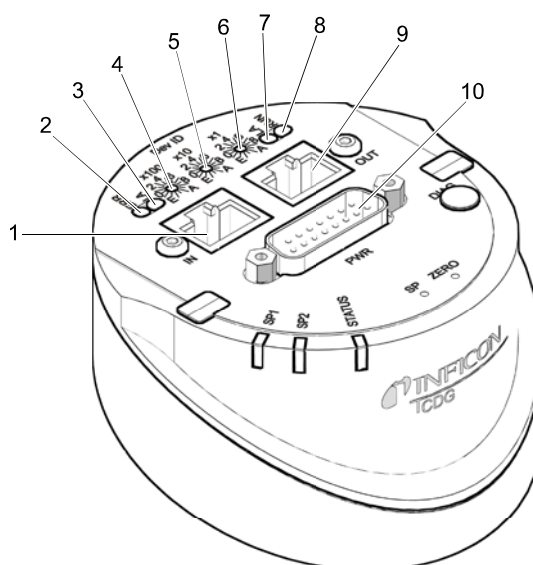

Position	Label	Function
1	IN	EtherCAT IN connector
2	ERR	Error LED
3	LA	Link activity EtherCAT IN
4	x100	Address Switch x 100, hexadecimal
5	x10	Address Switch x 10, hexadecimal
6	x1	Address Switch x 1, hexadecimal
7	LA	Link activity EtherCAT OUT
8	RUN	EtherCAT Status LED
9	OUT	EtherCAT OUT connector
10	PWR	Sensor cable connector (Power, analog I/O, RS232C I/O and Relay contacts)

3.3 Indicators and Switches

3.3.1 <RUN> LED

Displays the operating status.



Color	LED State	Description
green	off	INIT (initialization status) or no power applied to device.
	blinking (200 ms on 200 ms off)	PREOP (pre-operational status).
	single flash (200 ms on 1000 ms off)	SAFEOP (safe-operational status). Communication of cyclic data transfer running. Input values available, output values written to the device but not updated on device output.
	on	OP (operational status).

3.3.2 <ERR> LED

Displays the error content.



Color	LED State	Description
red	off	No error or no power applied to device.
	blinking (200 ms on 200 ms off)	Error occurred (see error parameter).
	single flash (200 ms on 1000 ms off)	Slave device application has changed the EtherCAT state autonomously, due to local error (see error parameter).
	double flash (200 ms on 200 ms off 200 ms on 1000 ms off)	An application watchdog timeout has occurred. Sync Manager Watchdog timeout or communication timeout occurred.
	on	A critical communication or application controller error has occurred. Application controller is not responding any more (PDI Watchdog Timeout detected by ESC)

3.3.3 <LA> LED (<IN> Port)

Displays the input status.



Color	LED State	Description
green	off	Port not connected or no power applied to device.
	blinking	Port connected and communication active.
	on	Port connected but no communication.


3.3.4 <LA> LED (<OUT> Port)

Displays the output status.




Color	LED State	Description
green	off	Port not connected or no power applied to device.
	blinking	Port connected and communication active.
	on	Port connected but no communication.

 3.3.5 Device Address Switch



During device initialization, the device address switches are read by the device firmware. This device address is supported to the master as Explicit Device Identification.

Example: Value of the Explicit Device ID = 0xDDD (dec 3549):
 $0x100 * 0xD$ (dec 3328) + $0x10 * 0xD$ (dec 208) + $0x1 * 0xD$ (dec 13)

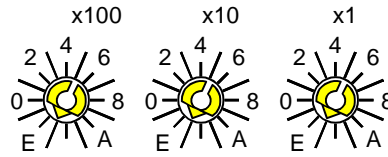

4 Object Structure CDG025D2, CDG045D, CDG045D2, CDG100D, CDG100D2, CDG160D, CDG200D

This chapter describes the CANopen over EtherCAT (CoE) Object Dictionary.

4.1 Object Dictionary structure

The objects in the CoE Object Dictionary can be accessed with SDO services, and many of the dictionary objects can be mapped for cyclic communication in PDO's. Each object is addressed using a 16-bit index and an 8-bit subindex.

The following table presents the overall layout of the standard Object Dictionary.

Index (hex.)	Object dictionary area	
1000 – 1FFF	Communication profile area	
2000 – 5FFF	Manufacturer-specific profile area	
6000 – 6FFF	Profile Specific Area	Input area
7000 – 7FFF		Output area
8000 – 8FFF		Configuration area
9000 – 9FFF		Information area
A000 – AFFF		Diagnosis area
B000 – BFFF		Service Transfer area
C000 – EFFF		Reserved area
F000 – FFFF		Device area

Explanations for the abbreviations in the columns of the tables are given below:

Abbr.	Description
Access	SDO read/write access <ul style="list-style-type: none"> RO: object can only be read by the SDO service RW: object can be both read and written by the SDO service
CoE	CAN application protocol over EtherCAT
Index	Object Index (hex.) (address of an object)
NV	Nonvolatile; attribute value is maintained through power cycles
Object	Abstract representation of a particular component within a device, which consists of data, parameters, and methods.
PDO	Process Data Object. Structure described by mapping parameters containing one or several process data entities.
PM	PDO mapping <ul style="list-style-type: none"> Rx: object can be mapped into an Rx PDO Tx : object can be mapped into a Tx PDO
RxPDO	Receive PDO. A Process Data Object received by an EtherCAT slave.
SDO	Service Data Objects. CoE asynchronous mailbox communications where all objects in the Object Dictionary can be read and written.
SI	Subindex (hex.) (sub-address of an object)
Type	Data Type <ul style="list-style-type: none"> BOOL, BIT = 1 bit. Boolean (0 = false, 1 = true) USINT, BYTE = 8 bit. Unsigned Byte UINT = 16 bit. Unsigned integer value UDINT = 32 bit. Unsigned integer value ULINT = 64 bit. Unsigned integer value REAL = 32 bit. Floating point V_STRING = 8xn bit. Visible string (1 byte for character)
TxPDO	Transmit PDO. A Process Data Object sent from an EtherCAT slave.

4.2 Communication Profile Objects (0x1000...0x1FFF)

The objects of the communication profile describe the basic EtherCAT properties of the CDGxxxD and are common to all EtherCAT slaves using the CoE communication protocol. The objects are described in following table:

Index	SI	DataType	NV	Access	PM	Name
1000		UDINT		RO		Device Type
1008		V_STRING		RO		Manufacturer Device name
1009		V_STRING		RO		Manufacturer Hardware Version
100A		V_STRING		RO		Manufacturer Software Version
100B		V_STRING		RO		Manufacturer Bootloader Version
1010	0x01	UDINT		RW		Store Parameters Read: Bit 0 = 1: slave saves the backup entries when writing 0x1010:01 with 0x65766173 Bit 1-31 = 0 Write: With the value 0x65766173 the backup entries will be stored to non-volatile memory of the slave
1011	0x01	UDINT		RW		Restore Default Parameters Read: Bit 0 = 1: slave supports the restoring of backup entries with the default values when writing 0x1011:01 with 0x64616F6C Bit 1-31 = 0 Write: With the value 0x64616F6C the backup entries will be restored with the default values
1018				RO		Identity Object
	0x01	UDINT		RO		Vendor ID
	0x02	UDINT		RO		Product Code
	0x03	UDINT		RO		Revision Number
	0x04	UDINT		RO		Serial Number
10F8		ULINT		RO		Timestamp Object

4.2.1 Process Data Objects (PDO's)

CDGxxxD gauges only: They consist of one vacuum pressure sensor with an additional sensor measuring the ambient pressure (ATM).

For each sensor module a default mapping is configured.

Or to meet other requirements the TxPDO's 1A01, 1A03 or 1BFF and the RxPDO 1601 are designated for user mapping. These PDO's do not have default values and can be set up by the PDO configuration.

RxPDO's

Index	SI	DataType	NV	Access	PM	Name
1600		PM		RW		RxPDO Receive PDO Mapping,
1601		PM		RW		RxPDO Receive PDO Mapping, User Mapping

TxPDO's

Index	SI	Data Type	NV	Access	PM	Name
1A00		PM		RW		TxPDO Transmit PDO Mapping
	0x01	BIT				Reading Valid (Module 1)
	0x02	BIT				Overrange Exceeded (Module 1)
	0x03	BIT				Underrange Exceeded (Module 1)
	0x04	BIT				Padding Bits 1 (5 bit)
	0x05	REAL				Sensor Value (Module 1)
1A01		PM		RW		TxPDO Transmit PDO Mapping, User Mapping
1A02		PM		RW		TxPDO Transmit PDO Mapping
	0x01	BIT				Reading Valid (Module 2)
	0x02	BIT				Overrange Exceeded (Module 2)
	0x03	BIT				Underrange Exceeded (Module 2)
	0x04	BIT				Padding Bits 1 (5 bit)
	0x05	REAL				Sensor Value (Module 2)
1A03		PM		RW		TxPDO Transmit PDO Mapping, User Mapping
1BFE		PM		RW		Transmit PDO Mapping
	0x01	BYTE				Active Exception Status
	0x02	UDINT				Trip Point Output All Instance
1BFF		PM		RW		Transmit PDO Mapping User Mapping
1C00	0x01 0x02 0x03 0x04	BYTE		RW		Sync Manager Type
1C12 / 1C13	0x01 0x02 0x03 0x04	UINT		RW		Sync Manager PDO Assignment
1C32 / 1C33	0x01 - 0x20			RW		Sync Manager Parameter

4.3 Manufacturer-specific Profile Objects (0x2000...0x5FFF)

The manufacturer-specific profile objects contain the manufacturer's model number and device configuration data, status and diagnostic data. The objects are described in the following tables.

4.3.1 Manufacturer Status

Index	SI	Data Type	NV	Access	PM	Name
2000	0x01	BYTE		RO		Status

Subindex 0x01

Alarm and Warning State of Module 1	
Bit 0	High Alarm Exception (0 = cleared, 1 = set)
Bit 1	Low Alarm Exception (0 = cleared, 1 = set)
Bit 2	High Warning Exception (0 = cleared, 1 = set)
Bit 3	Low Warning Exception (0 = cleared, 1 = set)
Bit 4...7	0

4.3.2 Manufacturer Configuration (Module 1)

Index	SI	Data Type	NV	Access	PM	Name
4000	0x01	BYTE		RW		Safe State
	0x02	REAL		RW		Safe Value
	0x03	BOOL		RW		Alarm Enable
	0x04	BOOL		RW		Warning Enable
	0x05	REAL		RW		Alarm Trip Point High
	0x06	REAL		RW		Alarm Trip Point Low
	0x07	REAL		RW		Alarm Hysteresis
	0x08	REAL		RW		Warning Trip Point High
	0x09	REAL		RW		Warning Trip Point Low
	0x0A	REAL		RW		Warning Hysteresis
	0x0B	BYTE		RW		Filter

Subindex 0x01

Specifies the behavior for the value for States other than Valid.

Safe State	
0	Zero
1	Full Scale
2	Hold last value
3	Use safe value

Subindex 0x02

Safe Value: The value to be used for Safe State = Safe Value.

Subindex 0x03

Alarm Enable: Enables the setting of the Alarm Status Bits.

Subindex 0x04

Warning Enable: Enables the setting of the Warning Status Bits.

Subindex 0x05

Alarm Trip Point High: Determines the value above which an Alarm Condition will occur.

Subindex 0x06

Alarm Trip Point Low: Determines the value below which an Alarm Condition will occur.

Subindex 0x07

Alarm Hysteresis: Determines the amount by which the value must recover to clear an Alarm Condition.

Subindex 0x08

Warning Trip Point High: Determines the value above which a Warning Condition will occur.

Subindex 0x09

Warning Trip Point Low: Determines the value below which a Warning Condition will occur.

Subindex 0x0A

Warning Hysteresis: Determines the amount by which the value must recover to clear a Warning Condition.

Subindex 0x0B

Filter	
0	Dynamic (factory default)
1	Fast
2	Slow

4.3.3 Manufacturer Configuration (Module 2)

Index	SI	Data Type	NV	Access	PM	Name
4010	0x01	BYTE		RW		Safe State
	0x02	REAL		RW		Safe Value

Subindex 0x01

Specifies the behavior for the Value for states other than Valid.

Safe State	
0	Zero
1	Full Scale
2	Hold last value
3	Use safe value

Subindex 0x02

Safe Value: The value to be used for Safe State = Safe Value.

4.4 Input Area (0x6000...0x6FFF)

4.4.1 Input Common

Index	SI	Data Type	NV	Access	PM	Name
6000	0x0E	BOOL		RO	tx	TxPdoState
	0x11	REAL		RO	tx	Sensor Value

Subindex 0x0E

Is set if the device is not in Safe State (value (I 0x6nn0, SI 0x11) = valid)

TxPdoState	
0	Invalid
1	Valid

Subindex 0x11

The corrected, converted, calibrated final analog input value of the sensor.

4.4.2 Input Capacitance Diaphragm

Index	SI	Data Type	NV	Access	PM	Name
6001	0x01	BOOL		RO	tx	Reading Valid
	0x02	BOOL		RO	tx	Overrange Exceeded
	0x03	BOOL		RO	tx	Underrange Exceeded

Subindex 0x01

Indicates whether the Value parameter contains a valid value within the specified accuracy or not.

Reading Valid	
0	Invalid
1	Valid

Subindex 0x02

Indicates whether the Value parameter contains a value in over range.

Reading Valid	
0	No Overrange Exceeded
1	Overrange Exceeded

Subindex 0x03

Indicates whether the Value parameter contains a value in under range.

Reading Valid	
0	No Underrange Exceeded
1	Underrange Exceeded

4.4.3 Input Common

Index	SI	DataType	NV	Access	PM	Name
6010	0x0E	BOOL		RO	tx	TxPdoState
	0x11	REAL		RO	tx	Sensor Value

Subindex 0x0E

Is set if the device is not in Safe State (value (I 0x6nn0, SI 0x11) = valid)

TxPdoState	
0	Invalid
1	Valid

Subindex 0x11

The corrected, converted, calibrated final analog input value of the sensor.

4.4.4 Input Piezo

Index	SI	DataType	NV	Access	PM	Name
6012	0x01	BOOL		RO	tx	Reading Valid
	0x02	BOOL		RO	tx	Ovrange Exceeded
	0x03	BOOL		RO	tx	Underrange Exceeded

Subindex 0x01

Indicates whether the Value parameter contains a valid value within the specified accuracy or not.

Reading Valid	
0	Invalid
1	Valid

Subindex 0x02

Indicates whether the Value parameter contains a value in over range.

Reading Valid	
0	No Ovrange Exceeded
1	Ovrange Exceeded

Subindex 0x03

Indicates whether the Value parameter contains a value in under range.

Reading Valid	
0	No Underrange Exceeded
1	Underrange Exceeded

4.4.5 Input Trip Point 1

Index	SI	DataType	NV	Access	PM	Name
600E	0x01	BOOL		RO	tx	Status High Trip
	0x02	BOOL		RO	tx	Status Low Trip

Subindex 0x01

Status High Trip	
0	High Trip not assert
1	High Trip assert

Subindex 0x02

Status Low Trip	
0	Low Trip not assert
1	Low Trip assert

4.4.6 Input Trip Point 2

Index	SI	Data Type	NV	Access	PM	Name
600F	0x01	BOOL		RO	tx	Status High Trip
	0x02	BOOL		RO	tx	Status Low Trip

Subindex 0x01

Status High Trip	
0	High Trip not assert
1	High Trip assert

Subindex 0x02

Status Low Trip	
0	Low Trip not assert
1	Low Trip assert

4.5 Configuration Area (0x8000...0x8FFF)

4.5.1 Configuration Capacitance Diaphragm

Index	SI	Data Type	NV	Access	PM	Name
8001	0x12	REAL	x	RW		Offset Customer Specific

Subindex 0x12

Customer-specified Offset which shall be added to the Value parameter of the Analog Input Sensor instance.

The Offset Customer Specified parameter is a value added from a Zero Adjust Service to the reported pressure value.

Value shall be calculated as:

$$\text{Value}^{\text{)}} = \text{Reported pressure value} + \text{AZO}^{\text{**)}} + \text{OCS}^{\text{***)}})$$

⁾ Value (I: 0x6000, SI: 0x11)

^{**)} Accumulated Zero Offset (I: 0x9000, SI: 0x01)

^{***)} Offset Customer Specified (I: 0x8001, SI: 0x12)

4.5.2 Configuration Trip Point

The High Trip Point is calculated by:

$$\text{High Trip Point} = \text{Value}^{\text{)}} \times \text{Percentage}^{\text{**)}})$$

⁾ Value from Piezo Sensor (I: 0x6010, SI: 0x11)

^{**)} Percentage High Trip Source (I: 0x800E/F, SI: 0x13)


In this case, the High Trip Point value is automatically updated by the device itself. Any user-written value to the parameter High Trip will be refused with an abort code.



Usage of High Trip Point is only recommended for measurement range 1000 Torr or 1100 mbar.

The Low Trip Point is a fixed value:

The value defined in Low Trip Point Limit is compared with the pressure value referenced by the Source Index parameter.

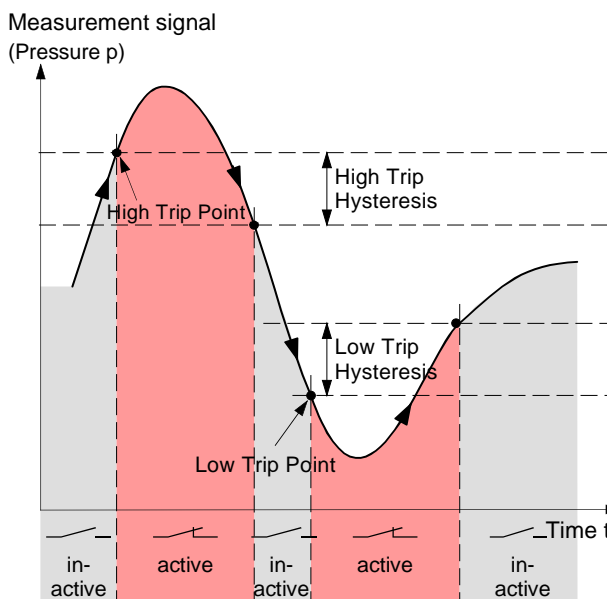

4.5.3 Configuration Trip Point 1

Calculating the High Trip Point and Low Trip Point → chapter 4.5.2.

Index	SI	DataType	NV	Access	PM	Name
800E	0x01	BOOL	x	RW		High Trip Enable
	0x02	BOOL	x	RW		Low Trip Enable
	0x11	REAL	x	RW		High Trip Point Limit
	0x13	REAL	x	RW		Percentage High Trip Source
	0x14	REAL	x	RW		Low Trip Point Limit
	0x17	REAL	x	RW		High Trip Hysteresis
	0x18	REAL	x	RW		Low Trip Hysteresis
	0x1A	UDINT	x	RO		Source Index

Subindex 0x01

High Trip Point	
0	Disable
1	Enable

Subindex 0x02

Low Trip Point	
0	Disable
1	Enable

Subindex 0x11

High Trip Point Limit: High limit to trigger trip point condition if Input Value (I 0x900E, SI 0x01) is above this limit.

Subindex 0x13

Percentage of High Trip Source: Percentage of Piezo Sensor Value (I 0x6010, SI 0x11) in [%].

Subindex 0x14

Low Trip Point Limit: Low limit to trigger trip point condition if Input Value (I 0x900E, SI 0x01) is below this limit.

Subindex 0x17

High Trip Hysteresis: Hysteresis value for High Trip Point.

Subindex 0x18 Low Trip Hysteresis: Hysteresis value for Low Trip Point.

Subindex 0x1A Object index of active source of (I 0x900E SI 0x01) Input Value.

Source Index	
Bit 16...31	Index
Bit 08...15	Subindex
Bit 00...07	Reserved

4.5.4 Configuration Trip Point 2

Calculating the High Trip Point and Low Trip Point → chapter 4.5.2.

Index	SI	Data Type	NV	Access	PM	Name
800F	0x01	BOOL	x	RW		High Trip Enable
	0x02	BOOL	x	RW		Low Trip Enable
	0x11	REAL	x	RW		High Trip Point Limit
	0x13	REAL	x	RW		Percentage High Trip Source
	0x14	REAL	x	RW		Low Trip Point Limit
	0x17	REAL	x	RW		High Trip Hysteresis
	0x18	REAL	x	RW		Low Trip Hysteresis
	0x1A	UDINT	x	RW		Source Index

Subindex 0x01

High Trip Point	
0	Disable
1	Enable

Subindex 0x02

Low Trip Point	
0	Disable
1	Enable

Subindex 0x11

High Trip Point limit: High limit to trigger trip point condition if Input Value (I 0x900F, SI 0x01) is above this limit.

Subindex 0x13

Percentage of High Trip Source: Percentage of Piezo Sensor Value (I 0x60010, SI 0x11) in [%].

Subindex 0x14

Low Trip Point Limit: Low limit to trigger trip point condition if Input Value (I 0x900F, SI 0x01) is below this limit.

Subindex 0x17

High Trip Hysteresis: Hysteresis value for High Trip Point.

Subindex 0x18

Low Trip Hysteresis: Hysteresis value for Low Trip Point.

Subindex 0x1A


Object index of active source of (I 0x900F SI 0x01) Input Value.

Source Index	
Bit 16...31	Index
Bit 08...15	Subindex
Bit 00...07	Reserved

4.6 Information Area (0x9000...0x9FFF)

Highest / lowest measurement value

The Information Data object defines the input process data.

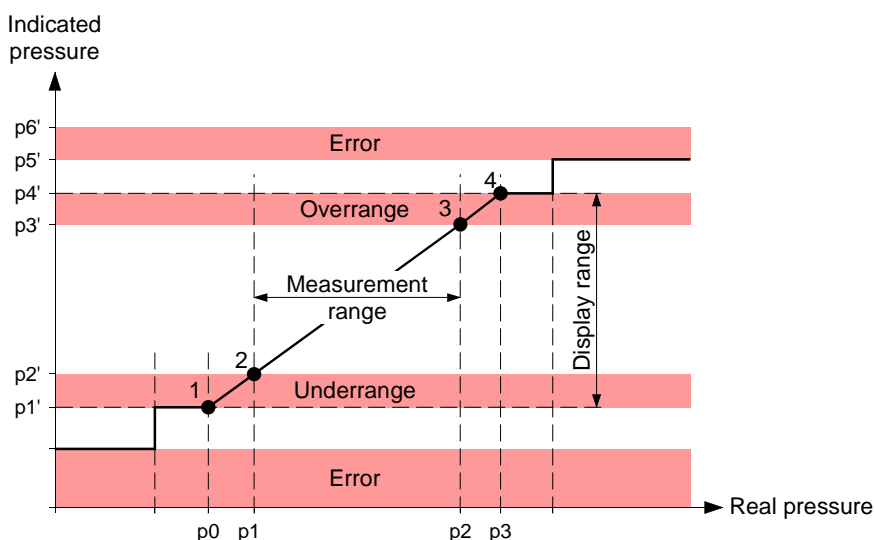

The "measurement range" is the range between minimum and maximum pressure, where the reading of the gauge is within the specified measurement uncertainty limits.

The "valid measurement information range" (display range) is the complete pressure range where the gauge gives an indication (measurement signal). The valid measurement information range (display range) consists of underrange, measurement range and overrange.

According to these definitions, 4 points are defined:

- 1 Lowest informational measurement value
- 2 Lowest precision measurement value
- 3 Highest precision measurement value
- 4 Highest informational measurement value

4.6.1 Information Common Capacitance Diaphragm

Index	SI	DataType	NV	Access	PM	Name
9000	0x01	REAL	x	RO		Accumulated Zero Offset
	0x02	REAL	x	RO		Highest Informational Measurement Value
	0x03	REAL	x	RO		Highest Precision Measurement Value
	0x04	REAL	x	RO		Lowest Precision Measurement Value
	0x05	REAL	x	RO		Lowest Informational Measurement Value

Subindex 0x01

Accumulated Zero Offset: An amount added prior to Gain to derive Value. Result of Zero Adjust Command (accumulated value).

Subindex 0x02

Highest Informational Measurement Value: Highest value that the gauge can measure without a specified accuracy.

Subindex 0x03

Highest Precision Measurement Value: Highest valid value at which the gauge is specified with an accuracy value. Above that value, the parameter Reading Valid is set to invalid.

Subindex 0x04

Lowest Precision Measurement Value: Lowest valid value at which the gauge is specified with an accuracy value. Below that value, the parameter Reading Valid is set to invalid.

Subindex 0x05

Lowest Informational Measurement Value: Lowest value that the gauge can measure without a specified accuracy.

4.6.2 Information Capacitance Diaphragm

Index	SI	Data Type	NV	Access	PM	Name
9001	0x01	UINT		RO		Sensor Warning
	0x02	UINT		RO		Sensor Error

Subindex 0x01

Sensor Warnings	
Bit 0	Not at temperature
Bit 1...8	0
Bit 9	Electronics Warning
Bit 10...13	0
Bit 14	Low Warning Exception
Bit 15	High Warning Exception

Subindex 0x02

Sensor Errors	
Bit 0...8	0
Bit 9	Electronics Failure
Bit 10...13	0
Bit 14	Low Error Exception
Bit 15	High Error Exception

4.6.3 Information Common Piezo

Index	SI	Data Type	NV	Access	PM	Name
9010	0x01	REAL	x	RO		Accumulated Zero Offset
	0x02	REAL	x	RO		Highest Informational Measurement Value
	0x03	REAL	x	RO		Highest Precision Measurement Value
	0x04	REAL	x	RO		Lowest Precision Measurement Value
	0x05	REAL	x	RO		Lowest Informational Measurement Value

Subindex 0x01

Accumulated Zero Offset: An amount added prior to Gain to derive Value. Result of Zero Adjust Command (accumulated value).

Subindex 0x02

Highest Informational Measurement Value: Highest value that the gauge can measure without a specified accuracy.

Subindex 0x03

Highest Precision Measurement Value: Highest valid value at which the gauge is specified with an accuracy value. Above that value, the parameter Reading Valid is set to invalid.

Subindex 0x04

Lowest Precision Measurement Value: Lowest valid value at which the gauge is specified with an accuracy value. Below that value, the parameter Reading Valid is set to invalid.

Subindex 0x05

Lowest Informational Measurement Value: Lowest value that the gauge can measure without a specified accuracy.

4.6.4 Information Piezo

Index	SI	Data Type	NV	Access	PM	Name
9012	0x01	UINT		RO		Sensor Error
	0x02	UINT		RO		Sensor Error

Subindex 0x01

Sensor Warnings	
Bit 0...15	0

Subindex 0x02

Sensor Errors	
Bit 0...15	0

4.6.5 Information Trip Point 1 / 2

Index	SI	Data Type	NV	Access	PM	Name
900E	0x01	REAL		RO		Input Value Trip Point 1
900F	0x01	REAL		RO		Input Value Trip Point 2

Subindex 0x01 (900E)

Input Value Trip Point 1: Trip Point Input value as referenced by Source Index (I 0x800E, SI 0x0E).

Subindex 0x01 (900F)

Input Value Trip Point 2: 0 Trip Point Input value as referenced by Source Index (I 0x800F, SI 0x0E).

4.7 Device Area (0xF000...0xAFFF)

4.7.1 Semiconductor Device Profile

Index	SI	Data Type	NV	Access	PM	Name
F000	0x01	UINT		RO		Index Distance
	0x02	UINT		RO		Maximum Number of Modules

Subindex 0x01

Index Distance: Index offset between PDO entries of two consecutive modules (for ETG.5003 = 0x10), e.g. 0x6000, 0x6010.

Subindex 0x02

Number of Modules: CDGxxxD has always 2.

4.7.2 Module Profile List

Index	SI	Data Type	NV	Access	PM	Name
F010	0x01	UDINT		RO		Profile Number (Module 1)
	0x02	UDINT		RO		Profile Number (Module 2)

Subindex 0x01

Each sub-index lists the profile-number of the corresponding module.

Subindex 0x02

Each sub-index lists the profile-number of the corresponding module.

4.7.3 Exceptions

4.7.4 Active Exception Status

Index	SI	Data Type	NV	Access	PM	Name
F380		USINT		RO	tx	ActiveException Status

Active Exception Status

Active Exception Status	
Bit 0	Device Warning
Bit 1	Manufacturer Warning
Bit 2	Device Error
Bit 3	Manufacturer Error
Bit 4...7	0

4.7.5 Active Device Warning Details

The "active device warning details" parameter describes the warning state of the complete device.

Index	SI	Data Type	NV	Access	PM	Name
F381	0x01	UDINT		RO	tx	Active Device Warning Details
	0x02	UDINT		RO	tx	Active Device Warning Details
F382	0x01	UDINT		RO	tx	Active Manufacturer Warning Details
	0x02	UDINT		RO	tx	Active Manufacturer Warning Details

Subindex 0x01 (F381)

Active Device Warning Details (Index F381, Module 1)	
Bit 0	Not at temperature
Bit 1...8	0
Bit 9	Electronics warning
Bit 10...13	0
Bit 14	Low Warning Exception
Bit 15	High Warning Exception
Bit 16...31	0

Subindex 0x02 (F381)

Active Device Warning Details (Index F381, Module 2)	
Bit 0...31	0

Subindex 0x01 (F382)

Active Manufacturer Warning Details (Index F382, Module 1)	
Bit 0...31	0

Subindex 0x02 (F382)

Active Manufacturer Warning Details (Index F382, Module 2)	
Bit 0...31	0

4.7.6 Active Device Error Details

The "active device error details" parameter describes the error state of the complete device.

Index	SI	Data Type	NV	Access	PM	Name
F383	0x01	UDINT		RO	tx	Active Device Error Details
	0x02	UDINT		RO	tx	Active Device Error Details
F384	0x01	UDINT		RO	tx	Active Manufacturer Error Details
	0x02	UDINT		RO	tx	Active Manufacturer Error Details

Subindex 0x01 (F383)

Active Device Error Details (Index F383, Module 1)	
Bit 0...8	0
Bit 9	Electronics Failure
Bit 10...13	0
Bit 14	Low Error Exception
Bit 15	High Error Exception
Bit 16...31	0 (reserved)

Subindex 0x02 (F383)

Active Device Error Details (Index F383, Module 2)	
Bit 0...31	0

Subindex 0x01 (F384)

Active Manufacturer Error Details (Index F384, Module 1)	
Bit 0...31	0

Subindex 0x02 (F384)

Active Manufacturer Error Details (Index F384, Module 2)	
Bit 0...31	0

4.7.7 Active Global Device Warning Details

The "active device warning details" parameter describes the warning state of the complete device.

Index	SI	Data Type	NV	Access	PM	Name
F385	0x01	UDINT		RO	tx	Active Global Device Warning Details
F386	0x01	UDINT		RO	tx	Active Global Manufacturer Warning Details

Subindex 0x01 (F385)

Active Global Device Warning Details (Index F385)	
Bit 0...2	0
Bit 3	EEPROM exception
Bit 4...31	0

Subindex 0x01 (F386)

Active Global Manufacturer Warning Details (Index F386)	
Bit 0	Internal Communication Exception (between EtherCAT-Protocol and Device-Application)
Bit 1	Atmosphere Pressure out of Range Exception (only as Warning, 0 for Error)
Bit 2...31	0

4.7.8 Active Global Device Error Details

The "active device error details" parameter describes the error state of the complete device.

Index	SI	Data Type	NV	Access	PM	Name
F387	0x01	UDINT		RO	tx	Active Global Device Error Details
F388	0x01	UDINT		RO	tx	Active Global Manufacturer Error Details

Subindex 0x01 (F387)

Active Global Device Error Details (Index F387)	
Bit 0...2	0
Bit 3	EEPROM exception
Bit 4...31	0

Subindex 0x01 (F388)

Active Global Manufacturer Error Details (Index F388)	
Bit 0	Internal Communication Exception (between EtherCAT-Protocol and Device-Application)
Bit 1	Atmosphere Pressure out of Range Exception (only as Warning, 0 for Error)
Bit 2...31	0

4.7.9 Latched Device Warning Details

Index	SI	Data Type	NV	Access	PM	Name
F390		USINT		RO	tx	Latched Exceptions Status
F391	0x01	UDINT		RO	tx	Latched Device Warning Details
	0x02	UDINT		RO	tx	Latched Device Warning Details
F392	0x01	UDINT		RO	tx	Latched Manufacturer Warning Details
	0x02	UDINT		RO	tx	Latched Manufacturer Warning Details

Latched Exceptions Status

Latched version of 0xF380.

Subindex 0x01 (F391)

Latched Device Warning Details: Latched version of 0xF381:01.

Subindex 0x02 (F391)

Latched Device Warning Details: Latched version of 0xF381:02.

Subindex 0x01 (F392)

Latched Manufacturer Warning Details: Latched version of 0xF382:01.

Subindex 0x02 (F392)

Latched Manufacturer Warning Details: Latched version of 0xF382:02.

4.7.10 Latched Device Error Details

Index	SI	Data Type	NV	Access	PM	Name
F393	0x01	UDINT		RO	tx	Latched Device Error Details
	0x02	UDINT		RO	tx	Latched Device Error Details
F394	0x01	UDINT		RO	tx	Latched Manufacturer Error Details
	0x02	UDINT		RO	tx	Latched Manufacturer Error Details

Subindex 0x01 (F393) Latched Device Error Details: Latched version of 0xF383:01.

Subindex 0x02 (F393) Latched Device Error Details: Latched version of 0xF383:02.

Subindex 0x01 (F394) Latched Manufacturer Error Details: Latched version of 0xF384:01.

Subindex 0x02 (F394) Latched Manufacturer Error Details: Latched version of 0xF384:02.

4.7.11 Latched Global Device Warning Details

Index	SI	Data Type	NV	Access	PM	Name
F395	0x01	UDINT		RO	tx	Latched Global Device Warning Details
F396	0x01	UDINT		RO	tx	Latched Global Manufacturer Warning Details

Subindex 0x01 (F395) Latched Global Device Warning Details: Latched version of 0xF385:01.

Subindex 0x01 (F396) Latched Global Manufacturer Warning Details: Latched version of 0xF386:01.

4.7.12 Latched Global Device Error Details

Index	SI	Data Type	NV	Access	PM	Name
F397	0x01	UDINT		RO	tx	Latched Global Device Error Details
F398	0x01	UDINT		RO	tx	Latched Global Manufacturer Error Details

Subindex 0x01 (F397) Latched Global Device Error Details: Latched version of 0xF387:01.

Subindex 0x01 (F398) Latched Global Manufacturer Error Details: Latched version of 0xF388:01.

4.7.13 Device Warning Mask

Index	SI	Data Type	NV	Access	PM	Name
F3A1	0x01	UDINT	x	RW		Device Warning Mask
	0x02	UDINT	x	RW		Device Warning Mask
F3A2	0x01	UDINT	x	RW		Manufacturer Warning Mask
	0x02	UDINT	x	RW		Manufacturer Warning Mask

Subindex 0x01 (F3A1) Device Warning Mask: Mask bits for 0xF381:01 and 0xF391:01.

Subindex 0x02 (F3A1) Device Warning Mask: Mask bits for 0xF381:02 and 0xF391:02.

Subindex 0x01 (F3A2) Manufacturer Warning Mask: Mask bits for 0xF382:01 and 0xF392:01.

Subindex 0x02 (F3A2) Manufacturer Warning Mask: Mask bits for 0xF382:02 and 0xF392:02.

4.7.14 Device Error Mask

Index	SI	Data Type	NV	Access	PM	Name
F3A3	0x01	UDINT	x	RW		Device Error Mask
	0x02	UDINT	x	RW		Device Error Mask
F3A4	0x01	UDINT	x	RW		Manufacturer Error Mask
	0x02	UDINT	x	RW		Manufacturer Error Mask

Subindex 0x01 (F3A3)

Device Error Mask: Mask bits for 0xF383:01 and 0xF393:01.

Subindex 0x02 (F3A3)

Device Error Mask: Mask bits for 0xF383:02 and 0xF393:02.

Subindex 0x01 (F3A4)

Manufacturer Error Mask: Mask bits for 0xF384:01 and 0xF394:01.

Subindex 0x02 (F3A4)

Manufacturer Error Mask: Mask bits for 0xF384:02 and 0xF394:02.

4.7.15 Global Device Warning Mask

Index	SI	Data Type	NV	Access	PM	Name
F3A5	0x01	UDINT	x	RW		Global Device Warning Mask
F3A6	0x01	UDINT	x	RW		Global Manufacturer Warning Mask

Subindex 0x01 (F3A5)

Global Device Warning Mask: Mask bits for 0xF385:01 and 0xF395:01.

Subindex 0x01 (F3A6)

Global Manufacturer Warning Mask: Mask bits for 0xF386:01 and 0xF396:01.

4.7.16 Global Device Error Mask

Index	SI	Data Type	NV	Access	PM	Name
F3A7	0x01	UDINT	x	RW		Global Device Error Mask
F3A8	0x01	UDINT	x	RW		Global Manufacturer Error Mask

Subindex 0x01 (F3A7)

Global Device Error Mask: Mask bits for 0xF387:01 and 0xF397:01.

Subindex 0x01 (F3A8)

Global Manufacturer Error Mask: Mask bits for 0xF388:01 and 0xF398:01.

4.7.17 Manufacturer Information Device

Index	SI	Data Type	NV	Access	PM	Name
F500		V_STRING		RO		Manufacturer's Model Number
F501		V_STRING		RO		Device Configuration

4.7.18 Trip Point Output All

Index	SI	Data Type	NV	Access	PM	Name
F641	0x01	UDINT		RO	tx	Trip Point Output All Instance

Subindex 0x01

Status of Trip Point instances.

Trip Point Output All Instance	
Bit 0	Status High Trip (I 0x600E, SI 0x01)
Bit 1	Status Low Trip (I 0x600E S,I 0x02)
Bit 2	Status High Trip (I 0x600F, SI 0x01)
Bit 3	Status Low Trip (I 0x600F, SI 0x02)
Bit 4...31	not used = 0

4.7.19 Input Latch Local Timestamp

Index	SI	Data Type	NV	Access	PM	Name
F6F0	0x01	UDINT		RO	tx	Input Latch Local Timestamp. Mandatory if device has inputs (TxPDOs)
	0x02	UDINT		RO	tx	Input Latch Local Timestamp. Mandatory if device has inputs (TxPDOs)

Subindex 0x01

Local controller time corresponding to the input latch time in microseconds. It starts at zero on device power-up. Mandatory if device has inputs. If device has no inputs defined, this corresponds the time immediately prior to writing to input SM.

Subindex 0x02

Local controller time corresponding to the input latch time in microseconds. It starts at zero on device power-up. Mandatory if device has inputs. If device has no inputs defined, this corresponds the time immediately prior to writing to input SM.

4.7.20 Configure Device

Index	SI	Data Type	NV	Access	PM	Name
F840	0x01	UDINT	x	RW		Data Units
	0x03	Enum	x	RW		Data Units Enum

Subindex 0x01

Unit of the Value of the Analog Input Sensor Instance and all related parameters.

Trip Point Output All Instance	
0x00220000	Pascal
0xFD4E0000	mbar
0x00A10000	Torr

If this value is changed, also Subindex 3 will change the value accordingly.

Subindex 0x03

Data Unit for Input Sensor as Enum to have a list of possible values.

Data Units	
0x01(Pa)	Pascal
0x04(mBar)	mbar
0x05(Torr)	Torr

If this value is changed, also Subindex 1 will change the value accordingly.

4.7.21 Information Device

Index	SI	Data Type	NV	Access	PM	Name
F940	0x01	UDINT		RO		Measurement Principle
	0x02	BYTE		RO		Number of Sensors
	0x04	V_STRING	x	RO		SW Version VPG PCB
F9F0		V_STRING		RO		Manufacturer Serial Number
F9F1	0x01	UDINT		RO		CDP Functional Generation Number
F9F2	0x01	UDINT		RO		SDP Functional Generation Number (Module 1)
	0x02	UDINT		RO		SDP Functional Generation Number (Module 2)
F9F3		V_STRING		RO		Vendor Name
F9F4	0x01	V_STRING		RO		Semiconductor SDP Device Name (Module 1)
	0x02	V_STRING		RO		Semiconductor SDP Device Name (Module 2)
F9F5	0x01	USINT		RW	Rx Tx	Output Identifier (Module 1)
	0x02	USINT		RW	Rx Tx	Output Identifier (Module 2)
F9F6		UDINT		RO		Time since power on
F9F7		UDINT	x	RO		Total time powered
F9F8		UDINT		RO		Firmware Update Functional Generation Number

Subindex 0x01 (F940)

Measurement principle assigned to the object instance.

The most significant nibble of the parameter represents the sensor type of the first Module, the second most significant nibble of the parameter represents the sensor type of the second Module, and so forth.

Measurement Principle (Index F940)	
1	Capacitance Manometer
2	Piezo
3	Heat Transfer
4	Cold Cathode
5	Hot Cathode

Subindex 0x02 (F940)

Number of Sensors (Index F940): The number of sensors implemented on the device.

Subindex 0x04 (F940)

If the device consists out of several software portions this parameter should be used.

Using standard a.b.c.d format to describe a version:

SW Version VPG PCB (Index F940)	
a	Mayor revision
b	Minor revision
c	Development revision
d	Vendor specific
i.e. 1.0.1.2	

4.7.22 Command Zero Adjust

Execution of this command will start a Zero Adjust operation.



The zeroing function is locked in order for operating errors to be prevented, therefore see the operation instructions of the vacuum gauges, refer to the appropriate documents (→ [1] ... [8]).

Index	SI	DataType	NV	Access	PM	Name
FB40	0x01	V_STRING(6)		RW		Command
	0x02	BYTE		RO		Status
	0x03	V_STRING(3)		RO		Response

Subindex 0x01

Command	
Byte 0	0: Zero adjust with no offset
Byte 1	Index of the Sub Sensor Instance (1)
Byte 2...5	Offset value (Data format: REAL, always 0)

Subindex 0x02

Status (supported values)	
0	Last command completed, no errors, no reply available
1	Last command completed, no errors, reply available
2	Last command completed, errors present, no reply available
3	Last command completed, errors present, reply available
255	Command is executing

Subindex 0x03

Response	
Byte 0	See Subindex 0x02
Byte 1	Unused
Byte 2	0: Zeroing successful 1: Zeroing failed; out-of-range 2: Zeroing failed; cumulative out-of-range 3: Zeroing failed: measurement invalid 254: No previous Zero Adjust command issued

4.7.23 Full Scale Adjust

Execution of this command will start a Full Scale Adjust operation.

Index	SI	DataType	NV	Access	PM	Name
FB41	0x01	V_STRING(6)		RW		Command
	0x02	BYTE		RO		Status
	0x03	V_STRING(3)		RO		Response

Subindex 0x01

Command	
Byte 0	0: Full Scale Adjust
Byte 1	2: Index of the Sub Sensor Instance (always 2)
Byte 2...5	0: Full Scale value (Data format: REAL, always 0)

Subindex 0x02

Status (supported values)	
0	Last command completed, no errors, no reply available
1	Last command completed, no errors, reply available
2	Last command completed, errors present, no reply available
3	Last command completed, errors present, reply available
255	Command is executing

Subindex 0x03

Response	
Byte 0	See Subindex 0x02
Byte 1	Unused
Byte 2	0: Full Scale Adjust successful 1: Full Scale Adjust failed: out-of-range 254: No previous Full Scale Adjust command issued

4.7.24 Device Reset Command

Execution of this command causes the device to emulate a complete power cycle. This includes an ESC reset.



As consequence of an ESC reset all following devices are disconnected from the network.

There are two versions of this command:

- Standard reset (as described above)
- Factory reset (as described above, but additionally, all parameters are restored to as-shipped defaults).

Index	SI	Data Type	NV	Access	PM	Name
FBF0	0x01	V_STRING(6)		RW		Command
	0x02	BYTE		RO		Status
	0x03	V_STRING(2)		RO		Response

Subindex 0x01

A device reset is initiated when the following byte sequence is sent.

Command	
Byte 0	0x74
Byte 1	0x65
Byte 2	0x73
Byte 3	0x65
Byte 4	0x72
Byte 5	0x00 = Standard reset

Subindex 0x02

Status (supported values)	
0	Reserved
1	Reserved
2	Last command completed, error, no response
3	Reserved
255	Command is executing

Subindex 0x03

Response	
Byte 0	See Subindex 0x02
Byte 1	not used = 0x00

4.7.25 Exception Reset Command

Execution of this command clears the latched exceptions.

Index	SI	Data Type	NV	Access	PM	Name
FBF1	0x01	V_STRING(5)		RW		Command
	0x02	BYTE		RO		Status
	0x03	V_STRING(2)		RO		Response

Subindex 0x01

A device reset is initiated when the following byte sequence is sent.

Command	
Byte 0	0x74
Byte 1	0x65
Byte 2	0x73
Byte 3	0x65
Byte 4	0x72

Subindex 0x02

Status (supported values)	
0	Last command completed, no error, no response
1	Reserved
2	Last command completed, error, no response
3	Reserved
255	Command is executing

Subindex 0x03

Response	
Byte 0	See Subindex 0x02
Byte 1	not used = 0x00

4.7.26 Store Parameters Command

Execution of this command will store all parameters to non-volatile memory. If a device automatically saves all non-volatile parameters at the time they are set, this command will not take any action.

Index	SI	DataType	NV	Access	PM	Name
FBF2	0x01	V_STRING(4)		RW		Command
	0x02	BYTE		RO		Status
	0x03	V_STRING(2)		RO		Response

Subindex 0x01

A device reset is initiated when the following byte sequence is sent.

Read:

Command: Read	
Byte 0	0x01 = slave saves the non-volatile parameters when writing 0xFBf2:01 with 0x65766173
Byte 1	not used = 0x00
Byte 2	not used = 0x00
Byte 3	not used = 0x00

Write:

Command: Write	
Byte 0	0x73
Byte 1	0x61
Byte 2	0x76
Byte 3	0x65

Subindex 0x02

Status (supported values)	
0	Last command completed, no error, no response
1	Reserved
2	Last command completed, error, no response
3	Reserved
255	Command is executing

Subindex 0x03

Response	
Byte 0	See Subindex 0x02
Byte 1	not used = 0x00

4.7.27 Calculate Checksum Command

Execution of this command will calculate a checksum for all writable, non-volatile parameters as currently stored in non-volatile memory.

Index	SI	Data Type	NV	Access	PM	Name
FBF3	0x01	V_STRING(4)		RW		Command
	0x02	BYTE		RO		Status
	0x03	V_STRING(6)		RO		Response

Subindex 0x01

A device reset is initiated when the following byte sequence is sent.

Read

Command: Read	
Byte 0	Bit 0 = 1: non-volatile parameters supported Bit 1 = 1: CRC-32 Bit 2..7 = 0: not used
Byte 1	not used = 0x00
Byte 2	not used = 0x00
Byte 3	not used = 0x00

Write

Command: Write	
Byte 0	Bit 0 = 1: use default checksum algorithm of the slave Bit 1 = 1: CRC-32 Bit 2..7 = 0: not used
Byte 1	not used = 0x00
Byte 2	not used = 0x00
Byte 3	not used = 0x00

Subindex 0x02

Status (supported values)	
0	Last command completed, no error, no response
1	Reserved
2	Last command completed, error, no response
3	Reserved
255	Command is executing

Subindex 0x03

Response	
Byte 0	See Subindex 0x02
Byte 1	not used = 0
Byte 2	Checksum return value, Byte 0
Byte 3	Checksum return value, Byte 1
Byte 4	Checksum return value, Byte 2
Byte 5	Checksum return value, Byte 3

4.7.28 Load Parameters Command

Execution of this command will load all parameters from non-volatile memory.

Index	SI	DataType	NV	Access	PM	Name
FBF4	0x01	V_STRING(4)		RW		Command
	0x02	BYTE		RO		Status
	0x03	V_STRING(2)		RO		Response

Subindex 0x01

A device reset is initiated when the following byte sequence is sent.

Read:

Command: Read	
Byte 0	0x01 = slave loads the non-volatile parameters when writing 0xFBF4:01 with 0x64616F6C
Byte 1	not used = 0x00
Byte 2	not used = 0x00
Byte 3	not used = 0x00

Write:

Command: Write	
Byte 0	0x6C
Byte 1	0x6F
Byte 2	0x61
Byte 3	0x64

Subindex 0x02

Status (supported values)	
0	Last command completed, no error, no response
1	Reserved
2	Last command completed, error, no response
3	Reserved
255	Command is executing

Subindex 0x03

Response	
Byte 0	See Subindex 0x02
Byte 1	not used = 0x00

5 Object Structure CDG045Dhs, CDG100Dhs, CDG160Dhs, CDG200Dhs

This chapter describes the CANopen over EtherCAT (CoE) Object Dictionary.

5.1 Object Dictionary structure

The objects in the CoE Object Dictionary can be accessed with SDO services, and many of the dictionary objects can be mapped for cyclic communication in PDO's. Each object is addressed using a 16-bit index and an 8-bit subindex.

The following table presents the overall layout of the standard Object Dictionary.

Index (hex.)	Object dictionary area	
1000 – 1FFF	Communication profile area	
2000 – 5FFF	Manufacturer-specific profile area	
6000 – 6FFF	Profile Specific Area	
7000 – 7FFF		Input area
8000 – 8FFF		Output area
9000 – 9FFF		Configuration area
A000 – AFFF		Information area
B000 – BFFF		Diagnosis area
C000 – CFFF		Service Transfer area
D000 – DFFF		Reserved area
E000 – EFFF		Device area

Explanations for the abbreviations in the columns of the tables are given below:

Abbr.	Description
Access	SDO read/write access <ul style="list-style-type: none"> RO: object can only be read by the SDO service RW: object can be both read and written by the SDO service
CoE	CAN application protocol over EtherCAT
Index	Object Index (hex.) (address of an object)
NV	Nonvolatile; attribute value is maintained through power cycles
Object	Abstract representation of a particular component within a device, which consists of data, parameters, and methods.
PDO	Process Data Object. Structure described by mapping parameters containing one or several process data entities.
PM	PDO mapping <ul style="list-style-type: none"> Rx: object can be mapped into an Rx PDO Tx : object can be mapped into a Tx PDO
RxPDO	Receive PDO. A Process Data Object received by an EtherCAT slave.
SDO	Service Data Objects. CoE asynchronous mailbox communications where all objects in the Object Dictionary can be read and written.
SI	Subindex (hex.) (sub-address of an object)
Type	Data Type <ul style="list-style-type: none"> BOOL, BIT = 1 bit. Boolean (0 = false, 1 = true) USINT, BYTE = 8 bit. Unsigned Byte UINT = 16 bit. Unsigned integer value UDINT = 32 bit. Unsigned integer value ULINT = 64 bit. Unsigned integer value REAL = 32 bit. Floating point V_STRING = 8xn bit. Visible string (1 byte for character)
TxPDO	Transmit PDO. A Process Data Object sent from an EtherCAT slave.

5.2 Communication Profile Objects (0x1000...0x1FFF)

The objects of the communication profile describe the basic EtherCAT properties of the CDGxxxD and are common to all EtherCAT slaves using the CoE communication protocol. The objects are described in following table:

Index	SI	DataType	NV	Access	PM	Name
1000		UDINT		RO		Device Type
1008		V_STRING		RO		Manufacturer Device name
1009		V_STRING		RO		Manufacturer Hardware Version
100A		V_STRING		RO		Manufacturer Software Version
100B		V_STRING		RO		Manufacturer Bootloader Version
1010	0x01	UDINT		RW		Store Parameters Read: Bit 0 = 1: slave saves the backup entries when writing 0x1010:01 with 0x65766173 Bit 1-31 = 0 Write: With the value 0x65766173 the backup entries will be stored to non-volatile memory of the slave
1011	0x01	UDINT		RW		Restore Default Parameters Read: Bit 0 = 1: slave supports the restoring of backup entries with the default values when writing 0x1011:01 with 0x64616F6C Bit 1-31 = 0 Write: With the value 0x64616F6C the backup entries will be restored with the default values
1018				RO		Identity Object
	0x01	UDINT		RO		Vendor ID
	0x02	UDINT		RO		Product Code
	0x03	UDINT		RO		Revision Number
	0x04	UDINT		RO		Serial Number
10F8		ULINT		RO		Timestamp Object

5.2.1 Process Data Objects (PDO's)

CDGxxxD gauges only: They consist of one vacuum pressure sensor with an additional sensor measuring the ambient pressure (ATM).

For each sensor module a default mapping is configured.

Or to meet other requirements the TxPDO's 1A01, 1A03 or 1BFF and the RxPDO 1601 are designated for user mapping. These PDO's do not have default values and can be set up by the PDO configuration.

RxPDO's

Index	SI	DataType	NV	Access	PM	Name
1600		PM		RW		RxPDO Receive PDO Mapping,
1601		PM		RW		RxPDO Receive PDO Mapping, User Mapping

TxPDO's

Index	SI	Data Type	NV	Access	PM	Name
1A00		PM		RW		TxPDO Transmit PDO Mapping
	0x01	BIT				Reading Valid (Module 1)
	0x02	BIT				Overrange Exceeded (Module 1)
	0x03	BIT				Underrange Exceeded (Module 1)
	0x04	BIT				Padding Bits 1 (5 bit)
	0x05	REAL				Sensor Value (Module 1)
1A01		PM		RW		TxPDO Transmit PDO Mapping, User Mapping
1A02		PM		RW		TxPDO Transmit PDO Mapping
	0x01	BIT				Reading Valid (Module 2)
	0x02	BIT				Overrange Exceeded (Module 2)
	0x03	BIT				Underrange Exceeded (Module 2)
	0x04	BIT				Padding Bits 1 (5 bit)
	0x05	REAL				Sensor Value (Module 2)
1A03		PM		RW		TxPDO Transmit PDO Mapping, User Mapping
1BFE		PM		RW		Transmit PDO Mapping
	0x01	BYTE				Active Exception Status
	0x02	UDINT				Trip Point Output All Instance
1BFF		PM		RW		Transmit PDO Mapping User Mapping
1C00	0x01 0x02 0x03 0x04	BYTE		RW		Sync Manager Type
1C12 / 1C13	0x01 0x02 0x03 0x04	UINT		RW		Sync Manager PDO Assignment
1C32 / 1C33	0x01 - 0x20			RW		Sync Manager Parameter

5.3 Manufacturer-specific Profile Objects (0x2000...0x5FFF)

The manufacturer-specific profile objects contain the manufacturer's model number and device configuration data, status and diagnostic data. The objects are described in the following tables.

5.3.1 Manufacturer Status

Index	SI	Data Type	NV	Access	PM	Name
2000	0x01	BYTE		RO		Status

Subindex 0x01

Alarm and Warning State of Module 1	
Bit 0	High Alarm Exception (0 = cleared, 1 = set)
Bit 1	Low Alarm Exception (0 = cleared, 1 = set)
Bit 2	High Warning Exception (0 = cleared, 1 = set)
Bit 3	Low Warning Exception (0 = cleared, 1 = set)
Bit 4...7	0

5.3.2 Manufacturer Configuration (Module 1)

Index	SI	Data Type	NV	Access	PM	Name
4000	0x01	BYTE		RW		Safe State
	0x02	REAL		RW		Safe Value
	0x03	BOOL		RW		Alarm Enable
	0x04	BOOL		RW		Warning Enable
	0x05	REAL		RW		Alarm Trip Point High
	0x06	REAL		RW		Alarm Trip Point Low
	0x07	REAL		RW		Alarm Hysteresis
	0x08	REAL		RW		Warning Trip Point High
	0x09	REAL		RW		Warning Trip Point Low
	0x0A	REAL		RW		Warning Hysteresis

Subindex 0x01

Specifies the behavior for the value for States other than Valid.

Safe State	
0	Zero
1	Full Scale
2	Hold last value
3	Use safe value

Subindex 0x02

Safe Value: The value to be used for Safe State = Safe Value.

Subindex 0x03

Alarm Enable: Enables the setting of the Alarm Status Bits.

Subindex 0x04

Warning Enable: Enables the setting of the Warning Status Bits.

Subindex 0x05

Alarm Trip Point High: Determines the value above which an Alarm Condition will occur.

Subindex 0x06

Alarm Trip Point Low: Determines the value below which an Alarm Condition will occur.

Subindex 0x07

Alarm Hysteresis: Determines the amount by which the value must recover to clear an Alarm Condition.

Subindex 0x08

Warning Trip Point High: Determines the value above which a Warning Condition will occur.

Subindex 0x09

Warning Trip Point Low: Determines the value below which a Warning Condition will occur.

Subindex 0x0A

Warning Hysteresis: Determines the amount by which the value must recover to clear a Warning Condition.

5.3.3 Manufacturer Configuration (Module 2)

Index	SI	Data Type	NV	Access	PM	Name
4010	0x01	BYTE		RW		Safe State
	0x02	REAL		RW		Safe Value

Subindex 0x01

Specifies the behavior for the Value for states other than Valid.

Safe State	
0	Zero
1	Full Scale
2	Hold last value
3	Use safe value

Subindex 0x02

Safe Value: The value to be used for Safe State = Safe Value.

5.4 Input Area (0x6000...0x6FFF)

5.4.1 Input Common

Index	SI	Data Type	NV	Access	PM	Name
6000	0x0E	BOOL		RO	tx	TxPdoState
	0x11	REAL		RO	tx	Sensor Value

Subindex 0x0E

Is set if the device is not in Safe State (value (I 0x6nn0, SI 0x11) = valid)

TxPdoState	
0	Invalid
1	Valid

Subindex 0x11

The corrected, converted, calibrated final analog input value of the sensor.

5.4.2 Input Capacitance Diaphragm

Index	SI	Data Type	NV	Access	PM	Name
6001	0x01	BOOL		RO	tx	Reading Valid
	0x02	BOOL		RO	tx	Overrange Exceeded
	0x03	BOOL		RO	tx	Underrange Exceeded

Subindex 0x01

Indicates whether the Value parameter contains a valid value within the specified accuracy or not.

Reading Valid	
0	Invalid
1	Valid

Subindex 0x02

Indicates whether the Value parameter contains a value in over range.

Reading Valid	
0	No Overrange Exceeded
1	Overrange Exceeded

Subindex 0x03

Indicates whether the Value parameter contains a value in under range.

Reading Valid	
0	No Underrange Exceeded
1	Underrange Exceeded

5.4.3 Input Common

Index	SI	DataType	NV	Access	PM	Name
6010	0x0E	BOOL		RO	tx	TxPdoState
	0x11	REAL		RO	tx	Sensor Value

Subindex 0x0E

Is set if the device is not in Safe State (value (I 0x6nn0, SI 0x11) = valid)

TxPdoState	
0	Invalid
1	Valid

Subindex 0x11

The corrected, converted, calibrated final analog input value of the sensor.

5.4.4 Input Piezo

Index	SI	DataType	NV	Access	PM	Name
6012	0x01	BOOL		RO	tx	Reading Valid
	0x02	BOOL		RO	tx	Ovrange Exceeded
	0x03	BOOL		RO	tx	Underrange Exceeded

Subindex 0x01

Indicates whether the Value parameter contains a valid value within the specified accuracy or not.

Reading Valid	
0	Invalid
1	Valid

Subindex 0x02

Indicates whether the Value parameter contains a value in over range.

Reading Valid	
0	No Ovrange Exceeded
1	Ovrange Exceeded

Subindex 0x03

Indicates whether the Value parameter contains a value in under range.

Reading Valid	
0	No Underrange Exceeded
1	Underrange Exceeded

5.4.5 Input Trip Point 1

Index	SI	DataType	NV	Access	PM	Name
600E	0x01	BOOL		RO	tx	Status High Trip
	0x02	BOOL		RO	tx	Status Low Trip

Subindex 0x01

Status High Trip	
0	High Trip not assert
1	High Trip assert

Subindex 0x02

Status Low Trip	
0	Low Trip not assert
1	Low Trip assert

5.4.6 Input Trip Point 2

Index	SI	Data Type	NV	Access	PM	Name
600E	0x01	BOOL		RO	tx	Status High Trip
	0x02	BOOL		RO	tx	Status Low Trip
600F	0x01	BOOL		RO	tx	Status High Trip
	0x02	BOOL		RO	tx	Status Low Trip

Subindex 0x01

Status High Trip	
0	High Trip not assert
1	High Trip assert

Subindex 0x02

Status Low Trip	
0	Low Trip not assert
1	Low Trip assert

5.5 Configuration Area (0x8000...0x8FFF)

5.5.1 Configuration Capacitance Diaphragm

Index	SI	Data Type	NV	Access	PM	Name
8001	0x12	REAL	x	RW		Offset Customer Specific

Subindex 0x12

Customer-specified Offset which shall be added to the Value parameter of the Analog Input Sensor instance.

The Offset Customer Specified parameter is a value added from a Zero Adjust Service to the reported pressure value.

Value shall be calculated as:

$$\text{Value}^{\text{)}} = \text{Reported pressure value} + \text{AZO}^{\text{**)}} + \text{OCS}^{\text{***)}})$$

⁾ Value (I: 0x6000, SI: 0x11)

^{**)} Accumulated Zero Offset (I: 0x9000, SI: 0x01)

^{***)} Offset Customer Specified (I: 0x8001, SI: 0x12)

5.5.2 Configuration Trip Point

The High Trip Point is calculated by:

$$\text{High Trip Point} = \text{Value}^{\text{)}} \times \text{Percentage}^{\text{**)}})$$

⁾ Value from Piezo Sensor (I: 0x6010, SI: 0x11)

^{**)} Percentage High Trip Source (I: 0x800E/F, SI: 0x13)


In this case, the High Trip Point value is automatically updated by the device itself. Any user-written value to the parameter High Trip will be refused with an abort code.



Usage of High Trip Point is only recommended for measurement range 1000 Torr or 1100 mbar.

The Low Trip Point is a fixed value:

The value defined in Low Trip Point Limit is compared with the pressure value referenced by the Source Index parameter.

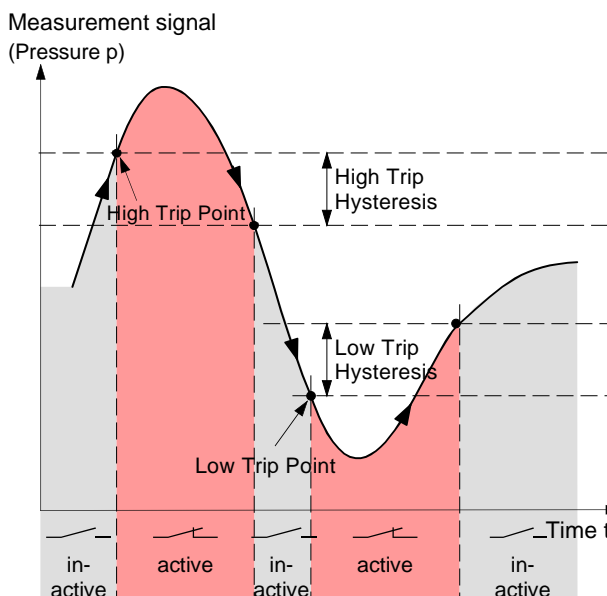

5.5.3 Configuration Trip Point 1

Calculating the High Trip Point and Low Trip Point → chapter 5.5.2.

Index	SI	Data Type	NV	Access	PM	Name
800E	0x01	BOOL	x	RW		High Trip Enable
	0x02	BOOL	x	RW		Low Trip Enable
	0x11	REAL	x	RW		High Trip Point Limit
	0x12	UDINT	x	RW		High Trip Source Index
	0x13	REAL	x	RW		Percentage High Trip Source
	0x14	REAL	x	RW		Low Trip Point Limit
	0x15	UDINT	x	RW		Low Trip Source Index
	0x16	REAL	x	RW		Percentage Low Trip Source
	0x17	REAL	x	RW		High Trip Hysteresis
	0x18	REAL	x	RW		Low Trip Hysteresis
	0x1A	UDINT	x	RO		Source Index

Subindex 0x01

High Trip Point	
0	Disable
1	Enable

Subindex 0x02

Low Trip Point	
0	Disable
1	Enable

Subindex 0x11

High Trip Point Limit: High limit to trigger trip point condition if Input Value (I 0x900E, SI 0x01) is above this limit.

Subindex 0x12

Object index of High Trip Point Value source. Index of High Trip Point Limit (I 0x800E, SI 0x11)

Bit 16...31: Index
 Bit 08...15: Subindex
 Bit 00...07: reserved

It is only possible to reference to "High Trip Point Limit" (I 0x800E, SI 0x11) or "Input Piezo Module 2" "Sensor Value" (I 0x6010, SI 0x11).

- Subindex 0x13 Percentage of High Trip Source: Percentage of Piezo Sensor Value (I 0x6010, SI 0x11) in [%].
- Subindex 0x14 Low Trip Point Limit: Low limit to trigger trip point condition if Input Value (I 0x900E, SI 0x01) is below this limit.
- Subindex 0x15 Object index of Low Trip Point Value source. Index of Low Trip Point Limit (I 0x800E, SI 0x14)
- Bit 16...31: Index
 Bit 08...15: Subindex
 Bit 00...07: reserved
- It is only possible to reference to "Low Trip Point Limit" (I 0x800E, SI 0x14) or "Input Piezo Module 2" "Sensor Value" (I 0x6010, SI 0x11).
- Subindex 0x16 Percentage of Value referenced by Low Trip Source Index in [%]. If Low Trip Source Index is I 0x800E, SI 0x14 this parameter is not used.
- Subindex 0x17 High Trip Hysteresis: Hysteresis value for High Trip Point.
- Subindex 0x18 Low Trip Hysteresis: Hysteresis value for Low Trip Point.
- Subindex 0x1A Object index of active source of (I 0x900E SI 0x01) Input Value.

Source Index	
Bit 16...31	Index
Bit 08...15	Subindex
Bit 00...07	Reserved

5.5.4 Configuration Trip Point 2

Calculating the High Trip Point and Low Trip Point → chapter 5.5.2.

Index	SI	Data Type	NV	Access	PM	Name
800F	0x01	BOOL	x	RW		High Trip Enable
	0x02	BOOL	x	RW		Low Trip Enable
	0x11	REAL	x	RW		High Trip Point Limit
	0x12	UDINT	x	RW		High Trip Source Index
	0x13	REAL	x	RW		Percentage High Trip Source
	0x14	REAL	x	RW		Low Trip Point Limit
	0x15	UDINT	x	RW		Low Trip Source Index
	0x16	REAL	x	RW		Percentage Low Trip Source
	0x17	REAL	x	RW		High Trip Hysteresis
	0x18	REAL	x	RW		Low Trip Hysteresis
	0x1A	UDINT	x	RW		Source Index

Subindex 0x01

High Trip Point	
0	Disable
1	Enable

Subindex 0x02

Low Trip Point	
0	Disable
1	Enable

Subindex 0x11

High Trip Point limit: High limit to trigger trip point condition if Input Value (I 0x900F, SI 0x01) is above this limit.

Subindex 0x12

Object index of High Trip Point Value source. Index of High Trip Point Limit (I 0x800F, SI 0x11)

Bit 16...31: Index
 Bit 08...15: Subindex
 Bit 00...07: reserved

It is only possible to reference to "High Trip Point Limit" (I 0x800F, SI 0x11) or "Input Piezo Module 2" "Sensor Value" (I 0x6010, SI 0x11).

Subindex 0x13

Percentage of High Trip Source: Percentage of Piezo Sensor Value (I 0x60010, SI 0x11) in [%].

Subindex 0x14

Low Trip Point Limit: Low limit to trigger trip point condition if Input Value (I 0x900F, SI 0x01) is below this limit.

Subindex 0x15

Object index of Low Trip Point Value source. Index of Low Trip Point Limit (I 0x800F, SI 0x14)

Bit 16...31: Index
 Bit 08...15: Subindex
 Bit 00...07: reserved

It is only possible to reference to "Low Trip Point Limit" (I 0x800F, SI 0x14) or "Input Piezo Module 2" "Sensor Value" (I 0x6010, SI 0x11).

Subindex 0x16

Percentage of Value referenced by Low Trip Source Index in [%]. If Low Trip Source Index is I 0x800F, SI 0x14 this parameter is not used.

Subindex 0x17

High Trip Hysteresis: Hysteresis value for High Trip Point.

Subindex 0x18

Low Trip Hysteresis: Hysteresis value for Low Trip Point.

Subindex 0x1A


Object index of active source of (I 0x900F SI 0x01) Input Value.

Source Index	
Bit 16...31	Index
Bit 08...15	Subindex
Bit 00...07	Reserved

5.6 Information Area (0x9000...0x9FFF)

The Information Data object defines the input process data.

Highest / lowest measurement value

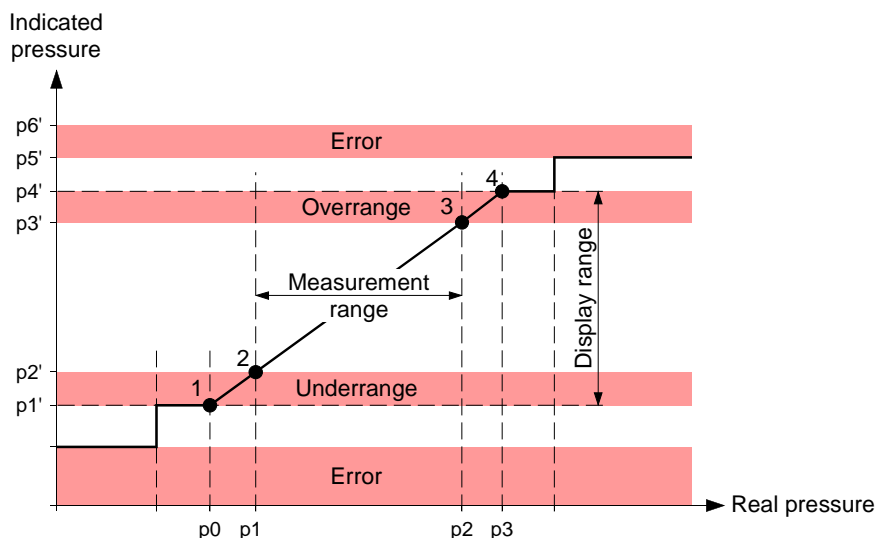

The "measurement range" is the range between minimum and maximum pressure, where the reading of the gauge is within the specified measurement uncertainty limits.

The "valid measurement information range" (display range) is the complete pressure range where the gauge gives an indication (measurement signal). The valid measurement information range (display range) consists of underrange, measurement range and overrange.

According to these definitions, 4 points are defined:

- 1 Lowest informational measurement value
- 2 Lowest precision measurement value
- 3 Highest precision measurement value
- 4 Highest informational measurement value

5.6.1 Information Common Capacitance Diaphragm

Index	SI	Data Type	NV	Access	PM	Name
9000	0x01	REAL	x	RO		Accumulated Zero Offset
	0x02	REAL	x	RO		Highest Informational Measurement Value
	0x03	REAL	x	RO		Highest Precision Measurement Value
	0x04	REAL	x	RO		Lowest Precision Measurement Value

Subindex 0x01

Accumulated Zero Offset: An amount added prior to Gain to derive Value. Result of Zero Adjust Command (accumulated value).

Subindex 0x02

Highest Informational Measurement Value: Highest value that the gauge can measure without a specified accuracy.

Subindex 0x03

Highest Precision Measurement Value: Highest valid value at which the gauge is specified with an accuracy value. Above that value, the parameter Reading Valid is set to invalid.

Subindex 0x04

Lowest Precision Measurement Value: Lowest valid value at which the gauge is specified with an accuracy value. Below that value, the parameter Reading Valid is set to invalid.

5.6.2 Information Capacitance Diaphragm

Index	SI	DataType	NV	Access	PM	Name
9001	0x01	UINT		RO		Sensor Warning
	0x02	UINT		RO		Sensor Error

Subindex 0x01

Sensor Warnings	
Bit 0	Not at temperature
Bit 1...13	0
Bit 14	Low Warning Exception
Bit 15	High Warning Exception

Subindex 0x02

Sensor Errors	
Bit 0	Diaphragm Failure
Bit 1	Electronics Failure
Bit 2	Electronics Over Temperature
Bit 3...13	0
Bit 14	Low Error Exception
Bit 15	High Error Exception

5.6.3 Information Common Piezo

Index	SI	DataType	NV	Access	PM	Name
9010	0x01	REAL	x	RO		Accumulated Zero Offset
	0x02	REAL	x	RO		Highest Informational Measurement Value
	0x03	REAL	x	RO		Highest Precision Measurement Value
	0x04	REAL	x	RO		Lowest Precision Measurement Value

Subindex 0x01

Accumulated Zero Offset: An amount added prior to Gain to derive Value. Result of Zero Adjust Command (accumulated value).

Subindex 0x02

Highest Informational Measurement Value: Highest value that the gauge can measure without a specified accuracy.

Subindex 0x03

Highest Precision Measurement Value: Highest valid value at which the gauge is specified with an accuracy value. Above that value, the parameter Reading Valid is set to invalid.

Subindex 0x04

Lowest Precision Measurement Value: Lowest valid value at which the gauge is specified with an accuracy value. Below that value, the parameter Reading Valid is set to invalid.

5.6.4 Information Piezo

Index	SI	DataType	NV	Access	PM	Name
9012	0x01	UINT		RO		Sensor Warning
	0x02	UINT		RO		Sensor Error

Subindex 0x01

Sensor Warnings	
Bit 0...15	0

Subindex 0x02

Sensor Errors	
Bit 0	Sensor Failure Piezo Sensor
Bit 0...15	0

5.6.5 Information Trip Point 1 / 2

Index	SI	Data Type	NV	Access	PM	Name
900E	0x01	REAL		RO		Input Value Trip Point 1
900F	0x01	REAL		RO		Input Value Trip Point 2

Subindex 0x01 (900E)

Input Value Trip Point 1: Trip Point Input value as referenced by Source Index (I 0x800E, SI 0x0E).

Subindex 0x01 (900F)

Input Value Trip Point 2: 0 Trip Point Input value as referenced by Source Index (I 0x800F, SI 0x0E).

5.7 Device Area (0xF000...0xAFFF)

5.7.1 Semiconductor Device Profile

Index	SI	Data Type	NV	Access	PM	Name
F000	0x01	UINT		RO		Index Distance
	0x02	UINT		RO		Maximum Number of Modules

Subindex 0x01

Index Distance: Index offset between PDO entries of two consecutive modules (for ETG.5003 = 0x10), e.g. 0x6000, 0x6010.

Subindex 0x02

Number of Modules: CDGxxxD has always 2.

5.7.2 Module Profile List

Index	SI	Data Type	NV	Access	PM	Name
F010	0x01	UDINT		RO		Profile Number (Module 1)
	0x02	UDINT		RO		Profile Number (Module 2)

Subindex 0x01

Each sub-index lists the profile-number of the corresponding module.

Subindex 0x02

Each sub-index lists the profile-number of the corresponding module.

5.7.3 Exceptions

5.7.4 Active Exception Status

Index	SI	Data Type	NV	Access	PM	Name
F380		USINT		RO	tx	ActiveException Status

Active Exception Status

Active Exception Status	
Bit 0	Device Warning
Bit 1	Manufacturer Warning
Bit 2	Device Error
Bit 3	Manufacturer Error
Bit 4...7	0

5.7.5 Active Device Warning Details

The "active device warning details" parameter describes the warning state of the complete device.

Index	SI	DataType	NV	Access	PM	Name
F381	0x01	UDINT		RO	tx	Active Device Warning Details
	0x02	UDINT		RO	tx	Active Device Warning Details
F382	0x01	UDINT		RO	tx	Active Manufacturer Warning Details
	0x02	UDINT		RO	tx	Active Manufacturer Warning Details

Subindex 0x01 (F381)

Active Device Warning Details (Index F381, Module 1)	
Bit 0	Not at temperature
Bit 1...13	0
Bit 14	Low Warning Exception
Bit 15	High Warning Exception
Bit 16...31	0

Subindex 0x02 (F381)

Active Device Warning Details (Index F381, Module 2)	
Bit 0...31	0

Subindex 0x01 (F382)

Active Manufacturer Warning Details (Index F382, Module 1)	
Bit 0...31	0

Subindex 0x02 (F382)

Active Manufacturer Warning Details (Index F382, Module 2)	
Bit 0...31	0

5.7.6 Active Device Error Details

The "active device error details" parameter describes the error state of the complete device.

Index	SI	DataType	NV	Access	PM	Name
F383	0x01	UDINT		RO	tx	Active Device Error Details
	0x02	UDINT		RO	tx	Active Device Error Details
F384	0x01	UDINT		RO	tx	Active Manufacturer Error Details
	0x02	UDINT		RO	tx	Active Manufacturer Error Details

Subindex 0x01 (F383)

Active Device Error Details (Index F383, Module 1)	
Bit 0	Diaphragm Failure
Bit 1	Electronics Failure
Bit 2	Electronics Over Temperature
Bit 3...13	0
Bit 14	Low Error Exception
Bit 15	High Error Exception
Bit 16...31	0 (reserved)

Subindex 0x02 (F383)

Active Device Error Details (Index F383, Module 2)	
Bit 0	Sensor Failure Piezo Sensor
Bit 1...31	0

Subindex 0x01 (F384)

Active Manufacturer Error Details (Index F384, Module 1)	
Bit 0..31	0

Subindex 0x02 (F384)

Active Manufacturer Error Details (Index F384, Module 2)	
Bit 0..31	0

5.7.7 Active Global Device Warning Details

The "active device warning details" parameter describes the warning state of the complete device.

Index	SI	Data Type	NV	Access	PM	Name
F385	0x01	UDINT		RO	tx	Active Global Device Warning Details
F386	0x01	UDINT		RO	tx	Active Global Manufacturer Warning Details

Subindex 0x01 (F385)

Active Global Device Warning Details (Index F385)	
Bit 0...2	0
Bit 3	EEPROM exception
Bit 4...31	0

Subindex 0x01 (F386)

Active Global Manufacturer Warning Details (Index F386)	
Bit 0	Zero adjust warning
Bit 1	Internal Communication Exception (between EtherCAT-Protocol and Device-Application)
Bit 2...31	0

5.7.8 Active Global Device Error Details

The "active device error details" parameter describes the error state of the complete device.

Index	SI	Data Type	NV	Access	PM	Name
F387	0x01	UDINT		RO	tx	Active Global Device Error Details
F388	0x01	UDINT		RO	tx	Active Global Manufacturer Error Details

Subindex 0x01 (F387)

Active Global Device Error Details (Index F387)	
Bit 0	0
Bit 1	uP Exception
Bit 2	0
Bit 3	EEPROM exception
Bit 4...31	0

Subindex 0x01 (F388)

Active Global Manufacturer Error Details (Index F388)	
Bit 0	Internal Communication Exception (between EtherCAT-Protocol and Device-Application)
Bit 1	0
Bit 2	Over temperature board
Bit 3	Zero adjust value lager than error limit
Bit 4	Communication with AD-Converter for heat temperature is not possible
Bit 5	No meaningful temperature value from PT1000 sensor
Bit 6...31	0

5.7.9 Latched Device Warning Details

Index	SI	DataType	NV	Access	PM	Name
F390		USINT		RO	tx	Latched Exceptions Status
F391	0x01	UDINT		RO	tx	Latched Device Warning Details
	0x02	UDINT		RO	tx	Latched Device Warning Details
F392	0x01	UDINT		RO	tx	Latched Manufacturer Warning Details
	0x02	UDINT		RO	tx	Latched Manufacturer Warning Details

Latched Exceptions Status

Latched version of 0xF380.

Subindex 0x01 (F391)

Latched Device Warning Details: Latched version of 0xF381:01.

Subindex 0x02 (F391)

Latched Device Warning Detail: Latched version of 0xF381:02.

Subindex 0x01 (F392)

Latched Manufacturer Warning Details: Latched version of 0xF382:01.

Subindex 0x02 (F392)

Latched Manufacturer Warning Details: Latched version of 0xF382:01.

5.7.10 Latched Device Error Details

Index	SI	DataType	NV	Access	PM	Name
F393	0x01	UDINT		RO	tx	Latched Device Error Details
	0x02	UDINT		RO	tx	Latched Device Error Details
F394	0x01	UDINT		RO	tx	Latched Manufacturer Error Details
	0x02	UDINT		RO	tx	Latched Manufacturer Error Details

Subindex 0x01 (F393)

Latched Device Error Details: Latched version of 0xF383:01.

Subindex 0x02 (F393)

Latched Device Error Details: Latched version of 0xF383:02.

Subindex 0x01 (F394)

Latched Manufacturer Error Details: Latched version of 0xF384:01.

Subindex 0x02 (F394)

Latched Manufacturer Error Details: Latched version of 0xF384:02.

5.7.11 Latched Global Device Warning Details

Index	SI	Data Type	NV	Access	PM	Name
F395	0x01	UDINT		RO	tx	Latched Global Device Warning Details
F396	0x01	UDINT		RO	tx	Latched Global Manufacturer Warning Details

Subindex 0x01 (F395)

Latched Global Device Warning Details: Latched version of 0xF385:01.

Subindex 0x01 (F396)

Latched Global Manufacturer Warning Details: Latched version of 0xF386:01.

5.7.12 Latched Global Device Error Details

Index	SI	Data Type	NV	Access	PM	Name
F397	0x01	UDINT		RO	tx	Latched Global Device Error Details
F398	0x01	UDINT		RO	tx	Latched Global Manufacturer Error Details

Subindex 0x01 (F397)

Latched Global Device Error Details: Latched version of 0xF387:01.

Subindex 0x01 (F398)

Latched Global Manufacturer Error Details: Latched version of 0xF388:01.

5.7.13 Device Warning Mask

Index	SI	Data Type	NV	Access	PM	Name
F3A1	0x01	UDINT	x	RW		Device Warning Mask
	0x02	UDINT	x	RW		Device Warning Mask
F3A2	0x01	UDINT	x	RW		Manufacturer Warning Mask
	0x02	UDINT	x	RW		Manufacturer Warning Mask

Subindex 0x01 (F3A1)

Device Warning Mask: Mask bits for 0xF381:01 and 0xF391:01.

Subindex 0x02 (F3A1)

Device Warning Mask: Mask bits for 0xF381:02 and 0xF391:02.

Subindex 0x01 (F3A2)

Manufacturer Warning Mask: Mask bits for 0xF382:01 and 0xF392:01.

Subindex 0x02 (F3A2)

Manufacturer Warning Mask: Mask bits for 0xF382:02 and 0xF392:02.

5.7.14 Device Error Mask

Index	SI	Data Type	NV	Access	PM	Name
F3A3	0x01	UDINT	x	RW		Device Error Mask
	0x02	UDINT	x	RW		Device Error Mask
F3A4	0x01	UDINT	x	RW		Manufacturer Error Mask
	0x02	UDINT	x	RW		Manufacturer Error Mask

Subindex 0x01 (F3A3)

Device Error Mask: Mask bits for 0xF383:01 and 0xF393:01.

Subindex 0x02 (F3A3)

Device Error Mask: Mask bits for 0xF383:02 and 0xF393:02.

Subindex 0x01 (F3A4)

Manufacturer Error Mask: Mask bits for 0xF384:01 and 0xF394:01.

Subindex 0x02 (F3A4)

Manufacturer Error Mask: Mask bits for 0xF384:02 and 0xF394:02.

5.7.15 Global Device Warning Mask

Index	SI	Data Type	NV	Access	PM	Name
F3A5	0x01	UDINT	x	RW		Global Device Warning Mask
F3A6	0x01	UDINT	x	RW		Global Manufacturer Warning Mask

Subindex 0x01 (F3A5)

Global Device Warning Mask: Mask bits for 0xF385:01 and 0xF395:01.

Subindex 0x01 (F3A6)

Global Manufacturer Warning Mask: Mask bits for 0xF386:01 and 0xF396:01.

5.7.16 Global Device Error Mask

Index	SI	Data Type	NV	Access	PM	Name
F3A7	0x01	UDINT	x	RW		Global Device Error Mask
F3A8	0x01	UDINT	x	RW		Global Manufacturer Error Mask

Subindex 0x01 (F3A7)

Global Device Error Mask: Mask bits for 0xF385:01 and 0xF395:01.

Subindex 0x01 (F3A8)

Global Manufacturer Error Mask: Mask bits for 0xF388:01 and 0xF398:01.

5.7.17 Manufacturer Information Device

Index	SI	Data Type	NV	Access	PM	Name
F500		V_STRING		RO		Manufacturer's Model Number
F501		V_STRING		RO		Device Configuration

5.7.18 Trip Point Output All

Index	SI	Data Type	NV	Access	PM	Name
F641	0x01	UDINT		RO	tx	Trip Point Output All Instance

Subindex 0x01

Status of Trip Point instances.

Trip Point Output All Instance	
Bit 0	Status High Trip (I 0x600E, SI 0x01)
Bit 1	Status Low Trip (I 0x600E S, I 0x02)
Bit 2	Status High Trip (I 0x600F, SI 0x01)
Bit 3	Status Low Trip (I 0x600F, SI 0x02)
Bit4...31	not used = 0

5.7.19 Input Latch Local Timestamp

Index	SI	Data Type	NV	Access	PM	Name
F6F0	0x01	UDINT		RO	tx	Input Latch Local Timestamp. Mandatory if device has inputs (TxPDOs)
	0x02	UDINT		RO	tx	Input Latch Local Timestamp. Mandatory if device has inputs (TxPDOs)

Subindex 0x01

Local controller time corresponding to the input latch time in microseconds. It starts at zero on device power-up. Mandatory if device has inputs. If device has no inputs defined, this corresponds the time immediately prior to writing to input SM.

Subindex 0x02

Local controller time corresponding to the input latch time in microseconds. It starts at zero on device power-up. Mandatory if device has inputs. If device has no inputs defined, this corresponds the time immediately prior to writing to input SM.

5.8 Configure Device

Index	SI	Data Type	NV	Access	PM	Name
F840	0x01	UDINT	x	RW		Data Units
	0x03	Enum	x	RW		Data Units Enum

Subindex 0x01

Unit of the Value of the Analog Input Sensor Instance and all related parameters.

Data Units	
0x00220000	Pascal
0xFD4E0000	mbar
0x00A10000	Torr

If this value is changed, also Subindex 2 will change the value accordingly.

Subindex 0x03

Data Unit for Input Sensor as Enum to have a list of possible values.

Data Units	
0x01(Pa)	Pascal
0x04(mBar)	mbar
0x05(Torr)	Torr

If this value is changed, also Subindex 1 will change the value accordingly.

5.8.1 Information Device

Index	SI	Data Type	NV	Access	PM	Name
F940	0x01	UDINT		RO		Measurement Principle
	0x02	BYTE		RO		Number of Sensors
	0x04	V_STRING	x	RO		SW Version VPG PCB
F9F0		V_STRING		RO		Manufacturer Serial Number
F9F1	0x01	UDINT		RO		CDP Functional Generation Number
F9F2	0x01	UDINT		RO		SDP Functional Generation Number (Module 1)
	0x02	UDINT		RO		SDP Functional Generation Number (Module 2)
F9F3		V_STRING		RO		Vendor Name
F9F4	0x01	V_STRING		RO		Semiconductor SDP Device Name (Module 1)
	0x02	V_STRING		RO		Semiconductor SDP Device Name (Module 2)
F9F5	0x01	USINT		RW	Rx Tx	Output Identifier (Module 1)
	0x02	USINT		RW	Rx Tx	Output Identifier (Module 2)
F9F6		UDINT		RO		Time since power on
F9F7		UDINT	x	RO		Total time powered
F9F8		UDINT		RO		Firmware Update Functional Generation Number

Subindex 0x01 (F940)

Measurement principle assigned to the object instance.

The most significant nibble of the parameter represents the sensor type of the first Module, the second most significant nibble of the parameter represents the sensor type of the second Module, and so forth.

Measurement Principle (Index F940)	
1	Capacitance Manometer
2	Piezo
3	Heat Transfer
4	Cold Cathode
5	Hot Cathode

Subindex 0x02 (F940)

Number of Sensors (Index F940): The number of sensors implemented on the device.

Subindex 0x04 (F940)

If the device consists out of several software portions this parameter should be used.

Using standard a.b.c.d format to describe a version:

SW Version VPG PCB (Index F940)	
a	Major revision
b	Minor revision
c	Development revision
d	Vendor specific
i.e. 1.0.1.2	

5.8.2 Command Zero Adjust

Execution of this command will start a Zero Adjust operation.



The zeroing function is locked in order for operating errors to be prevented, therefore see the operation instructions of the vacuum gauges, refer to the appropriate documents (→ [\[1\]](#) ... [\[8\]](#)).

Index	SI	Data Type	NV	Access	PM	Name
FB40	0x01	V_STRING(6)		RW		Command
	0x02	BYTE		RO		Status
	0x03	V_STRING(3)		RO		Response

Subindex 0x01

Command	
Byte 0	0: Zero adjust with no offset
Byte 1	Index of the Sub Sensor Instance (1)
Byte 2...5	Offset value (Data format: REAL, always 0)

Subindex 0x02

Status (supported values)	
0	Last command completed, no errors, no reply available
1	Last command completed, no errors, reply available
2	Last command completed, errors present, no reply available
3	Last command completed, errors present, reply available
255	Command is executing

Subindex 0x03

Response	
Byte 0	See Subindex 0x02
Byte 1	Unused
Byte 2	0: Zeroing successful 1: Zeroing failed; out-of-range 2: Zeroing failed; cumulative out-of-range 3: Zeroing failed: measurement invalid 254: No previous Zero Adjust command issued

5.8.3 Full Scale Adjust

Execution of this command will start a Full Scale Adjust operation.

Index	SI	Data Type	NV	Access	PM	Name
FB41	0x01	V_STRING(6)		RW		Command
	0x02	BYTE		RO		Status
	0x03	V_STRING(3)		RO		Response

Subindex 0x01

Command	
Byte 0	0: Full Scale Adjust
Byte 1	2: Index of the Sub Sensor Instance (always 2)
Byte 2...5	0: Full Scale value (Data format: REAL, always 0)

Subindex 0x02

Status (supported values)	
0	Last command completed, no errors, no reply available
1	Last command completed, no errors, reply available
2	Last command completed, errors present, no reply available
3	Last command completed, errors present, reply available
255	Command is executing

Subindex 0x03

Response	
Byte 0	See Subindex 0x02
Byte 1	Unused
Byte 2	0: Full Scale Adjust successful 1: Full Scale Adjust failed: out-of-range 254: No previous Full Scale Adjust command issued

5.8.4 Device Reset Command

Execution of this command causes the device to emulate a complete power cycle. This includes an ESC reset.



As consequence of an ESC reset all following devices are disconnected from the network.

There are two versions of this command:

- Standard reset (as described above)
- Factory reset (as described above, but additionally, all parameters are restored to as-shipped defaults).

Index	SI	DataType	NV	Access	PM	Name
FBF0	0x01	V_STRING(6)		RW		Command
	0x02	BYTE		RO		Status
	0x03	V_STRING(2)		RO		Response

Subindex 0x01

A device reset is initiated when the following byte sequence is sent.

Command	
Byte 0	0x74
Byte 1	0x65
Byte 2	0x73
Byte 3	0x65
Byte 4	0x72
Byte 5	0x00 = Standard reset, 0x66 = Factory Reset

Subindex 0x02

Status (supported values)	
0	Reserved
1	Reserved
2	Last command completed, error, no response
3	Reserved
255	Command is executing

Subindex 0x03

Response	
Byte 0	See Subindex 0x02
Byte 1	not used = 0x00

5.8.5 Exception Reset Command

Execution of this command clears the latched exceptions.

Index	SI	DataType	NV	Access	PM	Name
FBF1	0x01	V_STRING(5)		RW		Command
	0x02	BYTE		RO		Status
	0x03	V_STRING(2)		RO		Response

Subindex 0x01

A device reset is initiated when the following byte sequence is sent.

Command	
Byte 0	0x74
Byte 1	0x65
Byte 2	0x73
Byte 3	0x65
Byte 4	0x72

Subindex 0x02

Status (supported values)	
0	Last command completed, no error, no response
1	Reserved
2	Last command completed, error, no response
3	Reserved
255	Command is executing

Subindex 0x03

Response	
Byte 0	See Subindex 0x02
Byte 1	not used = 0x00

5.8.6 Store Parameters Command

Execution of this command will store all parameters to non-volatile memory. If a device automatically saves all non-volatile parameters at the time they are set, this command will not take any action.

Index	SI	DataType	NV	Access	PM	Name
FBF2	0x01	V_STRING(4)		RW		Command
	0x02	BYTE		RO		Status
	0x03	V_STRING(2)		RO		Response

Subindex 0x01

A device reset is initiated when the following byte sequence is sent.

Read:

Command: Read	
Byte 0	0x01 = slave saves the non-volatile parameters when writing 0xFBf2:01 with 0x65766173
Byte 1	not used = 0x00
Byte 2	not used = 0x00
Byte 3	not used = 0x00

Write:

Command: Write	
Byte 0	0x73
Byte 1	0x61
Byte 2	0x76
Byte 3	0x65

Subindex 0x02

Status (supported values)	
0	Last command completed, no error, no response
1	Reserved
2	Last command completed, error, no response
3	Reserved
255	Command is executing

Subindex 0x03

Response	
Byte 0	See Subindex 0x02
Byte 1	not used = 0x00

5.8.7 Calculate Checksum Command

Execution of this command will calculate a checksum for all writable, non-volatile parameters as currently stored in non-volatile memory.

Index	SI	DataType	NV	Access	PM	Name
FBF3	0x01	V_STRING(4)		RW		Command
	0x02	BYTE		RO		Status
	0x03	V_STRING(6)		RO		Response

Subindex 0x01

A device reset is initiated when the following byte sequence is sent.

Read

Command: Read	
Byte 0	Bit 0 = 1: non-volatile parameters supported Bit 1 = 1: CRC-32 Bit 2..7 = 0: not used
Byte 1	not used = 0x00
Byte 2	not used = 0x00
Byte 3	not used = 0x00

Write

Command: Write	
Byte 0	Bit 0 = 1: use default checksum algorithm of the slave Bit 1 = 1: CRC-32 Bit 2..7 = 0: not used
Byte 1	not used = 0x00
Byte 2	not used = 0x00
Byte 3	not used = 0x00

Subindex 0x02

Status (supported values)	
0	Last command completed, no error, no response
1	Reserved
2	Last command completed, error, no response
3	Reserved
255	Command is executing

Subindex 0x03

Response	
Byte 0	See Subindex 0x02
Byte 1	not used = 0
Byte 2	Checksum return value, Byte 0
Byte 3	Checksum return value, Byte 1
Byte 4	Checksum return value, Byte 2
Byte 5	Checksum return value, Byte 3

5.8.8 Load Parameters Command

Execution of this command will load all parameters from non-volatile memory.

Index	SI	Data Type	NV	Access	PM	Name
FBF4	0x01	V_STRING(4)		RW		Command
	0x02	BYTE		RO		Status
	0x03	V_STRING(2)		RO		Response

Subindex 0x01

A device reset is initiated when the following byte sequence is sent.

Read:

Command: Read	
Byte 0	0x01 = slave loads the non-volatile parameters when writing 0xFB4:01 with 0x64616F6C
Byte 1	not used = 0x00
Byte 2	not used = 0x00
Byte 3	not used = 0x00

Write:

Command: Write	
Byte 0	0x6C
Byte 1	0x6F
Byte 2	0x61
Byte 3	0x64

Subindex 0x02

Status (supported values)	
0	Last command completed, no error, no response
1	Reserved
2	Last command completed, error, no response
3	Reserved
255	Command is executing

Subindex 0x03

Response	
Byte 0	See Subindex 0x02
Byte 1	not used = 0x00

Appendix

A: Overview Setting Trip Points

Input Data Trip Point

Index	Object Code	Sub Index	Data Type	Access	B/S	PM	Name	Description
0x6nnx	RECORD			RO			Input Trip Point 1 / 2	Trip Point 1 / Trip Point 2 E = Trip Point 1 F = Trip Point 2
0x600E 0x600F		0x01	BOOL	RO		tx	Status High Trip	0: High Trip not asserted 1: High Trip asserted
0x600E 0x600F		0x02	BOOL	RO		tx	Status Low Trip	0: Low Trip not asserted 1: Low Trip asserted

Trip Point 1

CDGxxxD, CDGxxxD2
CDGxxxDhs

→ 18
→ 42

Trip Point 2

CDGxxxD, CDGxxxD2
CDGxxxDhs

→ 19
→ 43

Trip Point Configuration

Index	Object Code	Sub Index	Data Type	Access	B/S	PM	Name	Description
0x8nnx	RECORD			RO			Configuration Trip Point 1 / 2	Trip Point 1 / 2 E = Trip Point 1 F = Trip Point 2
0x800E 0x800F		0x01	BOOL	RW	B/S		High Trip enable	High Trip Point 0: disable 1: enable
0x800E 0x800F		0x02	BOOL	RW	B/S		Low Trip enable	Low Trip Point 0: disable 1: enable
0x800E 0x800F		0x11	REAL	RW	B/S		High Trip Point Limit	High limit to trigger trip point condition, if Input Value (I 0x9nnE, SI 0x01) is above this limit.
0x800E 0x800F		0x12	UDINT	RW	B/S		High Trip Source Index	Object index of High Trip Point Value source. Bit 16...31: Index Bit 08...15: Subindex Bit 00...07: reserved It is possible to reference to "High Trip Point Limit" (I 0x800E1100 / I 0x800F1100) or any other available input source from another sensor (in case of combi / multigauges).
0x800E 0x800F		0x13	REAL	RW	B/S		Percentage High Trip Source	Percentage of value referenced by High Trip Source Index (I 0x8nnE, SI 0x12) in %.
0x800E 0x800F		0x14	REAL	RW	B/S		Low Trip Point Limit	Low limit to trigger trip point condition, if Input Value (I 0x9nnE, SI 0x01) is below this limit.

(continued)

(Table "Trip Point Configuration" concluded)

Index	Object Code	Sub Index	Data Type	Access	B/S	PM	Name	Description
0x800E 0x800F		0x15	UDINT	RW	B/S		Low Trip Source Index	Object index of Low Trip Point Value source. Bit 16...31: Index Bit 08...15: Subindex Bit 00...07: reserved It is possible to reference to "Low Trip Point Limit" (I 0x800E1400 / I 0x800F1400) or any other available input source from another sensor (in case of combi / multigauges).
0x800E 0x800F		0x16	REAL	RW	B/S		Percentage Low Trip Source	Percentage of value referenced by Low Trip Source Index (I 0x8nnE, SI 0x15) in %.
0x800E 0x800F		0x17	REAL	RW	B/S		High Trip Hysteresis	Hysteresis value for High Trip Point.
0x800E 0x800F		0x18	REAL	RW	B/S		Low Trip Hysteresis	Hysteresis value for Low Trip Point.
0x800E 0x800F		0x1A	UDINT	RW	B/S		Source Index	Object index of active source of Input Value (I 0x9nnE, SI 0x01). Bit 16...31: Index Bit 08...15: Subindex Bit 00...07: reserved

Trip Point 1

CDGxxxD, CDGxxxD2
CDGxxxDhs

→ 20
→ 44

Trip Point 2

CDGxxxD, CDGxxxD2
CDGxxxDhs

→ 21
→ 45

Information Data of the Modules

Index	Object Code	Sub Index	Data Type	Access	B/S	PM	Name	Description
0x9nnx	RECORD			RO			Information Trip Point 1 / 2	Trip Point 1 / Trip Point 2 E = Trip Point 1 F = Trip Point 2
0x900E 0x900F		0x01	REAL	RO			Input Value of Trip Point 1 / 2	Trip Point Input value as referenced by Source Index (I 0x8nnE, SI 0x1A).

Trip Point 1 / 2

CDGxxxD, CDGxxxD2
CDGxxxDhs

→ 24
→ 49

Trip Point All Slots Combined

Index	Object Code	Sub Index	Data Type	Access	B/S	PM	Name	Description
0xF641	RECORD			RO			Trip Point Output All	Trip Point Output All
0xF641		0x01	UDINT	RO		TX	Trip Point Output All Instance	Status of Trip Point Instances Bit 0: Status High Trip (I 0x6nnE, SI 0x01) Bit 1: Status Low Trip (I 0x6nnE, SI 0x02) Bit 2: Status High Trip (I 0x6nnF, SI 0x01) Bit 3: Status Low Trip (I 0x6nnF, SI 0x02) Bit 4...31: 0

Trip Point 1 / 2

CDGxxxD, CDGxxxD2 → 29

CDGxxxDhs → 54

B: Literature

- [1] www.inficon.com
 Operating Manual
 Sky CDG045D
 tina51d1 (German)
 tina51e1 (English)
 INFICON AG, LI-9496 Balzers, Liechtenstein
- [2] www.inficon.com
 Operating Manual
 Sky CDG100D
 tina52d1 (German)
 tina52e1 (English)
 INFICON AG, LI-9496 Balzers, Liechtenstein
- [3] www.inficon.com
 Operating Manual
 Sky CDG160D, CDG200D
 tina53d1 (German)
 tina53e1 (English)
 INFICON AG, LI-9496 Balzers, Liechtenstein
- [4] www.inficon.com
 Operating Manual
 Edge CDG025D2
 tinb28d1 (German)
 tinb28e1 (English)
 INFICON AG, LI-9496 Balzers, Liechtenstein
- [5] www.inficon.com
 Operating Manual
 Edge CDG045D2, CDG100D2
 tina86d1 (German)
 tina86e1 (English)
 INFICON AG, LI-9496 Balzers, Liechtenstein
- [6] www.inficon.com
 Operating Manual
 Stripe CDG045Dhs
 tina84d1 (German)
 tina84e1 (English)
 INFICON AG, LI-9496 Balzers, Liechtenstein

- [7] www.inficon.com
Operating Manual
Stripe CDG100Dhs
tina95d1 (German)
tina95e1 (English)
INFICON AG, LI-9496 Balzers, Liechtenstein
- [8] www.inficon.com
Operating Manual
Stripe CDG160Dhs, CDG200Dhs
tinb45d1 (German)
tinb45e1 (English)
INFICON AG, LI-9496 Balzers, Liechtenstein
- [9] ETG.1000.2: Physical Layer service definition and protocol specification
- [10] ETG.1000.3: Data Link Layer service definition
- [11] ETG.1000.4: Data Link Layer protocol specification
- [12] ETG.1000.5: Application Layer service definition
- [13] ETG.1000.6: Application Layer protocol specification
- [14] ETG.1020: EtherCAT Protocol Enhancements
- [15] ETG.2000: EtherCAT Slave Information
- [16] ETG.5001.1: Modular Device Profile – Part 1: General MDP Device Model
- [17] ETG.5003.1 S (R) V1.1.0: Semiconductor Device profile – Part 1: Common Device Profile (CDP)
- [18] ETG.5003.2080 S (R) V1.3.0: Semiconductor Device profile – Part 2080: Specific Device Profile (SDP): Vacuum Pressure Gauge
- [19] IEC 61158-x-12 (all parts for type 12): Industrial communication networks – Fieldbus specifications
- [20] IEC 61784-2: Industrial communication networks – Profiles – Part 2: Additional fieldbus profiles for real-time networks based on ISO/IEC 8802-3
- [21] SEMI E54 / Draft 5102A: SPECIFICATION FOR SENSOR/ACTUATOR NETWORK SPECIFIC DEVICE MODEL FOR VACUUM PRESSURE GAUGES
- [22] SEMI E52: Practice for referencing gases, gas mixtures and vaporizable materials used in digital mass flow controllers

Original: English



tirb45e1



*LI-9496 Balzers
Liechtenstein
Tel +423 / 388 3111
Fax +423 / 388 3700
reachus@inficon.com*

www.inficon.com