

SL3000 bracket for UL3000 Fab



WARNING

Risk of injury due to sniffer tip


When stumbling, for example over lines, the sniffer tip can cause serious injuries, especially in eye contact.

- ▶ To avoid injury from the sniffer tip, align the sniffer tip in the bracket so that it points away from the operator.

A bracket is available for the sniffer tip. The bracket can be mounted on the back of the device.

Scope of delivery (amount):

Bracket (1), M6 x 12 mm screws (2) , S6 x 10 x 0.7 mm washers (2)

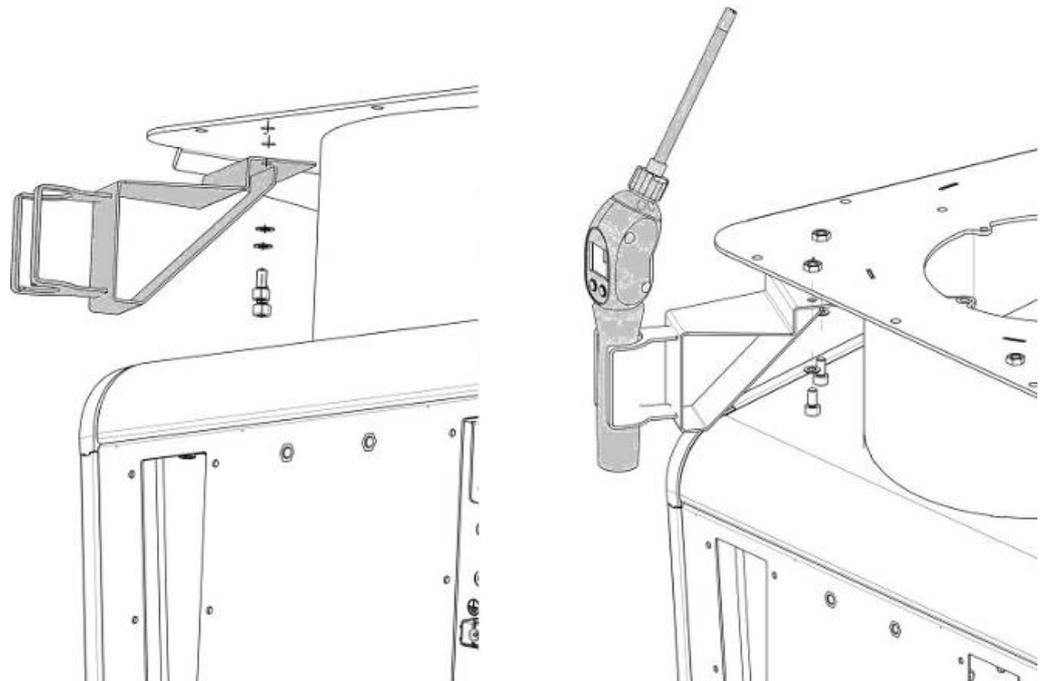

- 1 Mount the bracket as shown using the two screws and washers on the back of the device.
- 2 When not in use, align the sniffer line in the bracket so that it points away from the operator.