

OPERATING MANUAL

ninp69en1-01 (1508)



Type no. ILS.210.306

Sensistor ILS500 F

Leak Detection Filler

Content

1	General Information	9
1.1	About This Manual	9
1.2	Introduction to the ILS500 F	9
1.3	Disposal	10
2	Equipment and Storage	11
2.1	Supplied Equipment	11
2.2	Required Equipment	12
2.3	Storage	12
3	ILS500 F Description	13
3.1	Front View	13
3.2	Rear View (Electrical)	14
3.3	Configuring Ports and Interfaces (Electrical)	15
3.4	Rear View (Pneumactical)	16
3.5	Configuring Ports and Interfaces (Pneumactical)	17
3.6	Labels	17
4	Setup	19
4.1	Placement of the ILS500 F	19
4.2	Electrical Connections	20
4.3	Pneumatic Connections	22
4.4	Connect External Leak Detector	26
4.5	Set Up Test Area	26
5	Menu System	29
5.1	ILS500 F Display	29
5.2	Passwords	31
5.3	Menu Overview	32
6	Using the ILS500 F	37
6.1	Test Sequence	37
6.2	Run a Test	38
7	Recipes	41
7.1	Recipe Overview	41
7.2	Create a Recipe	42
7.3	Test Settings	43
7.4	Optimizing the Test Cycle	49
8	Troubleshooting	53
8.1	Fault Symptoms	53
8.2	Perform Hardware Test	53
9	Maintenance Instructions	65
9.1	Maintenance Plan	65

9.2	Maintenance	66
9.3	Functional Verification	72
<hr/>		
10	Service	73
<hr/>		
11	Technical Data	75
11.1	Electrical Specifications	75
11.2	Pneumatic Specifications	76
11.3	Other Data	77
11.4	Interfaces and Connectors	78
<hr/>		
12	Spare Parts and Accessories	89
<hr/>		
13	Support from INFICON	91
13.1	How to Contact INFICON	91
13.2	Returning Components to INFICON	91
<hr/>		
14	Declaration of Conformity	93
<hr/>		
15	Declaration by the Manufacturer	95
<hr/>		
Appendix		
A:	Parameter Index	97

General Safety Precautions

Definitions of Warning, Caution and Notice



Warning

Indicates procedures that must be strictly observed to prevent hazards to persons.



Caution

Indicates procedures that must strictly be observed to prevent damage to or destruction of the instrument.

Notice

Indicates special requirements the user must comply with.

General Safety

Failure to observe the following precautions could result in serious personal injury:



Warning

Tracer Gases can be flammable or asphyxiating. Use only ready-made Tracer Gas mixtures.



Warning

Since the tracer gas mix contains no oxygen, releasing large amounts of the gas in a confined space may lead to asphyxiation.



Warning

Compressed gases contain a great deal of stored energy. Always carefully secure gas bottles before connecting a pressure regulator. Never transport gas bottles with a pressure regulator fitted.



Warning

Pressurizing objects at too high pressures can lead to the object bursting. This in turn can result in serious injury or even death. Never pressurize objects that have not previously been burst-tested or have otherwise been approved for the test pressure you intend to use.

Failure to observe the following precautions could result in damage to the equipment:



Caution

If the tracer gas filler suffers external damage, it must be checked and repaired by a service organization authorized by INFICON.



Caution

Always switch power off before connecting or disconnecting any cable.

Notice

Before connecting the tracer gas, confirm that the connectors or test object is designed for operating at the test pressure to be used.

Safety ILS500 F



Warning

The ILS500 F must never be introduced to pressures higher than that approved for the object to be tested and never beyond the ILS500 F specification.



Warning

Be sure to have a pressure relief valve in case of accidental tracer gas pressure increase.



Warning

When dealing with high pressures, a blast protection is needed between the Test Ports and the Test Object.



Warning

When dealing with test objects that cannot stand high pressure increase, make sure to mount a flow control valve on the Test Ports.



Warning

Make sure not to confound Compressed Air and Tracer Gas.

Notice

The ILS500 F has no internal emergency stop circuit. ILS500 F is prepared for integration into an external emergency stop circuit.

Check that all relevant legislation and safety standards are complied with before putting the ILS500 F into service. See further information under Installation.

INFICON can not take any responsibility for the consequences arising from inappropriate use of certain test pressures.

1 General Information

Please read this Operating Manual carefully before putting your Sensistor ILS500 F into service. When reading, please pay particular attention to the **WARNINGS**, **CAUTIONS** and **NOTICES** found throughout the text.

1.1 About This Manual

The purpose of this manual is to:

- Describe the working principles of the ILS500 F and its different parts
- Show examples of different types of test stations
- Teach the reader how to set up the ILS500 F for different test purposes

1.1.1 Document History

Revision	Date	Remark
a	10-2014	First edition

1.2 Introduction to the ILS500 F

The Sensistor ILS500 F is a stand alone tracer gas filler with all necessary functions integrated in one very compact housing. The purpose of the ILS500 F is to make it possible to set up a fully automatic leak test system quickly, to a low cost.

The ILS500 F can also be combined with both hydrogen and helium INFICON leak detectors.

If a ISH2000 Hydrogen Leak Detector is connected to the ILS500 F, via the Probe Control Port and Leak Detector Port, the ILS500 F has the same functionality as ILS500. For information on how to setup this configuration, please contact INFICON.


Notice ILS500 F is not compatible with AP29, AP55, and AP57.

1.2.1 Intended Use

ILS500 F is designed for indoor use only.

All functions are accessible and programmable using a touch panel, a PC or via the Internet. The test sequence is controlled by an integrated controller.

1.2.2 Available Configurations

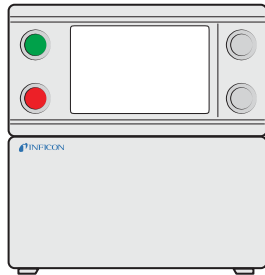

Sensistor ILS500 F

Sensistor ILS500 F

Standard	For common tracer gas leak detection
High Pressure (HP)	When a higher tracer gas pressure is needed.

The actual configuration is shown on the ILS500 F display during start-up and in the menu when clicking **Setup >> Info**.

1.3 Disposal



According to EU legislation, this product must be recovered for separation of materials and may not be disposed of as unsorted municipal waste.

If you wish you can return this INFICON product to the manufacturer for recovery.

The manufacturer has the right to refuse taking back products that are inadequately packed and thereby presents safety and/or health risks to the staff.

The manufacturer will not reimburse you for the shipping cost.


Shipping address:

INFICON AB
 Westmansgatan 49
 582 16 Linköping
 Sweden

2 Equipment and Storage

2.1 Supplied Equipment

Notice When receiving the equipment, check that it has not been damaged during transport.

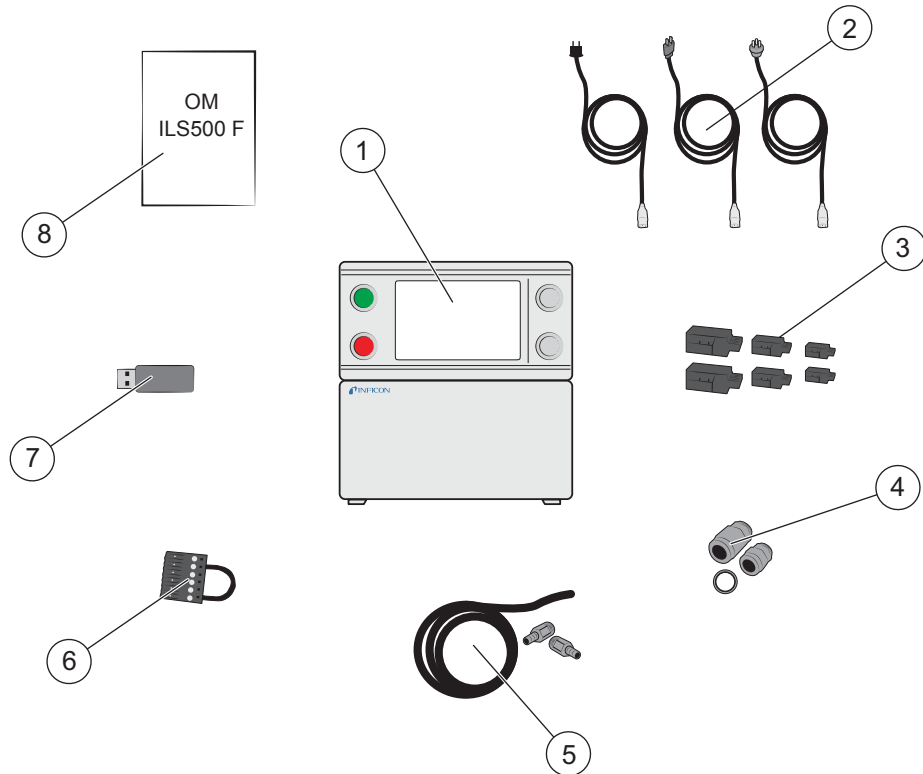


Supplied Equipment

- | | |
|---|--|
| 1 | ILS500 F |
| 2 | Power Cables (EU, UK, US) |
| 3 | Screw Terminal Connectors for External I/O Signals |
| 4 | Thread Converter Set (ISO to NPT Conversion) |
| 5 | Hose Connection Kit |
| 6 | Safety Override Loopback |
| 7 | USB flash drive with relevant manuals |
| 8 | Operating Manual Sensistor ILS500 F (this manual) |

Notice Some pneumatic ports are plugged upon delivery. Store the removed plugs. They are used for future hardware testing.

Accessories to the ILS500 F can be found on page 89.

2.2 Required Equipment

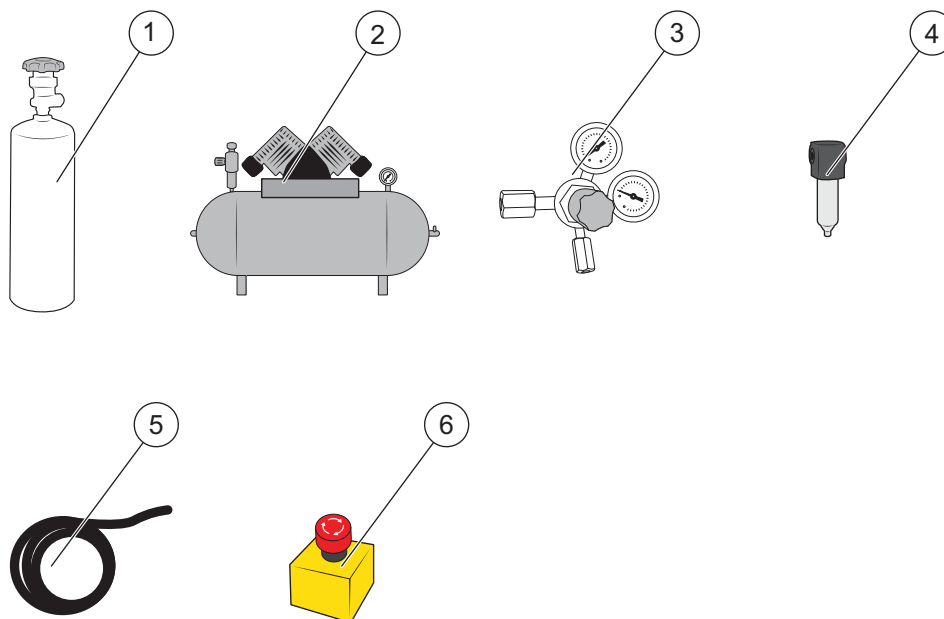

Required Equipment

- | | |
|---|--------------------------------------|
| 1 | Tracer Gas |
| 2 | Compressed Air |
| 3 | Two-Step Gas Regulator |
| 4 | Compressed Air Filter |
| 5 | Exhaust Hose |
| 6 | Emergency Stop Circuit (recommended) |

2.3 Storage


For prolonged storage, factors such as temperature, humidity, saline atmosphere etc., may damage the detector elements.

Please contact your local representative for more information.

3 ILS500 F Description

ILS500 F is manually controlled using the START and STOP buttons and the menu system of the touch panel. The screen also shows the steps of the test sequence graphically and in plain text.


3.1 Front View

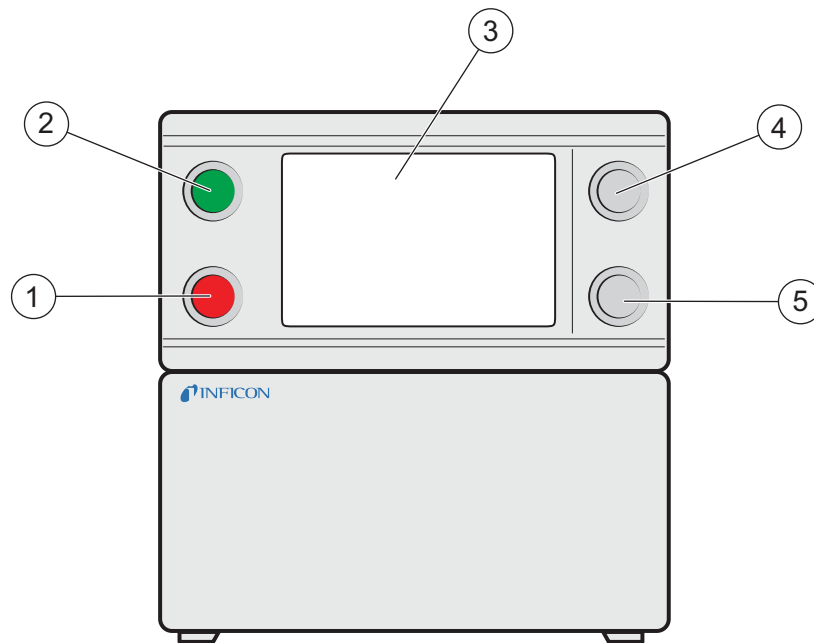

ILS500 F Front View

- 1 Red lamp
- 2 Green lamp
- 3 ILS500 F Touch panel
- 4 START button
- 5 STOP button

3.2 Rear View (Electrical)

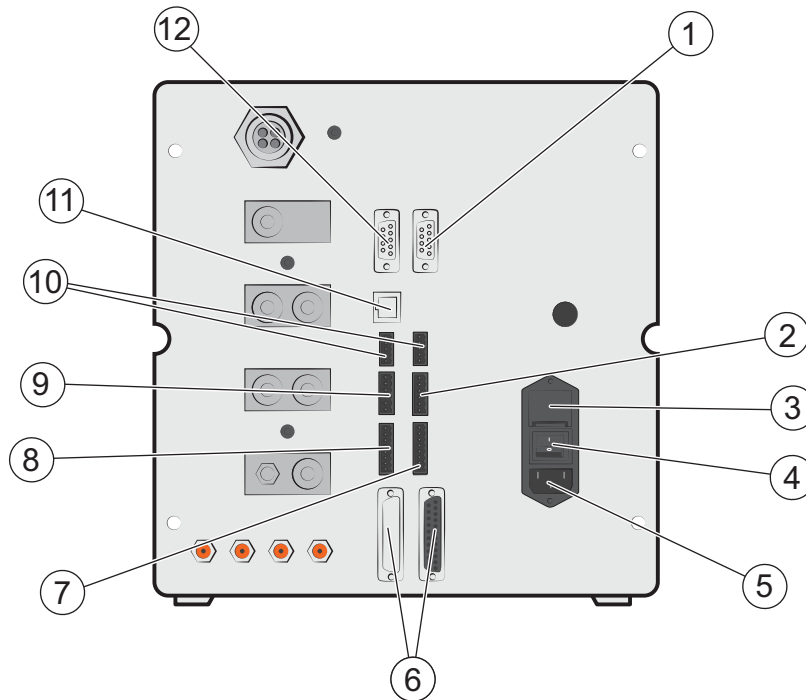

Rear View (Electrical)

- 1 Leak Detector (for connection of ISH2000 or T-Guard)
- 2 Safety Interface
- 3 Fuses
- 4 Power Switch
- 5 Power Input
- 6 Probe Control Port (for connection of ISH2000)
- 7 Control Output
- 8 Tooling Interface
- 9 Status Output
- 10 Inputs 1 and 2 (optional)
- 11 Ethernet
- 12 Printer Port/RS232


For more information, see on page 75.

3.3 *Configuring Ports and Interfaces (Electrical)*

Port/Interface	Connect
Leak Detector	ISH2000 or T-Guard.
Safety Interface	Emergency Stop Circuit.
Power Input	Power Cable.
Probe Control Port	Pin-to-pin cable (for external mounting of ISH2000 Leak Detector).
Control Output	Optional External Valves.
Tooling Interface	External sensors for tooling control.
Status Output	Light Tower etc.
Input 1 (optional)	Analogue Input (not supported by std software).
	Digital Input (not supported by std software).
Input 2	Active Holder for Hand Probe (if ISH2000 Leak Detector is connected).
Ethernet	Ethernet (remote view and control of touch panel).
Printer Port/RS232	Serial Printer.
	Logging Device (e.g. PC).
	Remote Control (START, STOP etc.).

ninp69en1-01 (1508)

3.4 Rear View (Pneumatical)

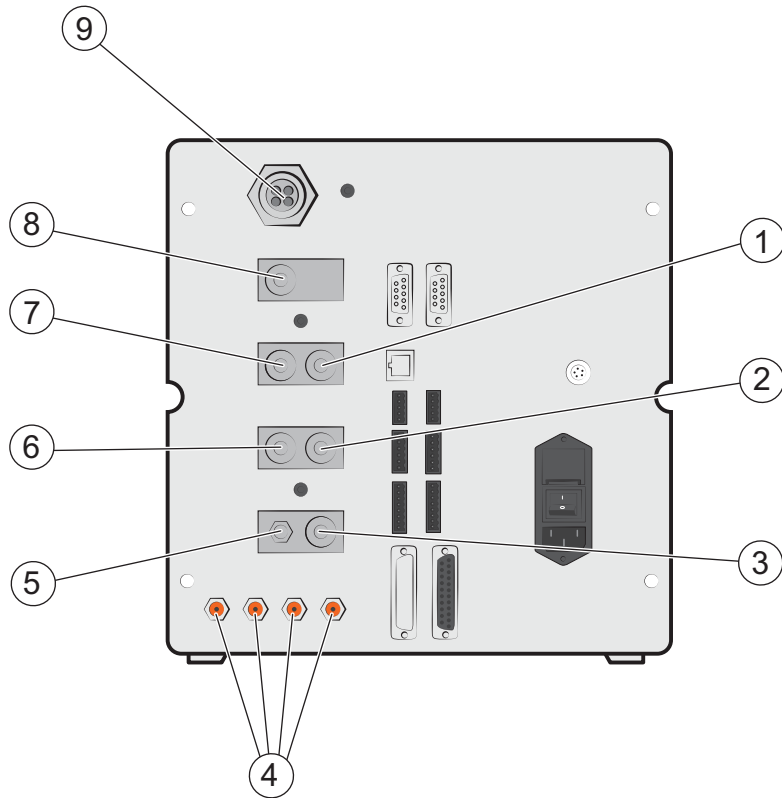

Rear View (Pneumatical)

- 1 Optional Port
- 2 Test Port 2
- 3 Compressed Air Input
- 4 Tooling Valve Outputs 1-4
- 5 Vacuum Gauge Vent
- 6 Test Port 1
- 7 Tracer Gas Input
- 8 Plugged Port
- 9 Exhaust

Notice Do not remove the plug from the plugged port in pos. 8.


3.5 Configuring Ports and Interfaces (Pneumatical)

Port/Interface	Port Thread
Exhaust	Barb Fitting: ID 25 mm (1 in.)
Tracer Gas Input	BSP 3/8" (NPT 3/8" adaptor included)
Test Port 1	BSP 3/8" (NPT 3/8" adaptor included)
Test Port 2	BSP 3/8" (NPT 3/8" adaptor included)
Compressed Air Input	BSP 3/8" (NPT 3/8" adaptor included)
Tooling Valve Outputs 1-4	Hose Connectors: OD 4 mm (0.16 in.)

3.6 Labels



Device Label

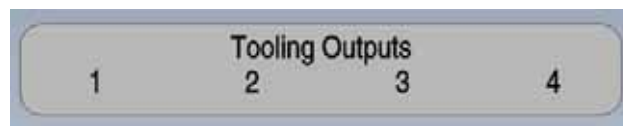


Tooling Label

ninp69en1-01 (1508)



Pneumatical Label

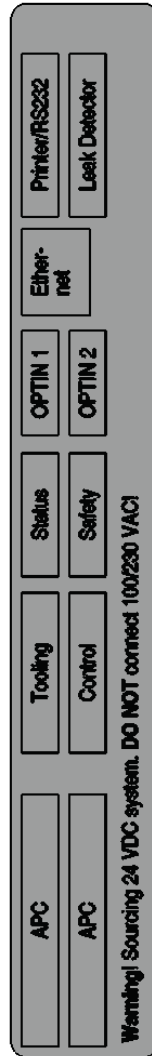

Electrical Label

4 Setup

Caution

Check that you comply with all relevant legislation and safety standards before putting your ILS500 F into service.


Notice

Start-up time for the leak detectors can be up to 10 minutes, depending on the condition.


4.1 Placement of the ILS500 F



Place the ILS500 F on a flat surface, as close as possible to the test fixture and ventilation system.

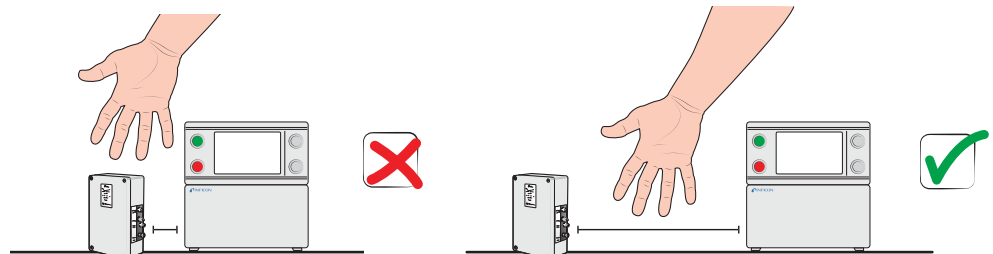

Some free space must be provided around the ILS500 F to enable maintenance and service access.

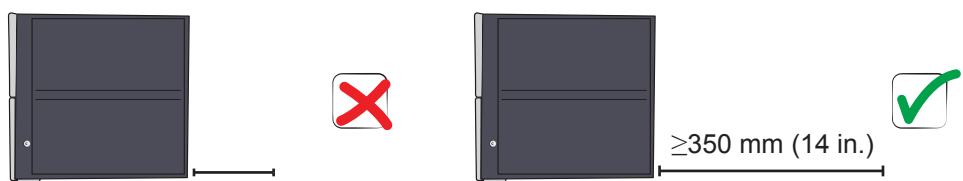


Ensure that there is at least 350 mm (14 in.) of free space behind the ILS500 F to enable removal of service hatches, connection of supplies, test fixture etc.


Notice The front feet under the ILS500 F can be flipped out to raise the front for a better viewing angle.

4.2 Electrical Connections

4.2.1 Setting Up an Emergency Stop

 **Caution**

To short-circuit is not recommended and should only be made for preliminary testing before connecting compressed gases or test tooling with moving parts.

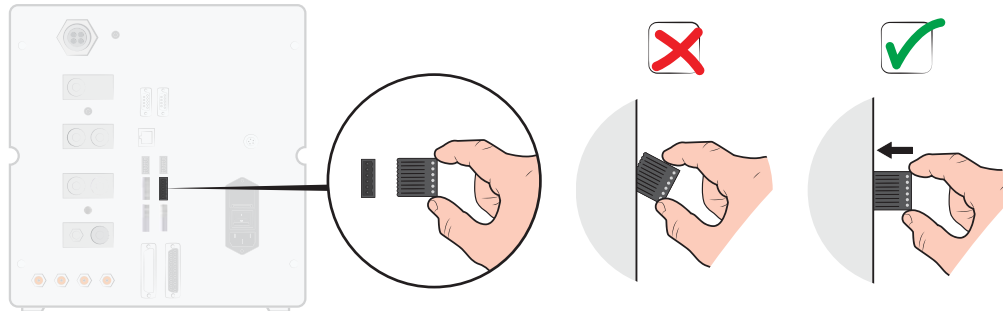


You have the following two options to prepare the ILS500 F for start:

- Connect the ILS500 F through an external emergency stop relay.
- Short circuit the SAFE SPLY terminal to “+24 V” on the Safety Connector. Use the Safety Override Loopback delivered with the unit.

Notice ILS500 F will not start testing unless an emergency circuit has been installed. This is ordered separately. For more information, see on page 89.


4.2.2 Connecting to Mains

- 1 Plug the Power Cable into the Power Inlet of the ILS500 F and into the nearest socket.

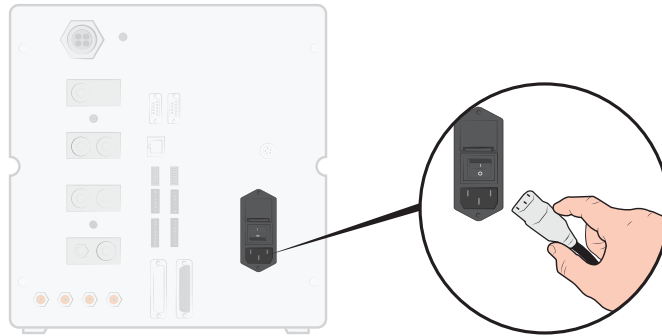


4.2.3 Connecting Extra Features

When using the ports for Options, Status, Tooling and Control, make sure to mount the connectors as shown below.

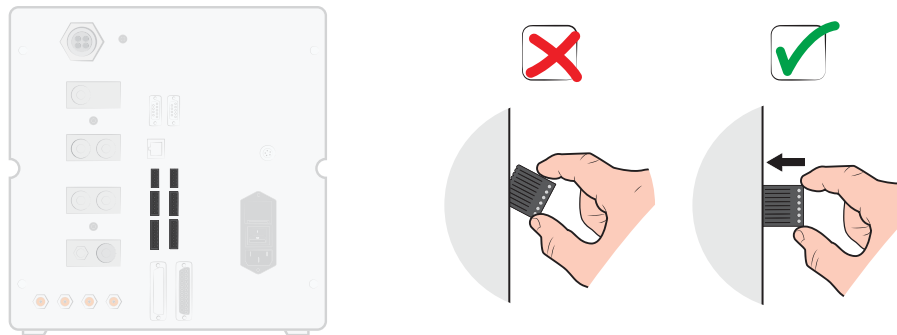

Top pin is number 1

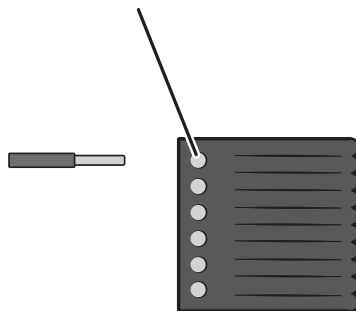

For more information about the connection ports, see on page 75.

4.3 Pneumatic Connections

4.3.1 Connecting Compressed Air



Caution


Make sure that compressed air is dry, well filtered and oil free. Recommended filter grade is 5 µm or finer. Inadequate filtering will result in increased maintenance.



Caution

Make sure to use adequate pressure and flow. For more information, see on page 76.

- 1 Use the hose to connect the compressor and the ILS500 F.

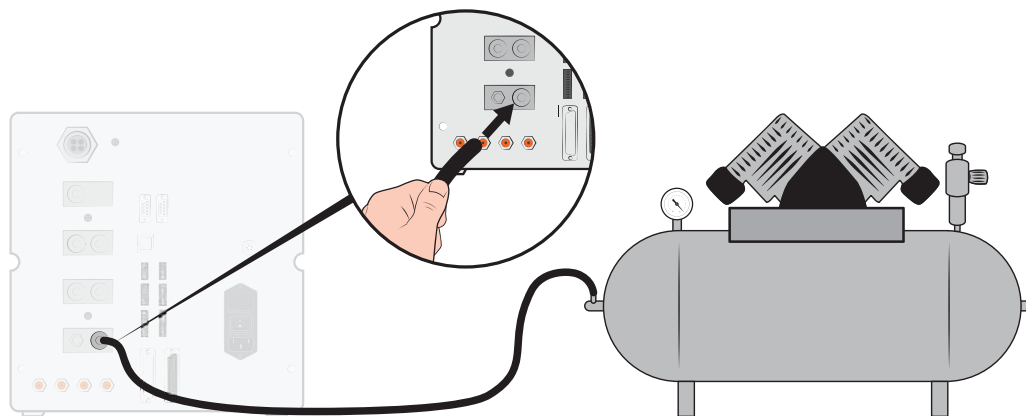

ninp69en1-01 (1508)

4.3.2 Connecting Tracer Gas



Warning


Pressurizing objects at too high pressures can result in a burst object. This in turn can result in serious injury or even death. Never pressurize objects that have not previously been burst tested or otherwise approved for the chosen test pressure.




Warning

Tracer Gases can be flammable or asphyxiating. Use only ready-made Tracer Gas mixtures.


- 1 Secure gas cylinder safely.
- 2 Open the cylinder valve briefly to blow out dirt that may have collected in the outlet.
- 3 Install the two stage gas regulator on cylinder.

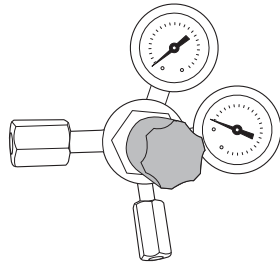


- 4 Turn regulator fully counterclockwise for zero output pressure.

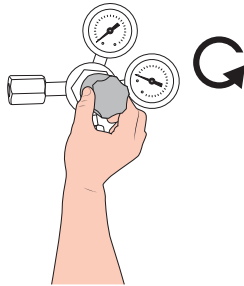

- 5 Connect a regular welding gas hose or similar between the Tracer Gas Port and the pressure regulator. Check that the hose is certified to withstand the maximum output pressure of the regulator.

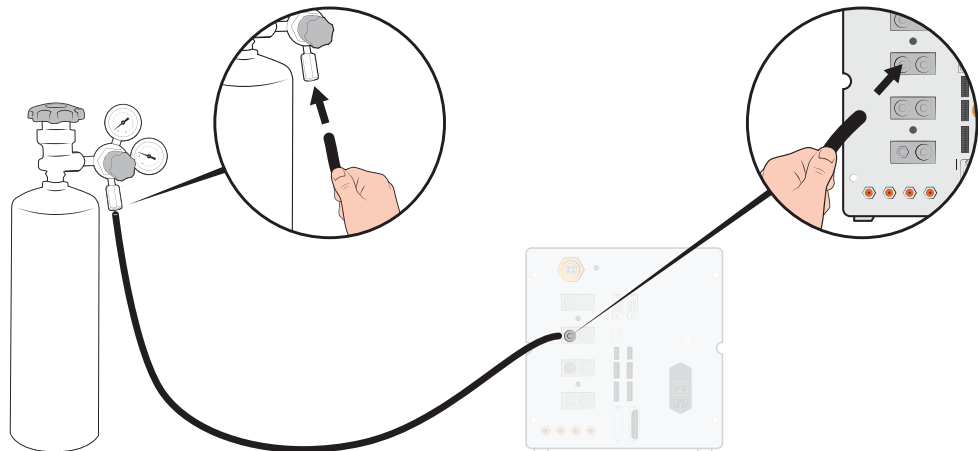


- 6 Open cylinder valve and set regulator to desired pressure. See warning banner!

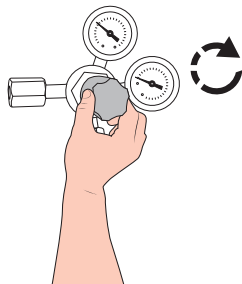

- 7 Open regulator outlet valve (if any).

4.3.3 Connecting Exhaust to Air Vent

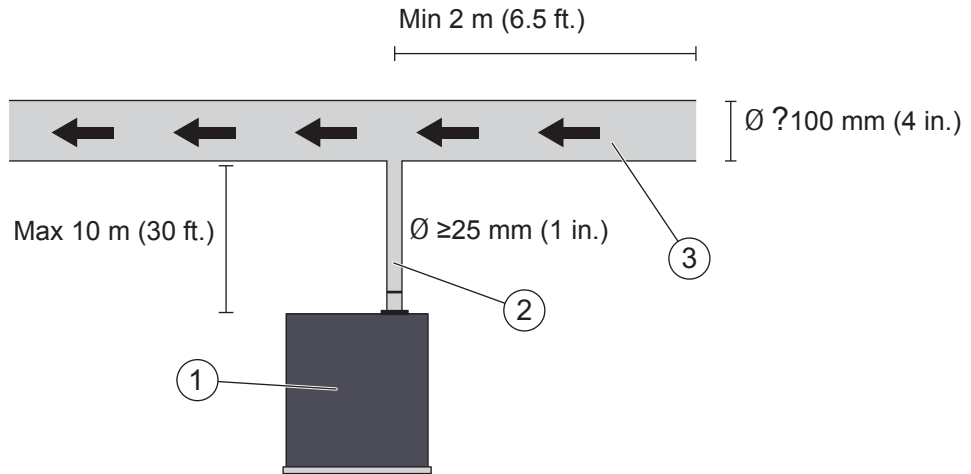

Exhaust Recommendation


- | | |
|---|--------------|
| 1 | ILS500 F |
| 2 | Exhaust Hose |
| 3 | Bleed Air |

- The exhaust gas must be directed out of the building. It is best placed on the roof of the building, far away from the fresh air intake of the test station.
- It is recommended that a dedicated duct is installed. Install an electric duct fan and an optional wind extractor.
- It is not recommended to use the general ventilation system to ventilate the exhaust. If the ventilation system is equipped with energy recirculation there is a big risk that large amounts of tracer gas will be carried back to the test room thus disturbing the testing.

Notice Inadequate exhaust installation is the most common reason for problems with tracer gas leak testing.

Too narrow or too long exhaust line will result in reduced evacuation capacity and thereby increased cycle time.

4.3.4 Connecting to Test Port 1 and 2

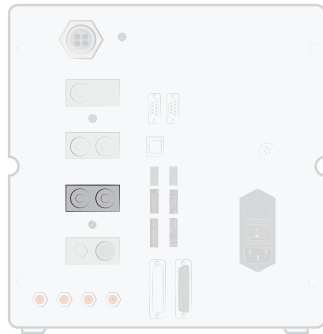

- Use both Test Ports if applicable.
- Hose ID ≥ 8 mm (0.31 in.).
- The hoses should be as short as possible.

If the test object has 2 or more ports, connect to ports on opposite sides of object.


Notice The larger the test object, the more important to follow the recommendations above.

4.3.5 Connecting Tooling



Warning

Be aware that the faster the connection is made, the higher the risk for injury. Be careful and install guards etc, according to local legislation and safety standards so that your fixture is safe to use.

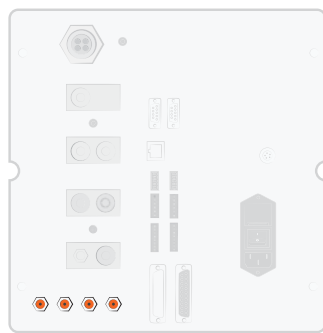

Tooling Valve Outputs 1-4 is available for connection of external Tooling.

4.4 Connect External Leak Detector

Notice

When external leak detector is connected, some settings must be updated. These settings are made in the Hardware Setup menu.

Start-up time for the leak detectors can be up to 10 minutes, depending on the condition.


Connect External ISH2000

External ISH2000 is connected to the Probe Control port and Leak Detector port. For more information about the connections and cables, see on page 86.

Connect External T-Guard

External T-Guard is connected to the Leak Detector port. For more information about the connection and cable, see on page 86.


4.5 Set Up Test Area

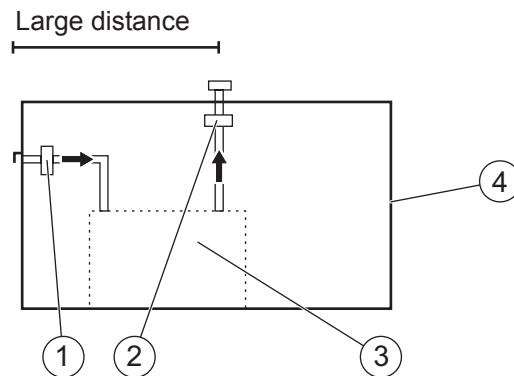

Test Area Recommendation

- | | |
|---|---------------|
| 1 | Fresh Air Fan |
| 2 | Exhaust Fan |
| 3 | Test Area |
| 4 | Test Building |

- Place fresh air intake on outer wall of building.
- Place air intake far away from tracer gas exhaust, cargo bays, and other tracer gas sources.
- Already tested objects may contain small amounts of tracer gas, which may interfere with next measurement.
- Do not use compressed air as fresh air supply when a hydrogen mixture is used as tracer gas. Industrial compressed air can contain varying and substantial amounts of hydrogen.

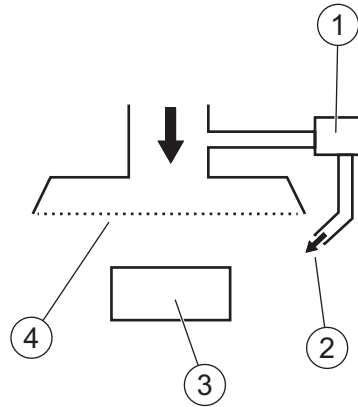


Fresh Air Curtain Recommendation

- | | |
|---|---------------|
| 1 | Fan |
| 2 | Local Air Jet |
| 3 | Test Object |
| 4 | Filter |

-
- Try to create a laminar flow over the test area.
 - Curtain should cover the entire test area (test hood or sample point) and extend at least 0.5 m outside the area.
 - Air speed in curtain should be rather low, typically 0.1 m/s.
 - Additional small fan(s) can be set up within the curtain for directional purging of test chamber etc.

5 Menu System

5.1 ILS500 F Display

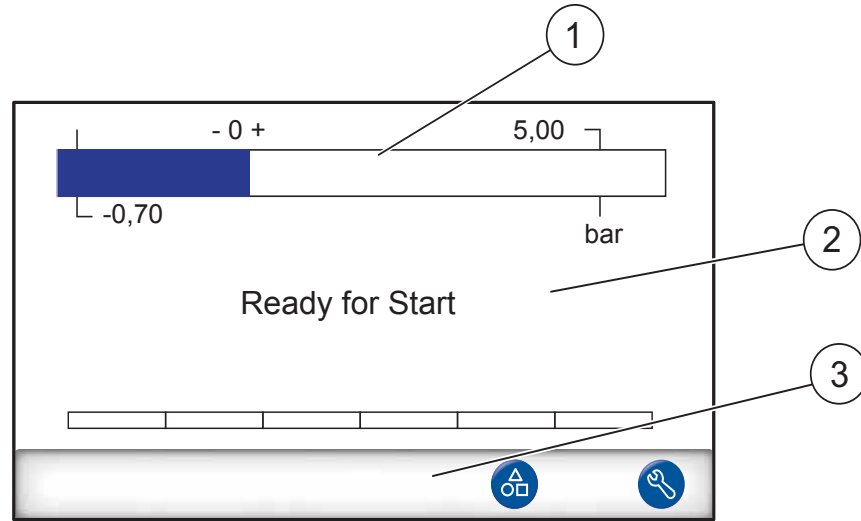

- 1 Status Bar
- 2 Main Display
- 3 Navigation Button Bar (varies depending on menu)

5.1.1 Menu Buttons

Use the menu buttons for quick navigation.



Home



Load Recipe



Settings


5.1.2 Navigation and Other Buttons

- | | | | |
|--|--|--|---------------------------------------|
| | Go Back | | Escape
(changes will not be saved) |
| | Previous Page
(changes will be saved) | | Next Page |
| | Activated | | Unactivated |
| | Selected | | Deselected |
| | Save
(only shown if usb is connected) | | Load |
| | Open switch | | Closed switch |

5.1.3 Entering Numbers and Text

To change a value:


- 1 Click on the value.
A numeric or alphanumeric on-screen keyboard will open.
- 2 Enter the desired digits or characters.
- 3 Click on the enter symbol to store the new value.

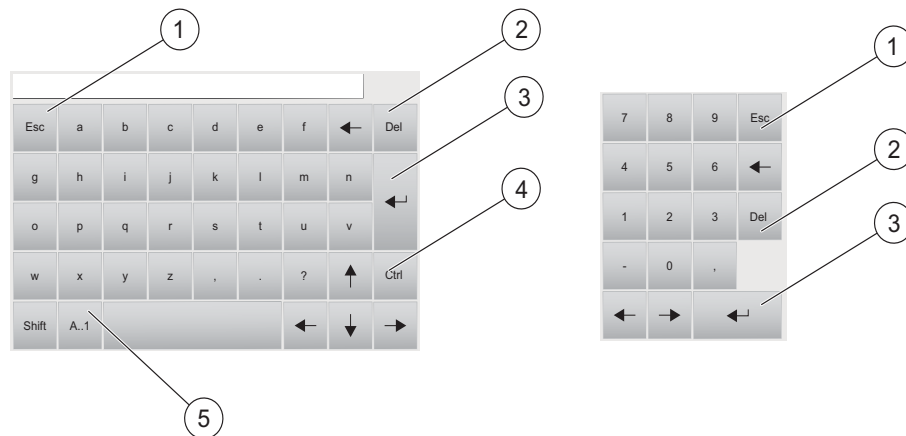

- 1 Escape
- 2 Delete
- 3 Enter
- 4 Control
- 5 Upper/Lower Case and Numbers

5.2 Passwords

To access the menus, use default password "1234" for "Service". The password can be changed under Settings / Advance Settings / Passwords.

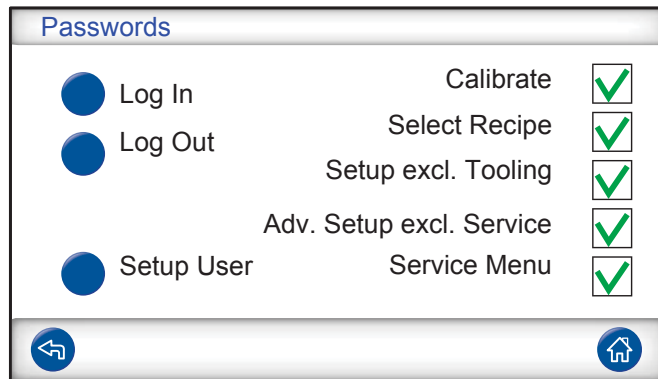

Notice

Remember to change the passwords of all menus you want to protect. Anyone using this manual can access the system if you keep the default password.

5.2.1 Set Up New User

- 1 Click **Settings >> Advance Settings >> Passwords** to enter Passwords menu.
- 2 Click **Log In** and log in as Service.
- 3 Click **Setup User**.
- 4 Click **Add**.
- 5 Fill in user name and password for new user.
- 6 Click **Next**.
- 7 Select Security Group by checking the appropriate boxes.
- 8 Click **Finish**.

5.3 Menu Overview


For information about parameter factory default settings, see on page 97.

Notice If the instrument is equipped with a Leak Detector ISH2000, some settings are blocked. These settings are made via the ILS500 F operator panel.

Load Recipe		
Settings	Hardware Setup	
	Test Settings	
	Tooling Connection	
	Pre Evacuation	
	Gross Leak Test	Vacuum Decay Test
		Pressure Decay Test
	Tracer Gas Filling	
	Blockage Test	
	Tracer Gas Test	
	Gas Evacuation	
	Tooling Disconnection	
	Advanced Settings	
	Timers	
	Pressures	
	Options	
	ISH2000	
	Service Menu	Outputs
		Inputs
		Analog Inputs
		System Reset
		ILS500 F
		RS232
		Service Run
	Hardware Test	
Passwords		
IP-Settings		
Calibration Settings		
Recipes		
Statistics		
Region	Time Zone, Region and Daylight	
	Time and Date	
	Language	
Info		

ninp69en1-01 (1508)

Settings

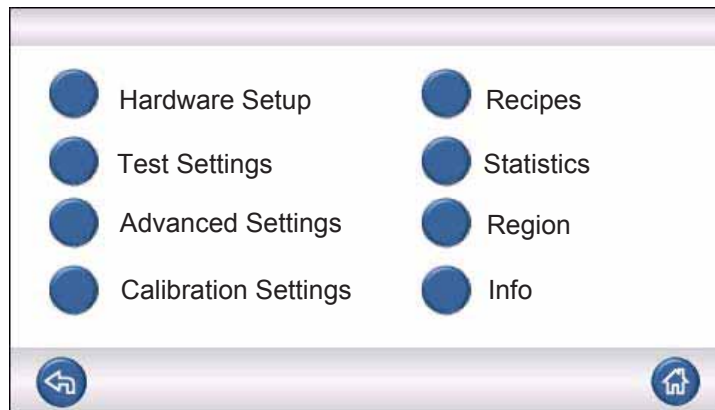


Hardware Setup




Hardware setup.

Test Settings

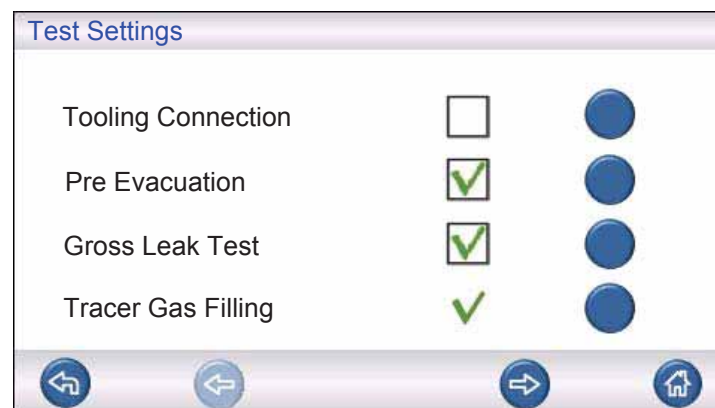


For more information see chapter 7 on page 41.

Advanced Settings

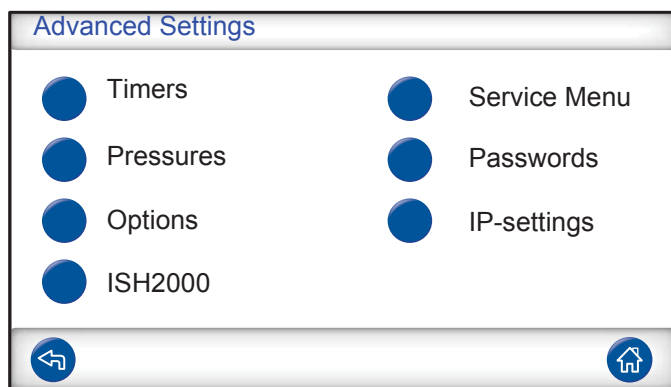

Advanced settings to fine tune the fill cycles and settings for service staff.

Calibration settings

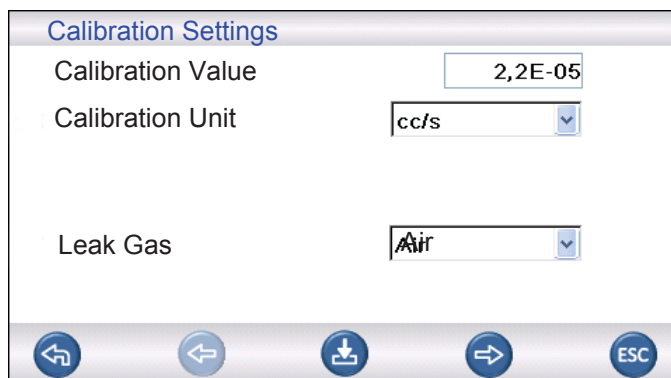

For more information, see chapter 10, "Service"

Recipes



For more information, see chapter 9, "Maintenance Instructions".

Statistics

Statistics

Total:	0	
Accepted:	0	
Rejected:	0	

Evacuation:	0	
Vacuum Decay:	0	
Blockage:	0	
Gas Fill:	0	
Pressure Decay:	0	
Gas Test:	0	

Print
 Reset
 Press 3 sec

Information about test statistics and number cycles events during a test period.
 For more information see on page 37.

Region

Region Settings

2015-04-17 12:56:20

- Time Zone, Region and Daylight
- Time and Date
- Language

Regions settings.

Language


Language

English	Swedish
Japanese	Italian
German	

Language settings.

ninp69en1-01 (1508)

Info

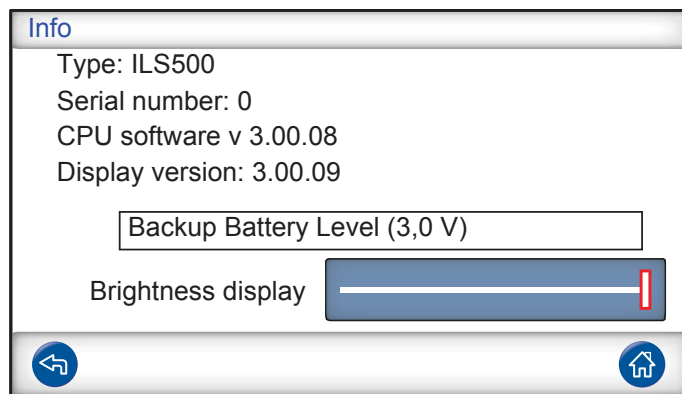

Info

Type: ILS500
Serial number: 0
CPU software v 3.00.08
Display version: 3.00.09

Backup Battery Level (3,0 V)

Brightness display

Instrument information, software versions, battery status and display light settings.

6 Using the ILS500 F



Warning

Ensure that the tracer gas supply pressure (feeding the ILS500 F tracer gas inlet) is set up properly.



Caution

To abort a test sequence and reset to standby, press STOP for 3 s.

Notice

The following description is an example for illustration only. The design of the test fixture, the use of probe(s) and tooling functions etc. should be adapted to suit your particular application.

6.1 Test Sequence

Step	Comment
1 Standby	ILS500 F is idle waiting for Start Signal.
2 Tooling Connection	Four Air Valves and four Proximity Switch Inputs can be set up to control moderate test fixtures. Controller can be expanded for more demanding fixtures.
3 Pre Evacuation Gross Leak Test 1- Evacuation Timeout	<p>The air is evacuated from the test object and a first gross leak test is made simultaneously. The Gross Leak tests are used to detect larger leaks by pressure changes.</p> <p>Evacuation is often necessary to ensure that the Tracer Gas reaches all parts of the tested object, and to secure that the tracer gas concentration is as high as possible.</p> <p>Applicable for:</p> <ul style="list-style-type: none"> • very long objects (e.g. pipes or heat exchangers). • low fill pressures (<1 atm). <p>Less appropriate:</p> <ul style="list-style-type: none"> • if the test object does not tolerate underpressure. • at higher test pressures (Fill Setpoint).
4 Gross Leak Test 2- Vacuum Decay Test	Can be used to reveal leaks before filling with gas. This minimizes spillage from gross leaks.

Step	Comment
5	Tracer Gas Filling Tracer gas filling before gas test.
6	Blockage Test <ul style="list-style-type: none"> Reveals internal blockages in tested object. Ensures that connection lines and test fixture are correctly connected. <p>The test object is filled through Test Port 1 while the pressure is recorded in Test Port 2. Practical for testing e.g. capillaries etc.</p>
7	Gross Leak Test 3-Gas Pressure Decay Test Performed in parallel with tracer gas test. Can be used for integral testing in parallel with a more sensitive gas test at selected points.
8	Leak detect pressurized test object Perform leak detection on the test object, pressurized with tracer gas.
9	Gas Evacuation For a fast removal of tracer gas after test. Can also include an efficient air purge.
10	Tooling Disconnection Disconnection of test fixture.

Notice Several of the steps are optional and can be turned off. Chosen settings can be saved as a Recipe. For more information, see on page 41. It is also possible to combine two recipes in one test sequence. Contact your local supplier for more information and individual settings.

ninp69en1-01 (1508)

6.2 Run a Test

The ILS500 F will communicate through the lamps and messages on the display.

Lamp	Status	Indication
Red	ON	Acknowledge a leak. Tested object rejected. General error.
Green	ON	Test sequence is over (and the tested object accepted if Leak Detector is connected.)
Yellow (START Button)	ON	The test sequence is running.

6.2.1 Start Up

- Turn the ILS500 F on.
- Wait for Ready to Start to show on the display.
- Click **Load Recipe** and choose a preset recipe, or follow the instructions in the section on page 41.

6.2.2 Place the Test Object

- 1 Place the test object in the Test Chamber or connect it to one, two or more connection ports.
- 2 Connect any extra equipment needed.

6.2.3 Perform Tracer Gas Filling



Caution

If ISH2000 is put into operation with ILS500 F the sensor withstands temporary exposure to hydrogen concentration up to 100%. Avoid long exposures to high concentrations.

Tracer Gas Filling



- 1 Press Start on the ILS500 F.
- 2 Perform a tracer gas leak test.
- 3 Press Stop on the ILS500 F to remove the tracer gas.

7 Recipes

A recipe is a collection of settings suited for a particular test setup. This is used to have different settings for different test objects.

7.1 Recipe Overview

Click **Settings >> Recipes** to enter the three Recipe Setup menus.

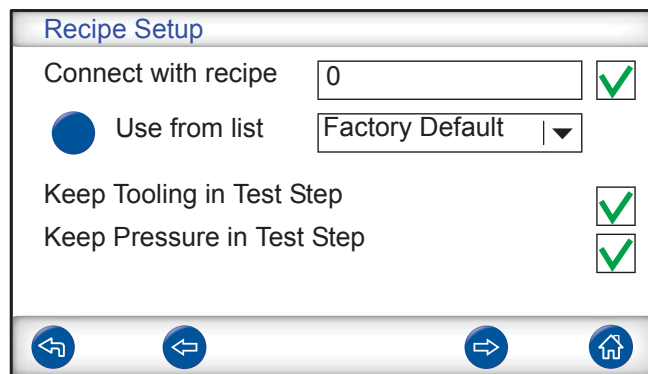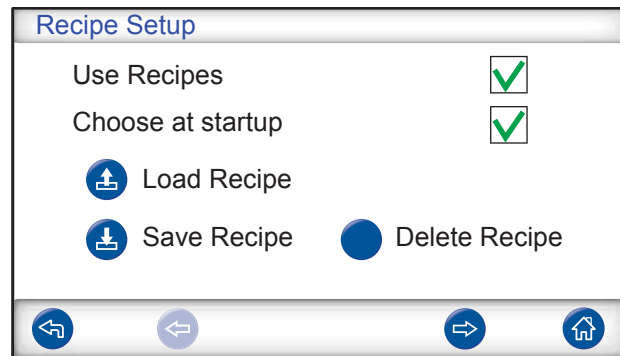

- | | |
|-------------------|--|
| Use Recipes | Select the box to activate the recipe handling. |
| Choose at Startup | When power is switched on, the ILS500 F prompts the operator to choose recipe. |
| Load Recipe | Loads the parameters of chosen recipe. A new window will open. |
| Save Recipe | Saves the current settings under chosen recipe name. A new window will open. |

ninp69en1-01 (1508)

Delete Recipe	Deletes the chosen recipe. A new window will open.
Connect with Recipe	Connects two recipes to form one test cycle. Write the name of the recipe to be included, or choose one from the list in Use from list.
Use from list	Shows all saved recipes. By clicking the blue button the recipe displayed is added to Connect with recipe.
Keep Tooling in Test Step	Excludes the disconnection step in the first recipe when two recipes are connected as described above.
Keep Pressure in Test Step	Retains gas pressure between two recipes.
Import from USB	Imports recipes from connected USB memory.
Export to USB	Exports all recipes to an editable file on connected USB memory.

7.2 Create a Recipe

7.2.1 New Recipe



- 1 Click **Settings >> Hardware** to enter the Hardware menu.
Set the correct hardware.
- 2 Set all ILS500 F settings for the test sequence.
For more information, see on page 43.
- 3 Click **Settings >> Recipes** to enter the three Recipe Setup menus.
- 4 Click **Save Recipe**.
- 5 Enter a name for the recipe.
- 6 Click **Save**.

7.2.2 Modify a Recipe

- 1 Click **Settings >> Hardware** to enter the Hardware menu.
Set the correct hardware.
- 2 Click **Settings >> Recipes >> Load Recipe**.
- 3 Select the recipe to modify from the list and click **Load**.
- 4 Adjust the ILS500 F settings to suit the new recipe.
For more information, see on page 43.
- 5 Click **Settings >> Recipes >> Save Recipe**.
- 6 Enter the name of the new recipe.
- 7 Click **Save Recipe**.

7.3 Test Settings

- 1 Click **Settings >> Test Settings** to enter the two Test Settings menus.

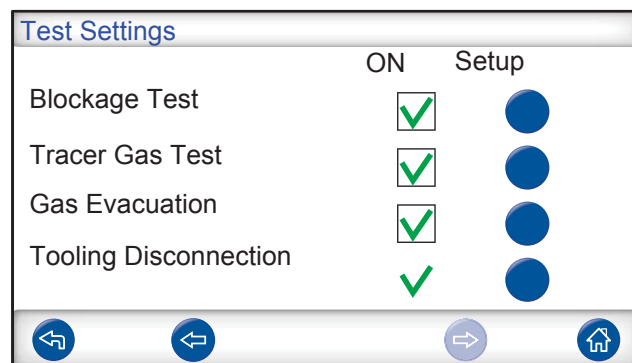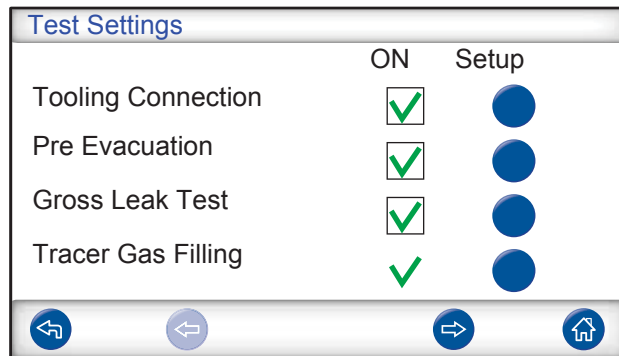


- 2 Set which steps to include in the test sequence by selecting the ON boxes.
- 3 Click **Setup** to the right of each selected step to enter the Setup menus.

Notice For more information about each step, see on page 37.

7.3.1 Tooling Connection


Connection Sequence menu shows the settings made for Tooling Connection.

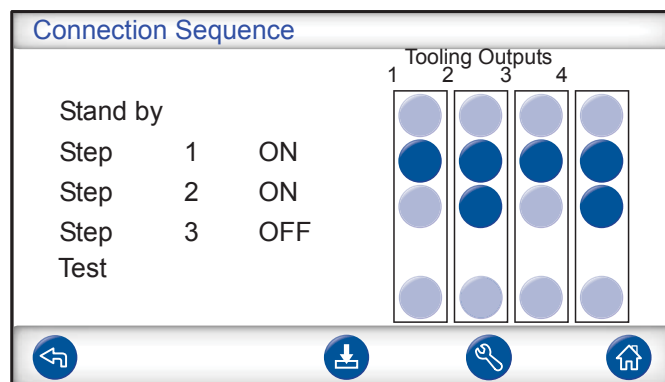

- 1 Click on the **Settings** symbol to edit the settings.


Notice Up to four connection steps can be programmed.

Stand-By

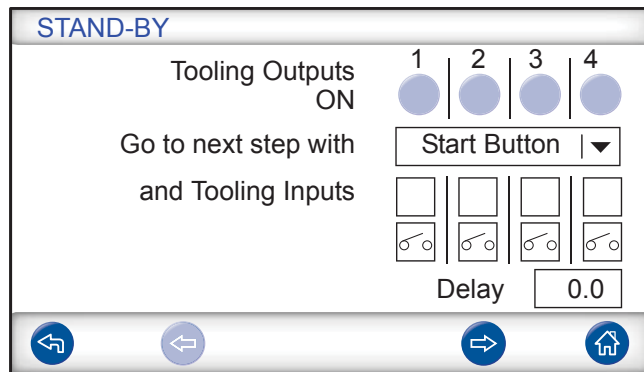

- 1 Click on the Tooling Outputs to be activated in stand-by (between tests).
- 2 Choose how to move on to the next step.
 - Set action in list.
 - Select Tooling Inputs.
- 3 Set desired delay time.

Connection Step 1 — 3

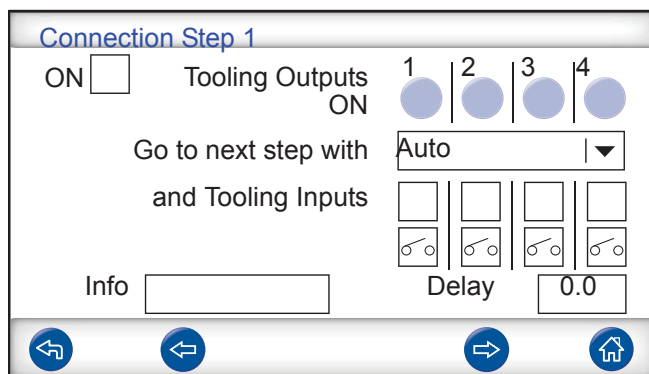

- 1 Select the ON check box to activate the step.
- 2 Click on the Tooling Outputs to be activated.
- 3 Choose how to move on to the next step.
 - Set action in drop-down-list.
 - Select the appropriate check box(es) for the Tooling Inputs. Then set “Open” or “Closed” status for each switch symbol.
- 4 Enter a text to describe the step (click the Info field to activate the on-screen keyboard).
- 5 Set desired delay time.

Test Step

- 1 See Connection Step 1 - 3 above and follow the instructions.

7.3.2 Pre Evacuation

Pre Evacuation Setpoint

A value of -0.70 bar (-0.07 MPa, -10 psi) is adequate for most applications. This creates 70% vacuum.

Extended Pre Evacuation

To ensure a complete filling. Evacuation will continue for the set time after Evacuation Level has been attained.

7.3.3 Gross Leak Tests

Gross Leak Test

Evacuation Timeout s

Vacuum Decay Test - before gas test

Pressure Decay Test - during gas test

- | | |
|---------------------|---|
| Evacuation Timeout | Object will be rejected if Pre Evacuation Setpoint is not attained within time set. |
| Vacuum Decay Test | If to be included in the test sequence, select the box and click the blue button to enter Pressure Decay Test setup menu (see below). |
| Pressure Decay Test | If to be included in the test sequence, select the box and click the blue button to enter Pressure Decay Test setup menu (see below). |

Vacuum Decay Test

Vacuum Decay Test

Vacuum Stabilisation Time s

Vacuum Decay Test Time s

Vacuum Decay Limit bar

- | | |
|---------------------------|--|
| Vacuum Stabilisation Time | Delay time before Vacuum Decay test begins. |
| Vacuum Decay Test Time | Time during which pressure rise is recorded. |
| Vacuum Decay Limit | Allowed pressure rise during test time. |

Pressure Decay Test

Gas Pressure Decay Test

Pressure Stabilisation Time s

Pressure Decay Test Time s

Pressure Decay Limit bar

Pressure Stabilisation Time	Delay time before Pressure Decay test begins.
Pressure Decay Test Time	Time during which pressure drop is recorded.
Pressure Decay Limit	Allowed pressure drop during test time.

7.3.4 Tracer Gas Filling

Warning

The ILS500 F must never be introduced to pressures higher than that approved for the object to be tested and never beyond the ILS500 F specification.

Notice

Ensure that the test object has time to become filled before Fill Time Out expires. In particular long narrow objects, as pipes, may need long filling time.

Tracer Gas Filling

Fill Setpoint bar

Fill Timeout s

External Fill Regulation


Pressure Unit

Fill Setpoint	Desired tracer gas fill pressure.
Fill Timeout	Object will be rejected if Pressure Setpoint has not been attained within this time.
	Cancels the fill if the test object has a major leak, opens, or if there are loose connections.

External Fill Regulation	If selected, this is the setpoint of fill pressure alarm. Internal pressure regulation is disengaged and pressure will be that of the gas supply line. ILS500 F checks that fill pressure is above Pressure Setpoint before proceeding to gas test step.
Pressure Unit	Select desired unit.


7.3.5 Blockage Test

Notice This test can only be performed if both test ports are used and connected on either side of the possible blockage.

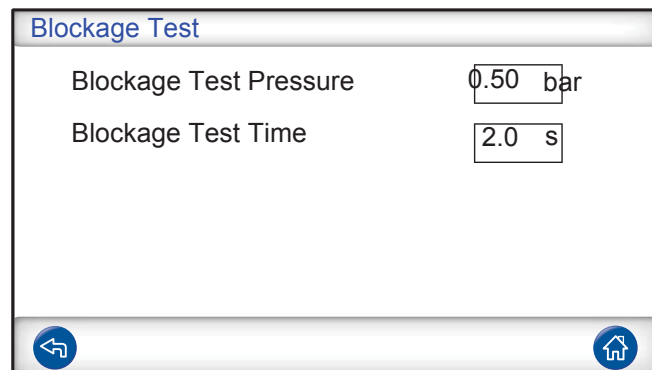

Blockage Test Pressure	Minimum pressure to be attained at Test Port 2 during Blockage Test time.
Blockage Test Time	Time within which Blockage Test Pressure must be attained at Test Port 2.


7.3.6 Gas Evacuation

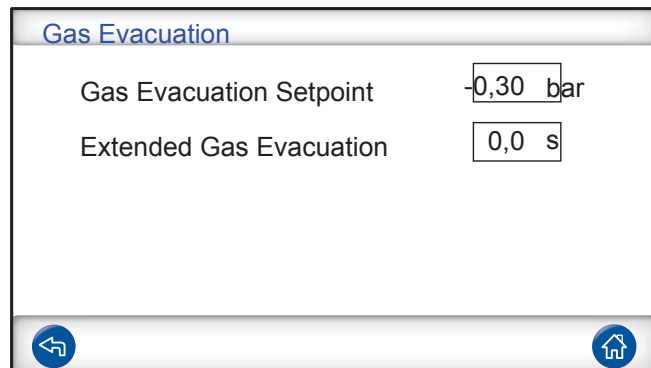

Gas Evacuation Setpoint	Set desired level of Gas Evacuation. -30 kPa (-0.3 bar, -4.4 psi) creates 30% vacuum, which is adequate for most applications.
Extended Gas Evacuation	Extends time for gas evacuation, after Gas Evacuation Setpoint has been reached.

7.3.7 Tooling Disconnection

ninp69en1-01 (1508)

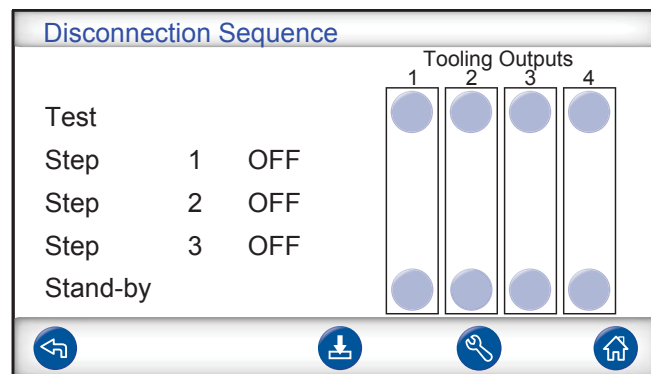

Same function as Tooling Connection but in reverse order.
For information about this step, see on page 43.

7.4 Optimizing the Test Cycle

Test Cycle can be divided in six main blocks:

- 1 Connection of Tested Object
- 2 Pre Evacuation of Residual Air
- 3 Filling with Tracer Gas
- 4 Tracer Gas Leak Test
- 5 Removal and Venting of Tracer Gas
- 6 Disconnection of Tested Object

This section is a guide for optimizing step 2, 3 and 5.

7.5 Optimizing the Pre Evacuation Step

Notice The fastest way to fill a pipe like object is to use push-through filling. That does not require pre evacuation.

Begin to determine how deep the pre evacuation needs to be, or if it can be skipped altogether. To do this it is important to fully understand the role of pre evacuation.

When the test object is connected it holds one atmosphere of ambient air. It is often necessary to remove some or most of this air before filling with tracer gas.

There are two effects of not removing the air (i.e. pre evacuating):

- 1 the actual tracer gas concentration will be reduced
- 2 tracer gas does not reach all parts of the object

7.5.1 Calculate Tracer Gas Concentration

Example:

The fill pressure is 0.05 MPa (7.2 psi) above atmosphere (gauge pressure). The object has 1 atm = 0.1 MPa of air before filling.

Leaving this air in the object means the average tracer gas concentration will be:

A = Fill Pressure

B = 1 atm

C = Tracer Gas Fill Factor

$$\frac{A}{A + B} = C$$

$$\frac{0,05}{0,05 + 0,1} = 0,33$$

The average tracer gas concentration in this example is only a third (33%) of what expected.

When using a tracer gas mix of 5% the result will be:

$$0.33 \times 5\% = 1.7\%$$

Pre evacuating down to -0.7 atm (-0.07 MPa) means there will be 0.3 atmospheres (0.03 MPa) of residual air in the object before filling. This gives the following average concentration:

- A = Fill Pressure
- B = 1 atm
- C = Tracer Gas Fill Factor
- D = Evacuation Pressure

$$\frac{A + D}{A + B} = C$$

$$\frac{0,05 + 0,07}{0,05 + 0,1} = 0,8$$

The average tracer gas concentration in this example will be 0.8 (80%). When using a tracer gas mix of 5% the result will be:

$$0.8 \times 5\% = 4\%$$

This is almost twice of that achieved with no pre evacuation.

7.5.2 Example - Calculate Tracer Gas Filling

The air left in the object can not always be expected to mix evenly with the injected tracer gas. This is especially so for tube shaped objects such as pipes etc. The flow inside a regular “tube” is predominantly laminar. This means no or very little turbulence occurs. Air left in the “tube” will therefore be pushed in front of the injected tracer gas and end up in the remote end of the “tube”.

Example:

The test object is an aluminium pipe for a refrigerator with brazed copper ends. The joints between copper and aluminium must both be tested.

Fill pressure is 0.5 MPa (72 psi). Length is 10 m (33 ft.). Skipping pre evacuation we will have:

- A = Fill Pressure
- B = 1 atm
- E = Air left in the object

$$\frac{B}{A + B} = E$$

$$\frac{0,1}{0,5 + 0,1} = 0,17$$

of air left in the pipe. This is equivalent to 1.7 m (5.7 ft.) of the total length if no turbulence occurs during filling. There is an evident risk that there will be only air inside one of the joints, which means that a leak there will remain undetected.

Pre-evacuating down to -0.7 atm (-0.07 MPa) means there will be 0.3 atmospheres (0.03 MPa) of residual air in the pipe before filling.

We will now have:

$$\frac{B}{A + B} = E$$

$$\frac{0,03}{0,5 + 0,03} = 0,056$$

of air left in the pipe. This is equivalent to 0.57 m (1.9 ft.). This air volume is normally small enough to be mixed into the tracer gas by turbulence and diffusion.

7.6 Optimizing the Tracer Gas Filling

Regulation of the tracer gas pressure can either be controlled by:

- the ILS500 F
- an external pressure regulator

Notice The ILS500 F is set to regulate internally as default.

7.6.1 External Pressure Regulation

Notice External Pressure Regulation does not support recipes with different test pressure (i.e. Fill Setpoints).

External regulation is recommended mainly for very small objects (<50 cc).

Tracer gas pressure is controlled by external regulator. ILS500 F opens a path between the gas feed line and the test object. The pressure will equate and the tested object will attain the pressure delivered by the external regulator. ILS500 F checks that the fill pressure is above Fill Setpoint before proceeding to the next test step.

7.6.2 Internal Pressure Regulation

Tracer gas pressure can be set to be controlled by the ILS500 F. Internally regulated filling is generally faster than externally regulated. The reason for this is that the feeding pressure can be set higher than Fill Setpoint which results in a higher fill flow.

8 Troubleshooting


8.1 Fault Symptoms

Fault Symptom	Fault	Measures
Evacuation Failed	Failed to reach vacuum within the specified time. Large leak on Test Object or connections.	Check the compressed air supply.
Gas Fill Failed	Failed to fill to the right pressure within the specified time. Large leak on Test Object or connections.	Check the incoming gas pressure.
Gas Refill Failed	Failed to refill the object. Large leak on Test Object or connections.	Check the incoming gas pressure.
Gas Evac Failed	Failed to reach vacuum within the specified time.	
HW Error During Test	Serious error has occurred during test.	Check external equipment, e.g Active Probe.
Test Timeout	Maximum time for the test was exceeded.	Check that time is correctly set.

8.2 Perform Hardware Test

Notice

Before performing the hardware test, carefully check that your tracer gas and compressed air feed pressures are correct. Wrongly set pressure can cause erroneous test results.

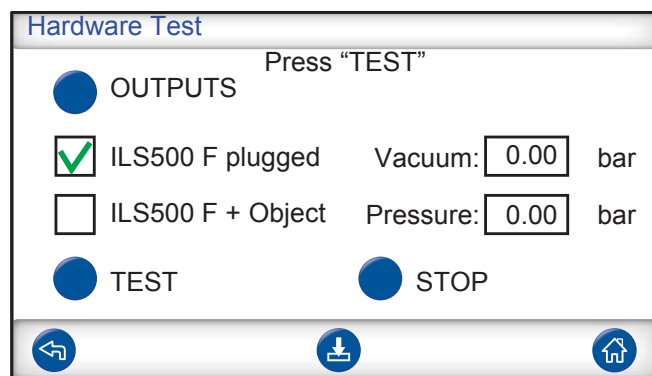

- For troubleshooting and testing of the system, use Service menu.
- For remote troubleshooting, use Service Run menu.
- Venturi Pump and all Gas Valves can be tested automatically.


The hardware test is a diagnostic tool helping you in preventive maintenance as well as service and repair. The test takes you through a number of steps testing all units that are subject to wear and should thereby help you to find almost any problem in the ILS500 F system.

Notice Run through the whole sequence to interpret the results correctly. You will need the reference table at the end of this section to help you interpret the test results correctly. Keep this manual at hand when performing the test.

You can choose to test according to the limits of your specific application.

- 1 Setup all parameters for your test object (or load desired recipe) and connect a leak free sample.
- 2 Set test selection switch to "ILS500 F + Object" for application specific hardware test. You can also test the ILS500 F against factory specification. In this case you should plug both test ports using the plugs delivered with the units. Remove ISO to NPT converters if installed and install the blind plugs. Set test selection switch to "ILS500 F plugged" for factory specified hardware test.
- 3 The "Continue" button will be displayed at the end of each test step. Press "Continue" for next test step.

Pressure and Vacuum Sensors

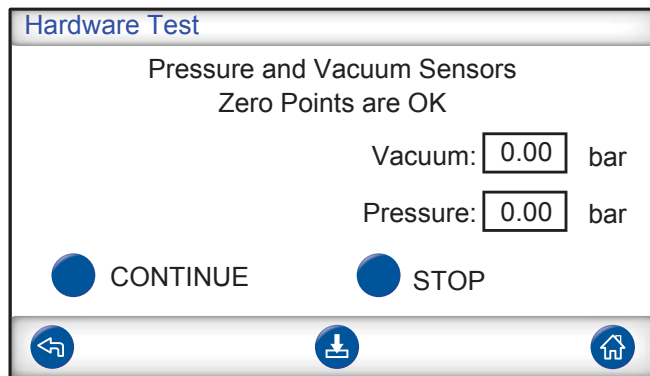

Zero points of pressure and vacuum sensors are tested.


Possible results:

- Zero Points are OK
- Vacuum Zero Point not OK

Offset zero point can result in:

- Incorrect gas filling
- Erroneous vacuum or pressure decay results

Evacuation Valve

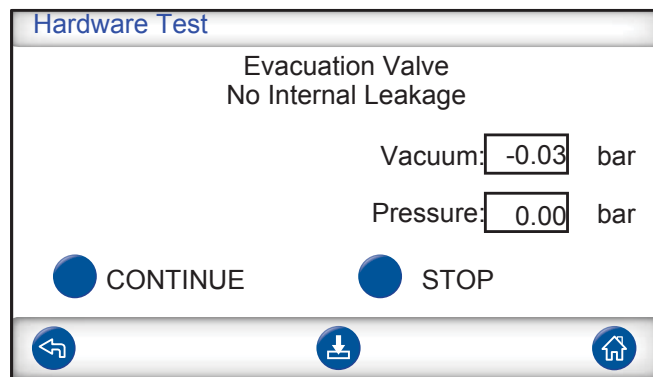

Evacuation valve is checked for internal leakage.


Possible results:

- No Internal Leakage
- Internal Leakage

Internal leakage can result in:

- False vacuum decay rejects
- Increased tracer gas consumption

Venturi Pump

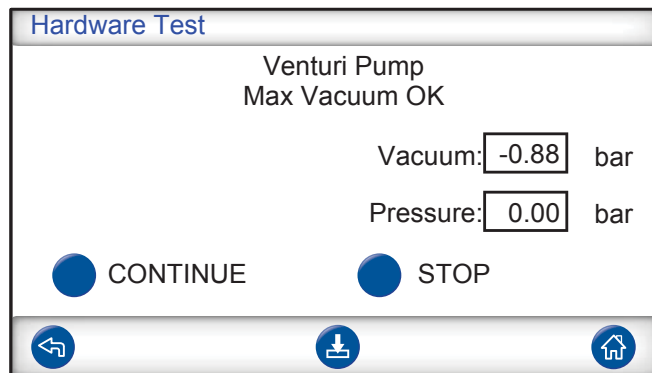

Checking max vacuum of Venturi pump.


Possible results:

- Max Vacuum OK
- Poor Max Vacuum

Poor max vacuum can result in:

- Failed pre-evacuation
- Slower evacuation

Manifold Tightness (gross)

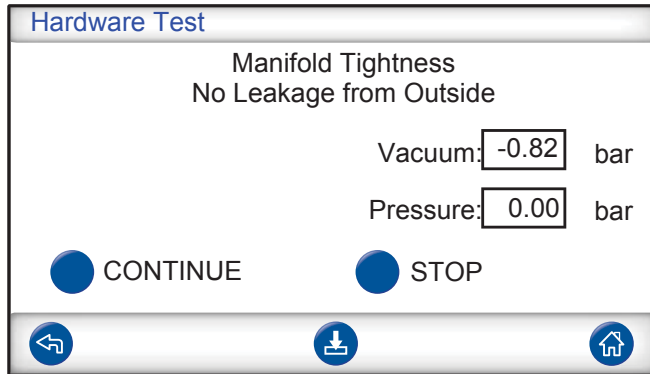

The overall tightness of the manifold is tested using the vacuum raise method.

Possible results:


- No Leakage from Outside
- Leakage from Outside

Leaks in the manifold can result in:

- False vacuum decay rejects
- Increased gas consumption

Minor external leakage will be found later during the gas test step.

Vacuum Sensor Valve

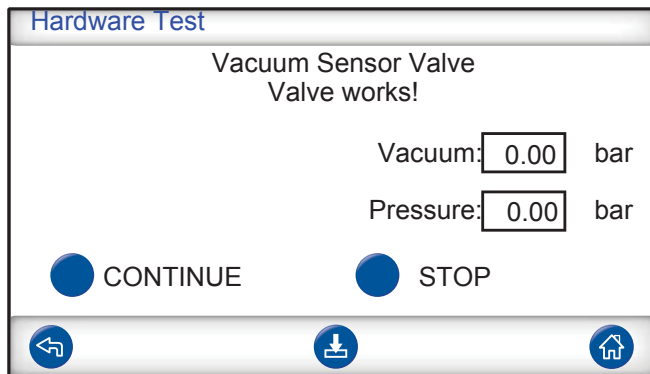

This checks that the valve shuts to protect vacuum sensor before filling.


Possible results:

- Valve works
- Faulty!

Malfunction can result in:

- Damage to vacuum sensor
- Failed pre-evacuation

Tracer Gas Fill Valve

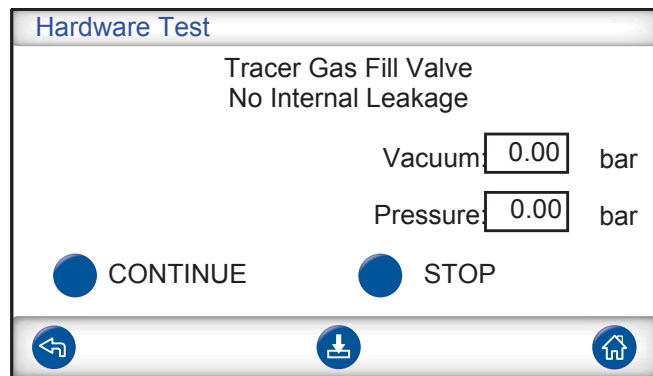

The step tests the gas fill valve for internal leakage by registering pressure rise behind the valve.


Possible results:

- No Internal Leakage
- Internal Leakage

Internal leakage can result in:

- Erroneous pressure decay results
- False vacuum decay rejects increased gas consumption

Test Port 2 Valve

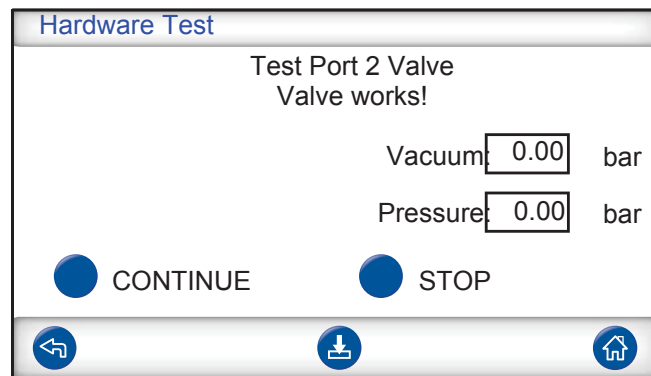

Notice

This test will fail if both test ports are connected to a test object. Proceed and then repeat the entire hardware test sequence with both ports plugged to perform this test step.

This step tests Test Port 2 valve for internal leakage by registering pressure rise behind the valve.


Possible results:

- No Internal Leakage
- Internal Leakage

Internal leakage can result in:

- False blockage test accepts

Tracer Gas Fill Valve

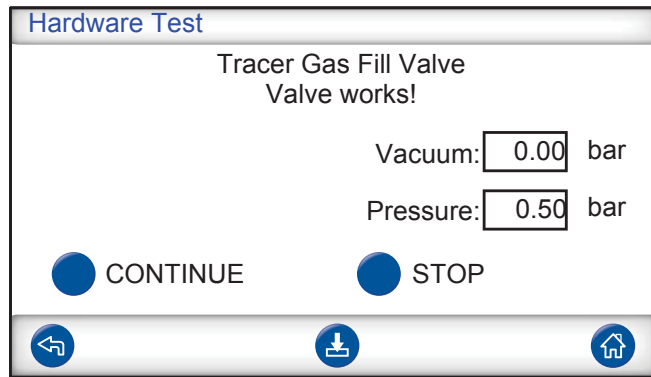

This step tests that tracer gas fill valve opens to fill gas. Test will fail if tracer gas feed pressure is too low. If this is the case, adjust pressure and restart hardware test from beginning.


Possible results:

- Valve works
- Faulty!

Malfunction will result in:

- Failed gas filling


External Gas Leaks

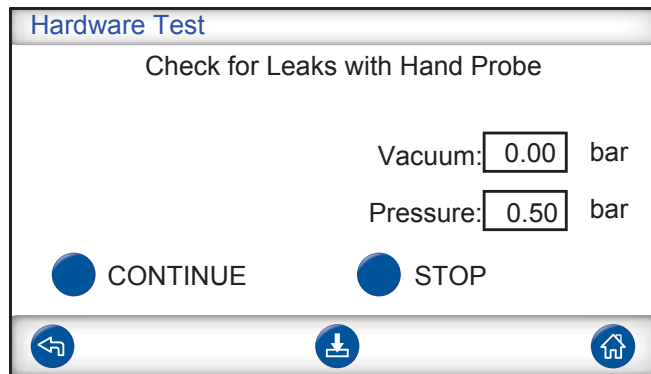

The ILS500 F is now prepared for a manual test for external leakage. Use a Leak detector with hand probe to check for leakage.

- 1 Start by checking all connections between the ILS500 F and your test object. Follow each test line carefully and check every joint.
- 2 Proceed to check around the gas valves and manifold inside the ILS500 F.

Manifold Tightness (gross)

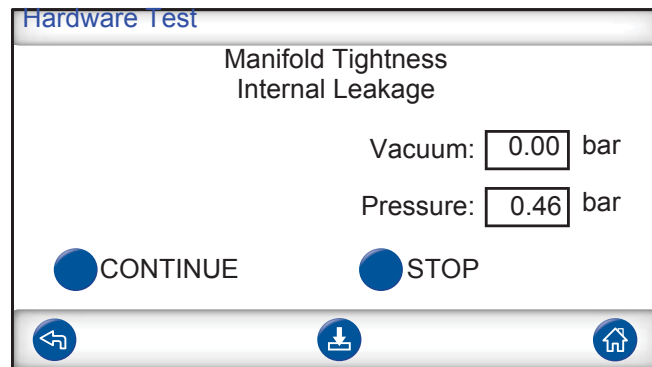

The overall tightness of the manifold is tested using the pressure decay method. This is a complement to the gas test, revealing leakage out, through the exhaust etc.


Possible results:

- No Internal Leakage
- Internal Leakage

Internal leakage can result in:

- False pressure and vacuum decay rejects
- Increased tracer gas consumption

Evacuation Valve

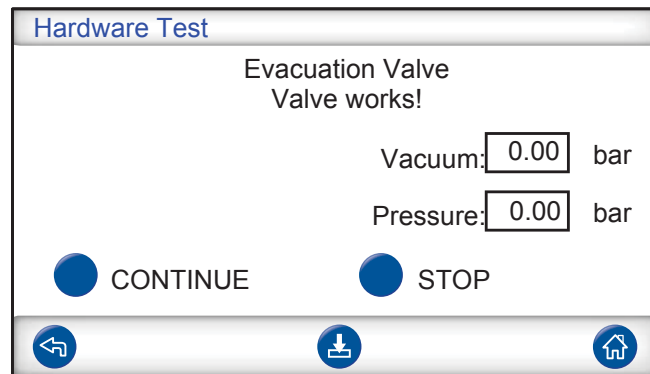

This step tests that evacuation valve opens to release tracer gas to exhaust. Same test as previously but under pressure instead of vacuum.

Possible results:

- Valve works
- Faulty!

Malfunction will result in:

- Failure to terminate test cycle

Indicator Lamps




Hardware Test

Lamp in Start Button
OK?

Vacuum: bar

Pressure: bar

CONTINUE STOP




Hardware Test

Green Lamp (Top Left)
OK?

Vacuum: bar

Pressure: bar

CONTINUE STOP




Hardware Test

Red Lamp (Bottom Left)
OK?

Vacuum: bar

Pressure: bar



CONTINUE STOP

This is a “manual” test. The ILS500 F lights up one lamp at the time. Simply check that the right lamp comes on.

- 1 Check function of each lamp by pressing “Continue”.

START and STOP buttons

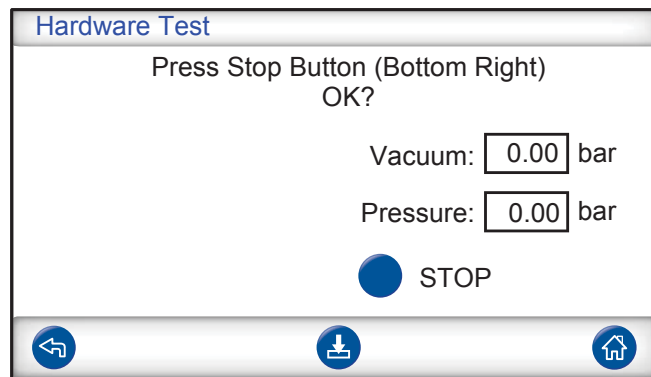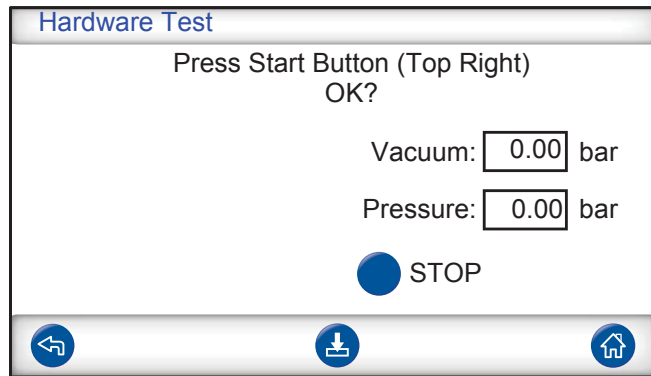

This is a “manual” test. The test continues when the correct button is pressed. The test checks the activated START and STOP buttons only. Use INPUT menu under Service menu to check buttons that are turned off.

8.2.1 Hardware Error Messages

Error Message	Reason for Error	Corrective Action*
Hardware Error Vacuum Sensor Error	No power to vacuum sensor.	Check cable to sensor.
	Sensor not connected to AD.	Check connection to AD.
	Damaged vacuum sensor.	Send in for repair.
Hardware Error Pressure Sensor Error	No power to pressure sensor.	Check cable to sensor.
	Sensor not connected to AD.	Check connection to AD.
	Damaged pressure sensor.	Replace sensor.
Analog Inputs Power Off	No power to AD module.	Check power cable on left side of AD module.

* Contact your supplier if the suggested action does not clear the error.

8.2.2 Interpretation of Hardware Test Results

Use the table below, to correct errors detected by the hardware test routine.

Tested Unit	Tested Feature	Reason for Error	Action
Evacuation Valve	Internal leaks	Dirty or worn valve seals.	Replace clean evacuation valve.
Venturi Pump	Maximum vacuum	Compressed air pressure too low or too high.	Adjust compressed air pressure.
		Dirt inside Venturi.	Remove and clean Venturi.
		Dirty or broken Venturi pilot valves.	Replace two upper valves in pilot ramp.
		Dirty or broken Evacuation pilot valves.	Replace fourth valve from bottom in pilot valve ramp.
Gas Valve Manifold	Leaks from outside	Leaks to outside.	Check for leaks with Hand Probe (later in hardware test sequence).
		If no gas leaks.	Check internal leaks in tracer gas fill valve.
		If no internal leaks in tracer gas valve.	Replace/clean vacuum sensor protection valve.
Vacuum Sensor Protection Valve	Function	No signal to pilot valve.	Check "Sensor Protect" output. Send in for repair.
		Dirty or broken pilot valve.	Replace valve third valve from bottom in pilot ramp.
		Vacuum sensor protection valve broken.	Replace valve.

ninp69en1-01 (1508)

Tested Unit	Tested Feature	Reason for Error	Action
Tracer Gas Fill Valve	Internal leaks	Dirty or worn valve seals.	Replace or clean tracer gas fill valve.
		Leaking pilot valve.	Replace fourth valve from bottom in pilot valve ramp.
Test Port 2 Valve	Function	Dirty or broken pilot valve.	Replace third valve from bottom in pilot ramp.
		Test port 2 valve broken.	Replace valve.
Tracer Gas Fill Valve	Function	Dirty or broken pilot valve.	Replace fourth valve from bottom in pilot ramp.
		Tracer gas fill valve broken.	Replace valve.
Gas Valve Manifold	Leaks to outside	Wrongly assembled gas valve.	Remove leaking valve. Clean and grease valve seal before installing again. See instructions.
		Wrongly installed connectors/plugs.	Remove leaking unit. Clean and grease o-ring. Install again. Units lacking o-ring seal should be sealed with Loctite 577 or similar.
Evacuation Valve	Function	Dirty or broken Evacuation pilot valves.	Replace fourth valve from bottom in pilot valve ramp.
Lamp	Function	Broken lamp.	Replace lamp. Send in for repair.
Tooling Valves	Function	Dirty or broken pilot valve.	Replace first or second valve from bottom in pilot ramp.
Button	Function	Broken switch.	Send in for repair.

9 Maintenance Instructions

There are three different parts that needs regular maintenance:

- Venturi Pump
Needs regular cleaning.
- Gas Valves
Needs regular cleaning and wears out.
- Pilot Valves
Maintenance free if incoming compressed air is dry and filtered to 5 µm.

Changing Venturi Pump and all Gas Valves takes less than 15 minutes.

9.1 Maintenance Plan

Part	Interval	Action
Venturi Pump	3 months	Perform a Hardware Test. Check Ultimate Vacuum. Clean venturi nozzles when necessary.
Evacuation, Fill and Test Port 2 Valves	3-6 months*	Perform a Hardware Test. Check condition of valves. Replace or clean valves when necessary.
Vacuum Sensor Valve	12 months	Perform a Hardware Test. Check condition of valve. Replace or clean valve when necessary.
Pilot Valves	12 months	Change valve if unexpected pressure builds.

*Depends on the amount of particulates in the objects tested. Metal burrs and other sharp particles will wear the valves down, requiring shorter maintenance intervals.


9.2 Maintenance

9.2.1 Tools and Safety Equipment

When performing regular maintenance of the ILS500 F the following equipment is needed.

Description	Note
Allen Keys (Hexagonal 3 and 4 mm)	
Torx Key (T25)	
Screwdriver (Philip 1 or Pozidrive 1)	
Protective Eyewear	When performing tooling output test.
Protective Ear Plugs	When performing tooling output test.

9.2.2 Interior View

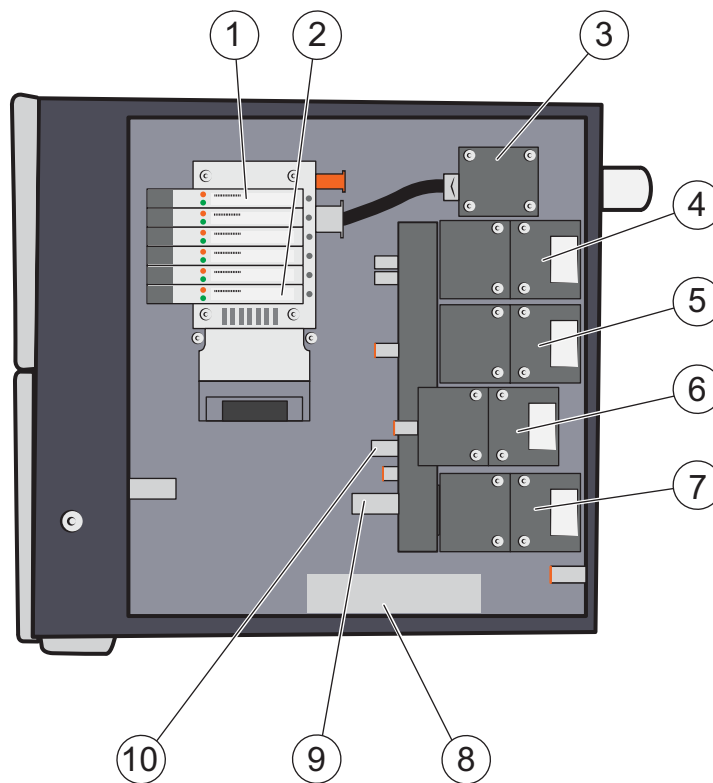

- 1 Pilot Valve 6
- 2 Pilot Valve 1
- 3 Venturi Pump (Ejector)
- 4 Evacuation Valve

- 5 Tracer Gas Fill Valve
- 6 Test Port Valve 2
- 7 Vacuum Sensor Control Valve
- 8 Pressure Sensor (HP model only)
- 9 Vacuum Sensor
- 10 Pressure Sensor


Pilot Valve Ramp

Position	Valve
5A+6A	Main Air Valve
5B+6B	Venturi Pump Supply
4A	Evacuation Valve
4B	Tracer Gas Fill Valve
3A	Test Port 2 Valve
3B	Sensor Protection Valve
2A	Tooling Valve 1
2B	Tooling Valve 2
1A	Tooling Valve 3
1B	Tooling Valve 4

ninp69en1-01 (1508)


9.2.3 Removing the Cover

- 1 Use a T25 key to remove the two screws holding the right hand cover (next to gas ports).
- 2 Slide the cover back and lift it off. Rock the rear end of the cover up and down a few times to loosen. See below.

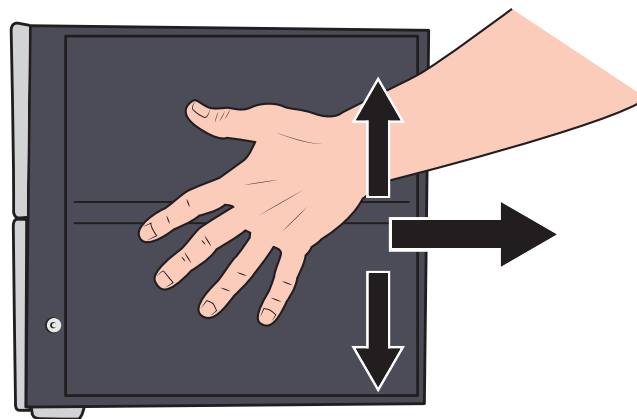


9.2.4 Replacing the Venturi Pump

- 1 Remove the exhaust hose from the barbed hose fitting
- 2 Unscrew and remove the barbed hose fitting and the plastic washer.

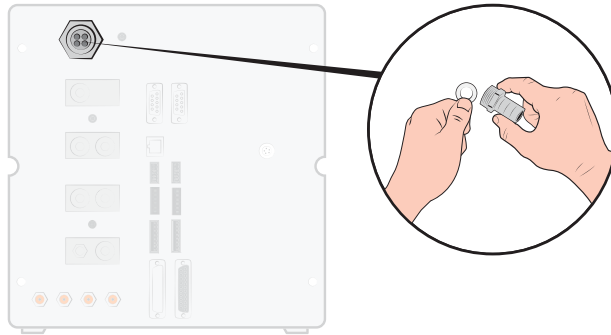


- 3 Use a 4 mm Allen key to remove the four screws holding the Venturi pump.

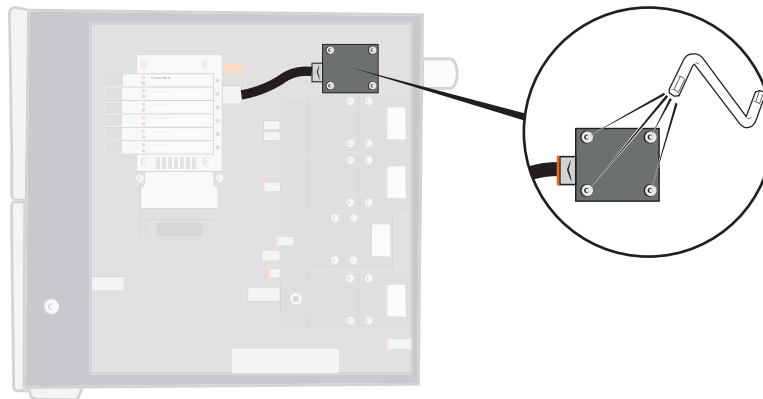


- 4 Remove the o-ring under the Venturi. Remove the hose from Venturi inlet.

Push hose into connector and press orange ring down to release hose, then pull hose out.

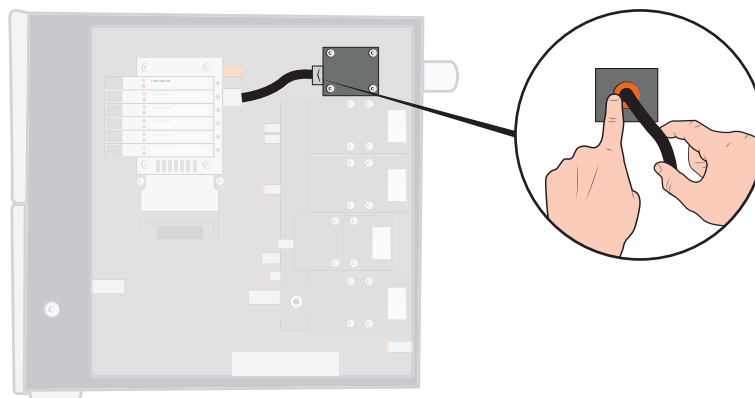


- 5 Remove the hose fitting from the Venturi.

- 6 Install new Venturi or use compressed air jet and a cotton bud, pipe cleaner or small brush to clean the nozzles inside the Venturi.

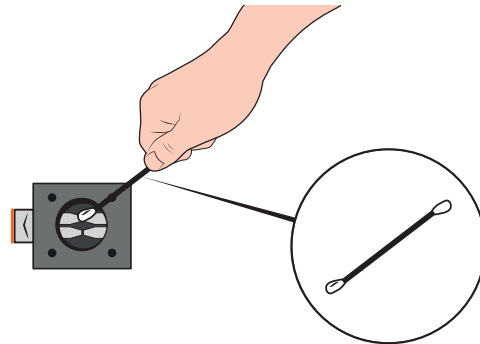


- 7 Replace hose fitting on Venturi inlet.
- 8 Reconnect inlet hose.
- 9 Clean o-ring and install in groove on valve manifold.

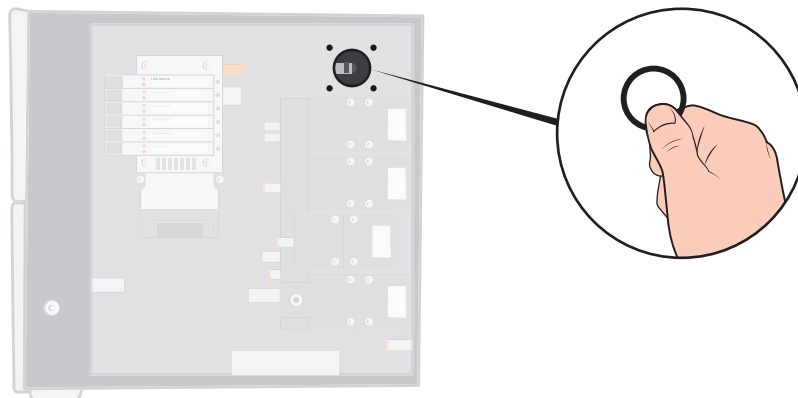


- 10 Reinstall and tighten the four screws.
- 11 Put plastic washer inside Venturi outlet and reinstall barbed fitting. Tighten with spanner.
- 12 Reconnect the exhaust hose.
- 13 Run through the hardware test again to test that the Venturi delivers adequate max vacuum.

9.2.5 Replacing Gas Valves

- 1 Use a 3 mm Allen key to remove the four screws holding the valve to be changed.

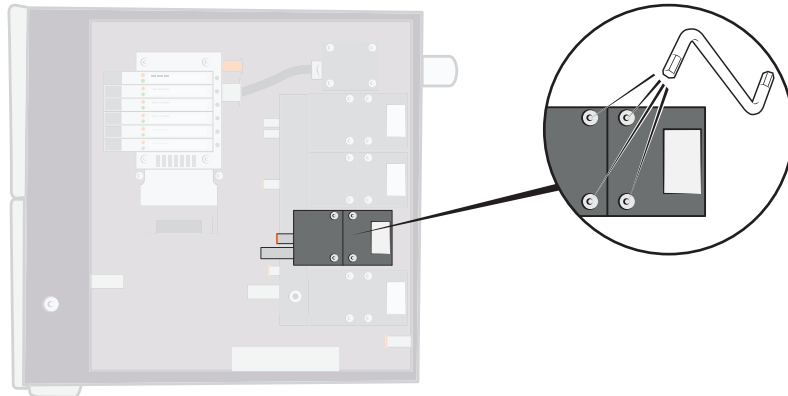


- 2 Lift the old valve out and put the new valve in. Notice the correct orientation in the picture below.

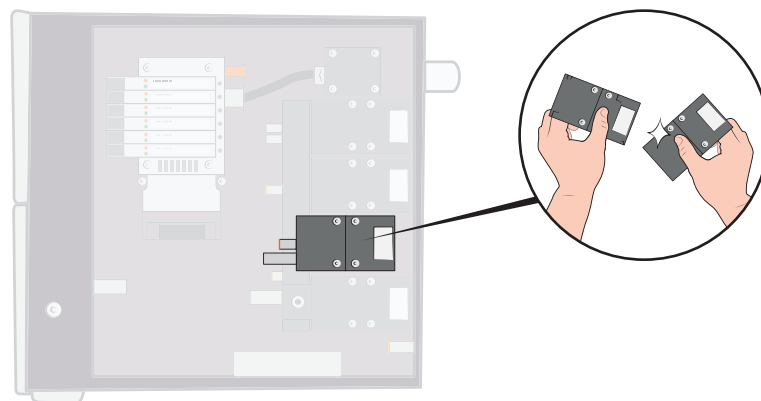


- 3 Tighten the screws 2-3 mm (0.08-0.12 in.) at a time moving the key from screw to screw so that the valve doesn't tilt much.
- 4 Tighten the screws and replace the cover.
- 5 Run through the hardware test again to test that the changed/removed valve(s) perform as required.
- 6 Use hand probe to check that there is no external leakage (this part of Hardware Test is routine).

9.2.6 Replacing Pilot Valves


- 1 Use small screw driver to loosen the screw holding the valve. You must back the screw all the way out until you feel it “jumping” in the thread entrance.
- 2 Push down on the LEDs while pressing the screw down until you feel the locking mechanism “snap”.

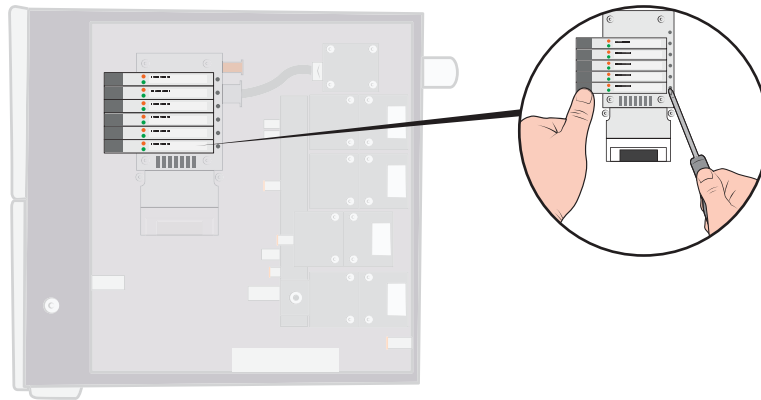

- 3 Lift the old valve out from the coil side. If the valve does not come off, repeat steps 3 and 4 making sure the screw is completely backed out.

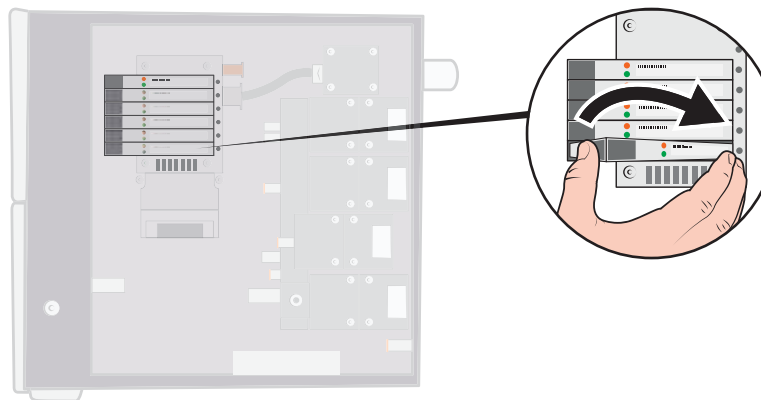

- 4 Push the screw in while inserting the new valve. Insert the end facing the screw first and then push the coil side down.

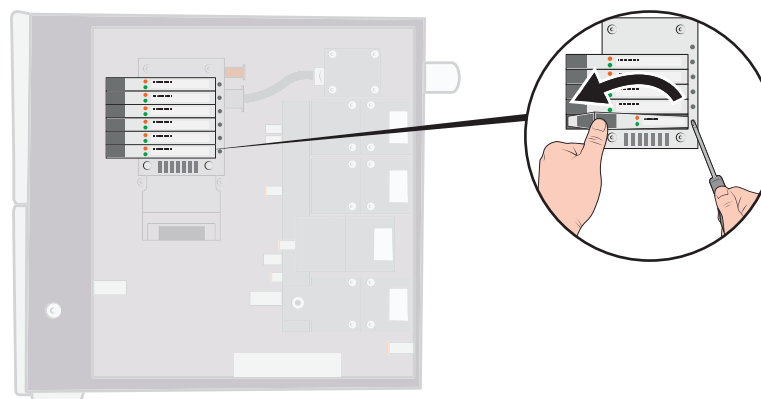

- 5 Tighten the screw.
- 6 Replace the cover.

9.2.7 *Replacing Sensors*



Caution

Service of the sensors may only be carried out by service organizations authorized for this purpose by INFICON.

9.3 *Functional Verification*

See Perform Hardware Test on page 53.


10 Service



Caution

In case of a dysfunctional Sensistor ILS500 F, please send the product for service at your most convenient service facility. Please visit www.inficon.com for addresses.

11 Technical Data

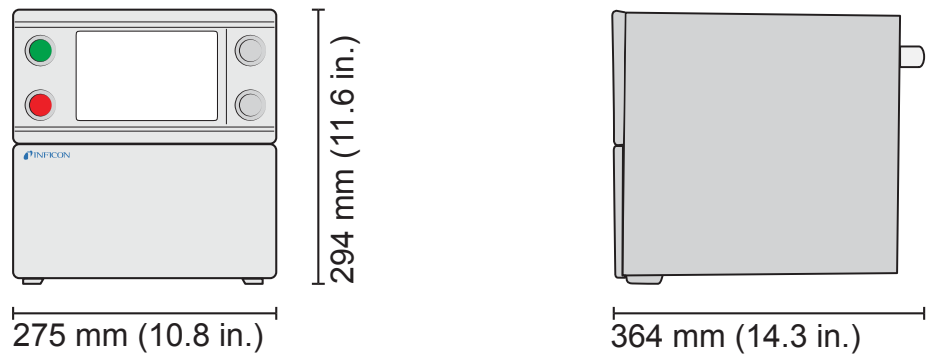

11.1 Electrical Specifications

Notice All pressure data is displayed in relative pressure.

Electrical Supply

Mains Voltage	Single Phase 110-240VAC 50/60 Hz
Current	1.0 A at 100 VAC 0.45 A at 230 VAC
Power Rating	120 W max 33 W typical average
Inrush Current	Max 40 A
Mains Connector	IEC/EN 60320-1/C14
Recommended Fuse Rating	2 A slow 6.3 x 32 mm, 0.2 x 1.3 in. (2 needed)

I/O Port Signals

Signal Specification	24 VDC logic
Output Voltage	23 ±1 VDC
Output Capacity	Max 0.5 A Output (max 2.5 A total)
Input Voltage HI	Min 16 VDC
Input Voltage LO	Max 4 VDC
Input Current Consumption	approximately 7 mA at 24 VDC

ninp69en1-01 (1508)

Communication Ports	
Ethernet	RJ45, 10/100 Mbit/s, TCP/IP
RS232	Male, 9 pin, D-sub (x2)
Data rate	1200-115200 baud
Data bits	8
Stop bits	1
Parity	None
Flow control	None

11.2 Pneumatic Specifications

Compressed Air Supply		
Pressure	Std Model	0.35–0.7 MPa (3.4–6.9 bar) (50–100 psi) Reduced vacuum capacity below: 0.5 MPa (4.8 bar) (70 psi)
	HP model	0.5–0.7 MPa (4.8–6.9 bar) (70–100 psi)
Peak Consumption at 6 bar (87 psi)		240 l/min (508 SCFH)
Quality		Oil free and filtered to 5 µm
Dew point		Max 10°C (50°F)

Tracer Gas Supply		
Composition		Inert non-condensing gas
Pressure	Std Model	0.005–1.0 MPa (0.05–10.0 bar) (0.72–145 psi)
	HP model	0.02–4.5 MPa (0.2–45.0 Bar) (3–652 psi)
Quality		Industrial grade purity (>95% purity)

Exhaust

Capacity in Exhaust Duct	Min 30 m ³ /h (1000 SCFH)
Dimensions of Hose Leading to Duct	ID 25 mm (1 in.)

Pneumatic

Valve bore*	7 mm (0.28 in.)
-------------	-----------------

*Capacity is given for 500 mm (20 in.) of ID 10 mm (0.4 in.) hose between ILS500 F and test volume.

Evacuation

Max vacuum	-85 kPa (-12.3 psi)
Capacity	0.4 s/l to -50 kPa (-7.2 psi)
	1.5 s/l to -80 kPa (-11.6 psi)

Filling

Capacity at 1 MPa supply	0.1 s/l to 0.6 MPa (87 psi)
--------------------------	-----------------------------

Tooling Output Valves

Valve type	Normally closed, 3/2 valve
Q _n	160 std l/min
C _v	0.16 USGPM/psi

Gas and Air Connection

Ports	Female ISO 3/8? (ISO to NPT 3/8? adapter included)
Hose connector	4 of OD 10 mm (0.4 in.) connectors included

11.3 Other Data

General Data

Dimensions	295 x 275 x 330 mm (12 x 11 x 13 in.)
Weight	17.6 kg (38.8 lb.)
Ambient temperature	10–40°C (50–100°F)
Ambient humidity	85% RH (non condensing)
Protection (IP30)	

11.4 Interfaces and Connectors

All interfaces signals except the serial. Communication interfaces are discrete 24 VDC logic signals.


Output signals (OUT) are sourcing transistor outputs. Input signals (IN) are transistor inputs.

Max current of each signal is given in the tables below. Total current (sum) must, however, be within instrument specification.

Caution

Outputs are not relay types. Do not connect external drive source such as 24 V or 100/230 VAC.

11.4.1 Printer Port/RS232

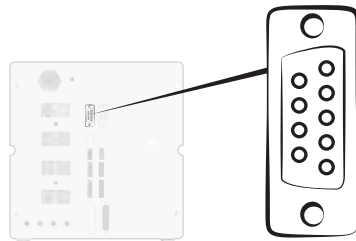

- Connector: 9 pin male D-sub
- Purpose: Connection of serial printer or logging device (e.g. PC or PLC)
- Cable: Standard female to female file transfer cable (null modem)
- Baud Rate: 9600 default (1200 - 115200 selectable)

Pin	Signal
1	Not used
2	RD
3	TD
4	Not used
5	SG
6	Not used
7	Not used

Specification	
Standard	RS232C
Data rate	9600 baud
Data bits	8
Stop bits	1
Parity	none
Flow ctrl	none

Pin	Signal	Specification
8	Not used	
9	Not used	

Printing of results

The printer port prints the result of every test. In hand probe mode the result printed is "ACCEPT" or "REJECT" followed by date & time and recipe name (if used) and end Char New Line (0A, LF).<09> (Char Tab, 09) is used as a separator.

For Example: "TEST_ACCE<09>2013-09-04 13:23:03<09>Factory Default<0A>"

After an active probe test cycle the gas analysis value from the ISH2000 is printed. The printout can be "2.4E+00A<09>2013-09-04 13:23:03<09>Factory Default<0A>".

See the ISH2000 manual. If the test cycle is rejected by any other test this will be printed. Followed with date, time and recipe name. Hardware error prints "ERROR".

For example: "ERROR<09>2013-09-04<09>Factory Default<0A>".

On the ILS500 (Service/RS232), you can choose if you want to include time and date in every result from the ILS500 or not. If it's on the result will be: "TEST_ACCE<09>2013-09-04 13:23:03<09>Factory Default<0A>" And if it's off: "TEST_ACCE<0A>".

When filling is successfully completed FILL OK is printed. No information about time and date is printed.

Results from ILS500 F

Results	Explanation
TEST_ACCE	Test accepted (if a leak detector is connected)
TEST_REJE	Test rejected (if a Leka detector is connected)
USER_FAIL	User has pressed stop
EVAC_FAIL	Evacuation failed
VDEC_FAIL	Vacuum decay test failed
FILL_FAIL	Tracer gas filling failed
PDEC_FAIL	Pressure decay test failed
BLOC_FAIL	Blockage test failed
REFI_FAIL	Tracer gas refill failed
COMM_FAIL	Communication with ISH2000 failed (If ISH2000 is connected)
TEST_STRT	Test cycle started
TEST_DONE	Test cycle finished
FILL_DONE	Filling completed
CALI_STRT	Calibration started (If ISH2000 is connected)
CALI_FAIL	Calibration failed (If ISH2000 is connected)
CALI_DONE	Calibration successful (If ISH2000 is connected)
RECH_DONE	Recipe change done

Results	Explanation
RECH_FAIL	Recipe change failed
ERROR	Hardware error on ILS500

Commands


The printer port can also be used to control the ILS500 F. The most commonly used functions can be started/configured over the RS232 interface. Always use New Line (0A,LF) as end character.

Command	Action
K<0A>	Starts a calibration. If the function is busy, the ILS500 prints the time remaining for the ongoing calibration in seconds. For example, if two seconds remains the printout is as follows: WAIT 2 <0A>
S<0A>	Statistics (see table below)
RS<0A>	Reset statistics
R<09>	Factory Default <0A> loads a recipe. For example "R<09>Factory Default" loads the recipe Factory Default. When the recipe is loaded the recipe name is echoed back. If a recipe name isn't in the ILS500, the answer from the ILS500 will be "Not a recipe name!"

Statistics	Printed data	Explanation
REC:AP29	- recipe name.	Printed if recipes is activated
TOT:00031	- total	
ACC:00009	- accepted	
REJ:00022	- rejected	
EVA:00001	- evacuation	
VDE:00000	- vacuum decay	
BLO:00006	- blockage test	
FIL:00001	- gas filling	
PRE:00000	- pressure decay	
GAS:00014	- gas detector	

ninp69en1-01 (1508)

11.4.2 Input 1 (Optional)

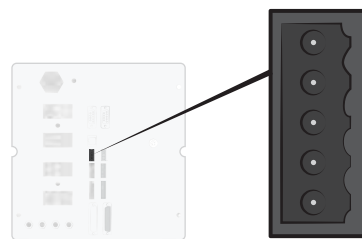


Connector: 5 pin male Weidmüller, Omnimate BL3.5. Mating screw terminal included.

Purpose: Options port 1. Optional analogue or digital input (not supported by std software).

Pin	Signal	Type	Load	Comment
1	+24 VDC	SUPPLY	250 mA	Option supply.
2	VIN1	IN	-60 mA	Voltage input: Digital 24 VDC or analogue 0-10 VDC.
3	IIN1	IN	+/-30 mA	Current input: 0-20 mA.
4	COM1	IN	-250 mA	Signal common (GND).
5	COM/SHLD	GND	+/-30 mA	Shield.

11.4.3 Input 2 (Optional)

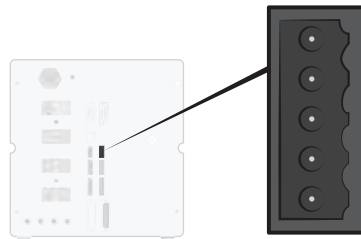


Connector: 5 pin male Weidmüller, Omnimate BL3.5. Mating screw terminal included.

Purpose: Options port 2. Used for “Active Holder for Hand Probe” (90630).

Pin	Signal	Type	Load	Comment
1	+24 VDC	SUPPLY	250 mA	Option supply.
2	VIN2	IN	-60 mA	Voltage input: Digital 24 VDC or analogue 0-10 VDC.
3	IIN2	IN	+/-30 mA	Current input: 0-20 mA.
4	COM2	IN	-250 mA	Signal common (GND).
5	COM/SHLD	GND	+/-30 mA	Shield.

11.4.4 Status Output

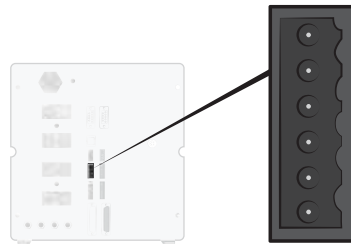

Connector: 6 pin male Weidmüller, Omnimate BL3.5. Mating screw terminal included.


Purpose: Test Status Outputs. Sourcing 24 VDC transistor outputs.

Pin	Signal	Type	Load	Comment
1	RUNNING	OUT	0.5 A	Cycle running.
2	ACCEPT	OUT	0.5 A	Tested part accepted.
3	REJECT	OUT	0.5 A	Tested part rejected.
4	ERROR	OUT	0.5 A	Summing error.
5	EOT/FILLED	OUT	0.5 A	End of test or gas filled indicator (selectable).
6	COM	GND	-2.0 A	Common GND.

Notice

Gas filling status is available on the STATUS connector (pin 5) on the back of the unit. Connect to a lamp for easy notification of “End of test” status.

11.4.5 Tooling Interface

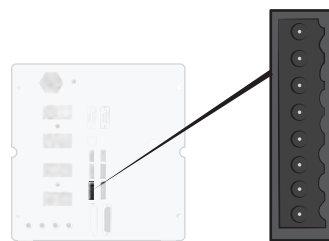

Connector: 8 pin male Weidmüller, Omnimate BL3.5. Mating screw terminal included.


Purpose: Electrical tooling interface.

Pin	Signal	Type	Load	Comment
1	+24 VDC	SUPPLY	300 mA	Tooling switch supply (e.g. proximity switch).
2	TS1	IN	-7 mA	Tooling switch 1.
3	TS2	IN	-7 mA	Tooling switch 2.
4	TS3	IN	-7 mA	Tooling switch 3.
5	TS4	IN	-7 mA	Tooling switch 4.
6	MARKER*	OUT	0.5 A	Marker output. Selectable mark on REJECT or ACCEPT.
7	COM	GND	-1.0 A	Common GND.
8	COM	GND	-1.0 A	Common GND.

* MARKER output (Tooling Connector, pin 6) can be used to send a start pulse to marking equipment such as an engraving machine or a valve controlling a simple pneumatic stamp. Function and length of pulse is set by the following two parameters:

Marker Output:	Length of marker output pulse. Output will go high at end of gas test and stay high for the given time.
Marker Output High if Leak:	Decides function of marker pulse. To mark rejected part set to OFF. To mark accepted part, set to ON.

11.4.6 Control Output

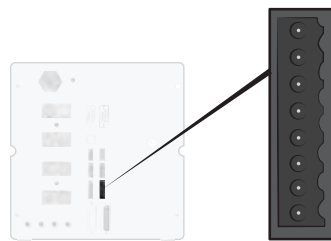


Connector: 8 pin male Weidmüller, Omnimate BL3.5. Mating screw terminal included.

Purpose: External start and stop. Control of optional external valves.

Pin	Signal	Type	Load	Comment
1	+24 VDC	SUPPLY	2.0 A	Start and stop switch and supply.
2	EXTSTART	IN	-7 mA	Start button return (NO contacts) or contact to +24 VDC.
3	EXTSTOP	IN	-7 mA	Stop button return side (NO contact) or contact to +24 VDC.
4	EVAC1	OUT	0.5 A	Venturi valve output.

Pin	Signal	Type	Load	Comment
5	EVAC2	OUT	0.5 A	Evacuation valve output.
6	GASFILL	OUT	0.5 A	Fill valve output.
7	OPTOUT	OUT	0.5 A	
8	COM	GND	-1.0 A	Common GND for outputs.

11.4.7 Probe Control Port

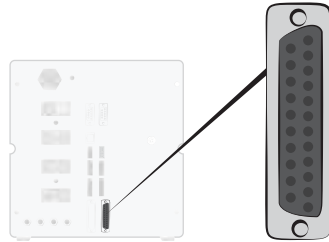


Connector: 25 pin female D-sub
 Purpose: For external connection of ISH2000.


11.4.8 Power Input

Specification	
AC mains voltage	110-240 V 50/60Hz.
AC mains current	Typically 1 A (2 A pulse at power on).

11.4.9 Safety Interface



Caution
 Risk assessment is the sole duty of the user of the ILS500 F

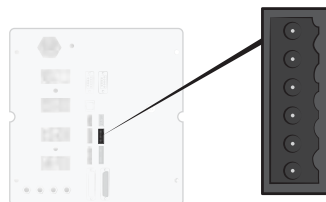

Connector: 6 pin male Weidmüller, Omnimate BL3.5. Mating screw terminal included.
 Purpose: Emergency stop interface.


nimp69en1-01 (1508)

Pin	Signal	Type	Load	Comment
1	+24 VDC	SUPPLY	2.5 A	
2	AUX1	-	+/-1-5 A*	Terminal 1 of safe relay contacts for auxiliary external use.
3	AUX2	-	+/-1-5 A*	Terminal 2 of safe relay contacts for auxiliary external use.
4	ESTATUS	OUT	0.5 A	Internal emergency circuit stopped. Use for reset lamp or PLC monitoring.
5	SAFESPLY**	SUPPLY	-2.5 A	24 VDC supply from EXTERNAL emergency stop circuitry.
6	COM	GND	1.0 A	Common GND.

* 250 VAC 5 A cosj =1
 30 VDC 5 A L/R = 0 ms
 240 VAC 2A cosj = 0.3
 24 VDC 1A L/R = 48 ms

** SAFESPLY feeds risk associated loads inside the ILS500 F. These include all gas and tooling valves.

11.4.10 Leak Detector

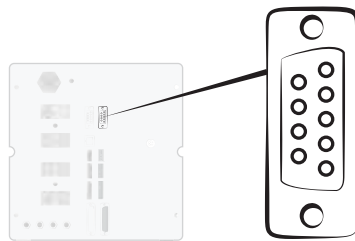


Connector: 9 pin male D-sub.
 Purpose: Connection of external leak detector (ISH2000 or T-Guard)
 Cable ISH2000: Pin-to-pin cable and converter.
 Cable T-Guard: Nullmodem cable and converter.
 Baudrate: 115200(ISH2000)/19200(T-Guard)

Pin	Signal
1	Not used
2	TD
3	RD
4	Not Used

Pin	Signal
5	GND
6	Not Used
7	Not Used
8	Not Used
9	Not Used

11.4.11 USB Port

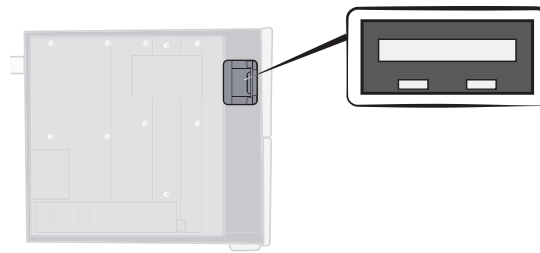

Connector: USB

Purpose: Used for import and export of recipes.


To access the USB port, remove the cover. See Removing the Cover on page 67.

USB is connected




An icon for USB is shown when installing the USB flash drive.

Import Recipe from USB

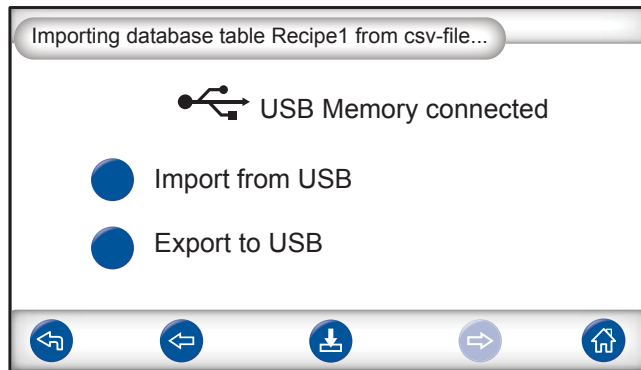


When importing recipes all recipes are imported from a file named Recipe1.csv.

Export Recipe from USB

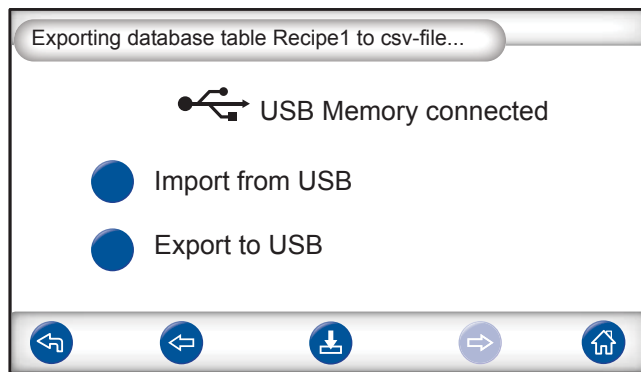

When exporting recipes all recipes are exported to a file named Recipe1.csv.

12 Spare Parts and Accessories

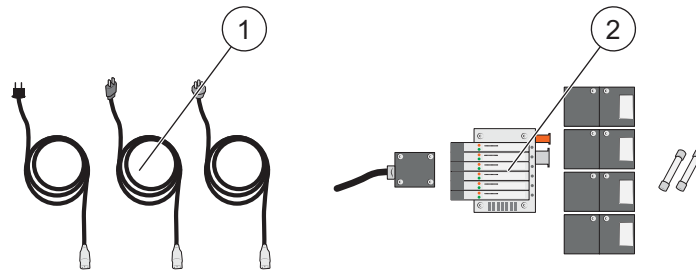

Pos.	Part	Type	Description	Part no.
1	Power Cables	EU		591-146
		UK		591-147
		US		591-853
2	No-Stop Maintenance Kit	Standard Model		590-680
		HP Model		590-685
			Venturi 1 pcs	
			Fill valve 4pcs	
			Pilot valve 1 pcs	
			Fuse 2 pcs	
			Necessary tools	

ninp69en1-01 (1508)

For a complete list of all spare parts and accessories, please contact:
support.sweden@inficon.com

13 Support from INFICON

13.1 How to Contact INFICON

For Sales and Customer Service, contact your nearest INFICON Service Center. The address can be found on the website: www.inficon.com

If you are experiencing a problem with your instrument, please have the following information readily available before contacting Customer Service:

- A serial number and firmware version for your instrument,
- A description of your problem,
- A description of any corrective action that you may have already attempted, and the exact wording of any error messages that you may have received.

13.2 Returning Components to INFICON

Please use the Product Return Form that was included with the product on delivery.

Do not return any component of your instrument to INFICON without first speaking with a Customer Service Representative. You must obtain a Return Material Authorization (RMA) number from the Customer Service Representative.

If you deliver a package to INFICON without an RMA number, your package will be held and you will be contacted. This will result in delays in servicing your instrument.

Prior to being given an RMA number, you may be required to complete a Declaration Of Contamination (DOC) form if your instrument has been exposed to process materials. DOC forms must be approved by INFICON before an RMA number is issued.

14 Declaration of Conformity



Declaration of CE Conformity

Manufacturer

INFICON AB
Westmansgatan 49
SE-582 16 Linköping
Sweden

Object of the declaration (marketing identification):

Sensistor ILS500 , Leak Detection System, ...
Sensistor ILS500 HP , Leak Detection System, high pressure model...
Sensistor ILS500 F , Leak Detection Filler, ...
Sensistor ILS500 FHP , Leak Detection Filler, high pressure model...

Type no for construction identification: ILS.210.306

The object of the declaration described above is in conformity with the relevant Community Directives, namely:

CE Marking Directive	(93/68/EC)
EMC Directive	(2004/108/EC)
LVD, Low Voltage Directive	(2006/95/EC)
RoHS Directive	(2011/65/EC)

Harmonized European standards which have been applied

No.	Issue	Subject
EN 61326-1:2006,	2	Class B: Electrical equipment for measurement, control and laboratory use.*
EN 61326-1:2006	2	Industrial Requirements Electrical equipment for measurement, control and laboratory use.**

*Internal voltage range is not on scope of directive. AC/DC power supply is conformant and installed correctly.

**Some deviations from standard exist. Contact manufacturer for details.

Information related to the Machinery Directive (2006/42/EC):

Sensistor ILS500 is intended (when appropriate) to be incorporated into machinery or to be assembled with equipment to constitute machinery covered by Directive 98/37/EG, as amended;

The manufacturer declares that is not allowed to put the equipment into service until the machinery into which it is to be incorporated or of which it is to be a component has been found and declared to be in conformity with the provisions of Directive 2006/42/EC and with national implementing legislation, i.e. as a whole, including the equipment referred to in this declaration.

The delivered equipment (Sensistor ILS500) is intended to be connected to an emergency stop circuit. The enclosed plug with cable jumper is only intended for testing the equipment when not incorporated into machinery covered by Directive 2006/42/EC. The jumper plug must therefore not be used when such machinery is put into service.

For INFICON AB, Linköping, Sweden, November 28, 2013



Fredrik Enquist
R&D Manager

INFICON AB

Box 76, SE-581 02 Linköping, Sweden
Phone: +46 (0) 13 35 59 00 Fax: +46 (0) 13 35 59 01
www.inficon.com E-mail: reach.sweden@inficon.com

ninp69en1-01 (1508)

15 Declaration by the Manufacturer



DECLARATION BY THE MANUFACTURER

(Directive 2006/42/EC, Art. 4.2 and Annex II, sub B)

PROHIBIT TO PUT EQUIPMENT INTO SERVICE

Manufacturer

INFICON AB
Westmansgatan 49
SE-582 16 Linköping
Sweden

Hereby declares that

Sensistor ILS500 , Leak Detection System, ...
Sensistor ILS500 HP , Leak Detection System, high pressure model...
Sensistor ILS500 F , Leak Detection Filler, ...
Sensistor ILS500 FHP , Leak Detection Filler, high pressure model...

(Type no for construction identification: ILS.210.306)

- is intended to be incorporated into machinery or to be assembled with other machinery to constitute machinery covered by Directive 2006/42/EC, as amended;

and furthermore declares that is not allowed to put the equipment into service until the machinery into which it is to be incorporated or of which it is to be a component has been found and declared to be in conformity with the provisions of Directive 2006/42/EC and with national implementing legislation, i.e. as a whole, including the equipment referred to in this declaration.

The delivered equipment (Sensistor ILS500) is intended to be connected to an emergency stop circuit. The enclosed plug with cable jumper is only intended for testing the equipment when not incorporated into machinery covered by Directive 2006/42/EC. The jumper plug must therefore not be used when such machinery is put into service.

For INFICON AB, November 28, 2013



Fredrik Enquist, R&D Manager

INFICON AB

Box 76, SE-581 02 Linköping, Sweden
Phone: +46 (0) 13 35 59 00 Fax: +46 (0) 13 35 59 01
www.inficon.com E-mail: reach.sweden@inficon.com

ninp69en1-01 (1508)

Appendix

A: Parameter Index

Parameter	Range	Factory Default	Customer Modification
Block Test Pressure		0.3 bar	
Blockage Test Time		2 s	
Blockage Test		OFF	
Choose at startup		OFF	
Demo Mode		OFF	
End of Test Signal		1 s	
Evacuation Timeout		10.0 s	
Extended Gas Evacuation		0 s	
Extended Gas Fill		0 s	
Extended Pre Evacuation		0 s	
External Acknowledge		OFF	
External Gas Regulation		OFF	
External Start/Stop		OFF	
Fill Pulse Open		20 ms	
Fill Pulse Closed		200 ms	
Fill Setpoint		0.3 bar	
Fill Signal Filter		0.0 s	
Fill Timeout		10 s	
Gas Evacuation		ON	
Gas Evac. Setpoint		-0.3 bar	
Gas Evac. Test Port 1		OFF	
Gas Fill Test Port 1		OFF	
Marker Output		0 s	
Marker Output High if Leak		OFF	
Pre Evac Test Port 1		OFF	
Pre Evacuation		ON	
Pre Evacuation Setpoint		-0.7 bar	
Pressure Stabilisation Time		5 s	
Pressure Decay Limit		0.1 bar	
Pressure Decay Test		OFF	
Pressure Decay Test Time		5 s	
Pressure Unit		bar	
Pulse Fill from (%) of Setpoint		90%	
Purge Level		0.001	

Parameter	Range	Factory Default	Customer Modification
Purge Object		0 s	
Refill Hysteresis		0.2 bar	
Refill Timeout		5 s	
Status - pin 5		End of Test	
Test Timeout		10 min	
Tooling Connection		OFF	
Tooling Disconnection		OFF	
Two-Hand Control		OFF	
Use Recipes		OFF	
Vac. Stabilisation Time		5 s	
Vacuum Decay Limit		0.1 bar	
Vacuum Decay Test		OFF	
Vacuum Decay Test Time		5 s	



INFICON AB Westmansgatan 49, S-58216 Linköping, Sweden

UNITED STATES TAIWAN JAPAN KOREA SINGAPORE GERMANY FRANCE UNITED KINGDOM HONG KONG

Visit our website for contact information and sales offices worldwide.

www.inficon.com

Document: ninp69en1-01 (1508)