

Translation of the Original

LDS3000

Massenspektrometer-Modul

Catalog No.:
560-300

from software version:
MS-Modul 2.41

jjqa54en1-05-(1604)



INFICON GmbH

Bonner Strasse 498

50968 Cologne, Germany

Table of Contents

1	About these instructions	6
1.1	Other associated documents	6
1.2	Target groups	6
1.3	Warnings	6
1.4	Definition of terms	7
2	Safety	9
2.1	Intended use	9
2.2	Owner requirements	9
2.3	Operator requirements	10
2.4	Dangers	10
3	Shipment, Transport, Storage	12
4	Description	13
4.1	Function	13
4.2	Device setup	14
4.2.1	Overall device	14
4.2.2	Connection box	15
4.2.3	MSB box	15
4.2.4	Nameplate	18
4.3	Technical data	19
5	Installation	20
5.1	Adjust the position of the connections to the installation dimensions	20
5.2	Installing the mass spectrometer module on the test system	21
5.3	Connecting the mass spectrometer module to the test system	22
5.4	Establish component connection	24
5.5	Establish electrical connections	24
6	Operation LDS3000	25
6.1	Switching the device on	25
6.2	Default settings	26
6.3	Select Compatibility Mode	27
6.4	Select operation mode	29
6.5	Select gas type (mass)	30
6.6	Calibrating the device	30
6.6.1	Time and general preferences	30

6.6.2	Internal Calibration Configuration and Start	32
6.6.3	External Calibration Configuration and Start.....	33
6.6.4	Start external dynamic calibration.....	36
6.6.5	External calibration with sniffer line SL3000XL (accessories)	38
6.6.6	Check the calibration	39
6.6.6.1	Calibration using the internal calibration leak test.....	39
6.6.6.2	Calibration using the external calibration leak test.....	39
6.6.7	Entering the calibration factor	40
6.6.7.1	Calibration factor sniffing.....	40
6.6.7.2	Calibration factor vacuum	40
6.6.8	Setting machine and sniff factor.....	40
6.6.8.1	Setting machine and sniff factor manually	41
6.6.8.2	Setting machine and sniff factor using machine calibration	41
6.7	Starting and stopping the measurement.....	42
6.8	Loading and saving parameters	43
6.9	Copying measurement data, deleting measurement data	43
6.10	Suppressing gas backgrounds with "ZERO" functions	44
6.11	Measurement result display with signal filters	45
6.12	Control of the Gas Ballast Valve of the Backing Pump.....	46
6.13	Selecting a device for the leak rate.....	47
6.14	Select device for pressure	48
6.15	Selecting display limits.....	48
6.16	Setting trigger values	49
6.17	Setting capillary surveillance	49
6.18	Set the speed of the turbo molecular pump.....	50
6.19	Cathode Selection	51
6.20	Settings for the XL sniffer adapter	51
6.21	Selecting the type of expansion module	54
6.22	Settings for I/O module IO1000	55
6.22.1	General interface settings	55
6.22.2	Assigning inputs and outputs	55
6.22.2.1	Assigning the digital inputs of the I/O module	62
6.22.2.2	Assigning the digital outputs of the I/O module.....	66
6.23	Settings for bus module BM1000.....	68
6.24	Warning and error messages	68
6.24.1	Illustration of error codes with the help of the status LEDs.....	76
6.25	Resetting the settings	76
7	Operating CU1000 (optional).....	77
7.1	Touchscreen elements	77

7.1.1	Measurement display elements	77
7.2	Settings and functions	80
7.2.1	Touch screen settings.....	80
7.2.2	Operator types and authorizations.....	84
7.2.2.1	Logging out the operator	85
7.2.3	Functions	85
7.2.3.1	Resetting the settings.....	85
7.2.3.2	Recording data.....	86
7.2.3.3	Calling up information	87
7.2.4	Updating the software	90
7.2.4.1	Updating the software of the control unit.....	90
7.2.4.2	Checking and updating the software version of the MSB box.....	90
7.2.4.3	Updating the software of the I/O module.....	91
8	Maintenance.....	93
8.1	Maintenance at INFICON	93
8.2	General maintenance information.....	93
8.3	Maintenance plan	94
8.4	Maintenance work.....	95
8.4.1	Change operating fluid reservoir of turbo molecular pump	95
9	Decommissioning the device.....	100
9.1	Shutting down the leak detector	100
9.2	Disposing of the mass spectrometer module.....	100
9.3	Returning the mass spectrometer module.....	100
10	101
10.1	Declaration of Incorporation.....	101
10.2	Declaration of Incorporation.....	103
10.3	Declaration of Contamination	104

1 About these instructions

This document applies to the software version stated on the title page.

1.1 Other associated documents

Operating Manual Control Device CU1000	jina54
Operating instructions bus module	jiqb10
Operating instructions I/O module	jiqc10
Operating instructions XL sniffer adapter	jinx54
Interface protocols	jira54

1.2 Target groups

These operating instructions are intended for the owner and for technically qualified personnel with experience in leak detection technology and integration of leak detection devices in leak detection systems. In addition, the installation and use of the device require knowledge of electronic interfaces.

1.3 Warnings



DANGER

Imminent threat resulting in death or serious injuries



WARNING

Hazardous situation resulting in potential death or serious injuries



CAUTION

Hazardous situation resulting in minor injuries

NOTICE

Hazardous situation resulting in damage to property or the environment

1.4 Definition of terms

Automatic tuning / mass setting

This function adjusts the mass spectrometer so that a maximum leak rate indicator is achieved. In order to detect a maximum ion current with the ion detector, the control computer adjusts the voltage for accelerating the ions within the selected mass range accordingly.

During each calibration, the mass is adjusted automatically.

Automatic zeroing

Measurement and automatic adjustment of the helium background.

This function determines the internal device zero, which is then deducted from the currently measured leak rate signal. If the leak detector has run for at least 20 seconds in "standby" or "venting", this function is activated by pressing the start button.

If the previously suppressed helium background should fall later so that only the display limit is displayed, the zero point is automatically adjusted.

Operating mode

The leak detector distinguishes between the operating modes "vacuum" and "sniffing". With the mode "vacuum", generally the tracer gas flows into the test object. The pressure in the test object is less than the ambient pressure.

In the operating mode "sniffing" the tracer gas flows out from the test object and is extracted with a sniffer probe. The pressure in the test object is greater than the ambient pressure.

FINE

FINE denotes the connection to the turbo molecular pump for inlet pressures up to 0.4 mbar. This is also used for the "sniffing" operating mode.

GROSS

GROSS denotes the connection to the turbo molecular pump with the lowest sensitivity. This allows high inlet pressures (up to 15 mbar).

Internal helium background

The existing helium partial pressure in the measurement system.

The size of the internal helium background is measured in the "Standby" condition and subtracted from the measured signal (see above: Automatic zero setting).

Minimum detectable leak rate

The minimum detectable leak rate which can be detected by the leak detector under ideal conditions ($\leq 5 \times 10^{-12}$ mbar l/s).

ULTRA

ULTRA denotes the connection to the turbo molecular pump for the measuring range with the highest sensitivity at intake pressures below 0.4 mbar.

Backing pressure

Pressure of the backing pressure between the turbo molecular pump and the backing pump.

2 Safety

2.1 Intended use

The device is a modular leak detector for installation in industrial leak testing unit systems. The test gases that can be measured with the device are helium and hydrogen (forming gas).

The device is suitable for pressure and vacuum testing. The device is used for integral testing in a vacuum and for local testing with a sniffer line.

▶ You must install, operate and service the device only in compliance with these operating instructions.

▶ Comply with application limits, see "Technical Data".

Unauthorized use

▶ Do not suck up liquids with the device.

▶ Avoid the following, non-intended uses of the turbo molecular pump:

– Pumping corrosive or explosive media,

– Pumping condensing steam or fumes,

– Operation with excessive gas loads,

– Operation with excessive foreline pressure,

– Operation in incorrect gas mode,

– Operation with an excessive irradiated heat output,

– Flushing with excessive flushing rate,

– Usage of the device in radioactive areas,

– Usage of the pumps in plants where sudden loads and vibrations or periodic forces act upon the pump.

2.2 Owner requirements

The following notes are for companies or any person who is responsible for the safety and effective use of the product by the user, employee or third party.

Safety conscious operation

- Only use the device when it is technically in good order and condition.
- Only operate the device in accordance with this instruction manual, in a safety and risk conscious manner.
- Adhere to the following regulations and observe their compliance:
 - Intended use
 - Generally applicable safety and accident prevention regulations
 - International, national and local standards and guidelines
 - Additional device-related provisions and regulations

Personnel qualifications

- Only use original parts or parts approved by the manufacturer.
- Keep this instruction manual available on site.
- Only instructed personnel should be permitted to work with and on the device. The instructed personnel must have received training on the device.
- Make sure that authorized personnel have read and understood the operating instructions and all other applicable documents.

2.3 Operator requirements

- Read, observe and follow the information in these operating instructions and the working instructions created by the owner, especially the safety instructions and warnings.
- Carry out any work only based on the complete operating instructions.
- If you have any questions regarding operation or maintenance that you cannot find answers to in this manual, please contact customer service.

2.4 Dangers

The device was built according to the state-of-the-art and the recognized safety regulations. Nevertheless, improper use may result in risk to life and limb on the part of the user or third parties, or damage to the device or other property may occur.

Hazards due to liquids and chemicals

Liquids and chemical substances can damage the device.

- Comply with application limits, see "Technical Data".
- Do not suck up liquids with the device.
- Keep the hydrogen concentration below 5% to prevent ignition.

Permanent magnets

Permanent magnets in the device pose a hazard to health. Cardiac pacemaker may be affected in their function.

- Keep a sufficient distance from the unit.
- Always comply with the distances recommended by the pacemaker manufacturer without fail.

Dangers from electric power

The device is operated with electrical voltages of up to 24 V. Inside the device there are voltages that are considerably higher. There is a danger to life from the contact of conductive parts inside the device.

- Disconnect the device from the power supply prior to any installation and maintenance work. Make sure that the electric power supply cannot be reconnected without authorization.
- Before starting the leak test, disconnect electrically operated test objects from the power supply.

The device contains electric components that can be damaged from high electric voltage.

- Make sure before connecting to the power supply that the supply voltage is 24 V +/- 10%.

Kinetic energy

If the rotating parts in the turbo molecular pump are blocked because of some damage, high centrifugal forces must be absorbed. If this is not successful, the mass spectrometer module will breakaway and possibly cause damage to property or personal injury.

- Make sure the mount of the mass spectrometer module is able to absorb a braking torque of 820 Nm.

3 Shipment, Transport, Storage

Shipment

Item	Quantity
Mass spectrometer module	1
Plug for 24V connection	1
Pressure sensor PSG500	1
Self-locking nuts	4
Plug for Output	1
Plug for Gauges Exit	1
Operating instructions	1
USB flash-drive with instructions, 3D drawings and videos	1

- ▶ Please check the scope of delivery of the LDS3000 for completeness after receipt.

Transport

NOTICE

Damage due to unsuitable packaging material

Transport in unsuitable packaging material can damage the device.

- ▶ Transport the device only in the original packaging material.
- ▶ Keep original packaging material.

NOTICE

Damage from incomplete MO bearings

- ▶ Fix MO bearing in place with the shipping screw.

Storage

- ▶ Always store the device in compliance with the technical data, see "".

4 Description

4.1 Function

The mass spectrometer module is a detection device for the test gases helium and hydrogen. Integrated in test systems, the device is used to detect gas being emitted from a test object in order to indicate leaks.

The device can be used both as a vacuum leak detector and a sniffer leak detector. Sniffer lines with different lengths are available for the sniffer mode.

The MSB box outputs data on digital interfaces to the control unit CU1000, I/O module IO1000 or bus module BM1000.

The mass spectrometer module is part of the leak detection system LDS3000. Es can be operated in a test system together with a bus module or I/O module and a data cable without additional INFICON accessories.

With the available accessories XL sniffer adapter and sniffer line SL3000XL, it is possible to capture leaks at a larger distance from the expected leak if the detection limit is deteriorated (operation in "high flow" mode).

4.2 Device setup

4.2.1 Overall device

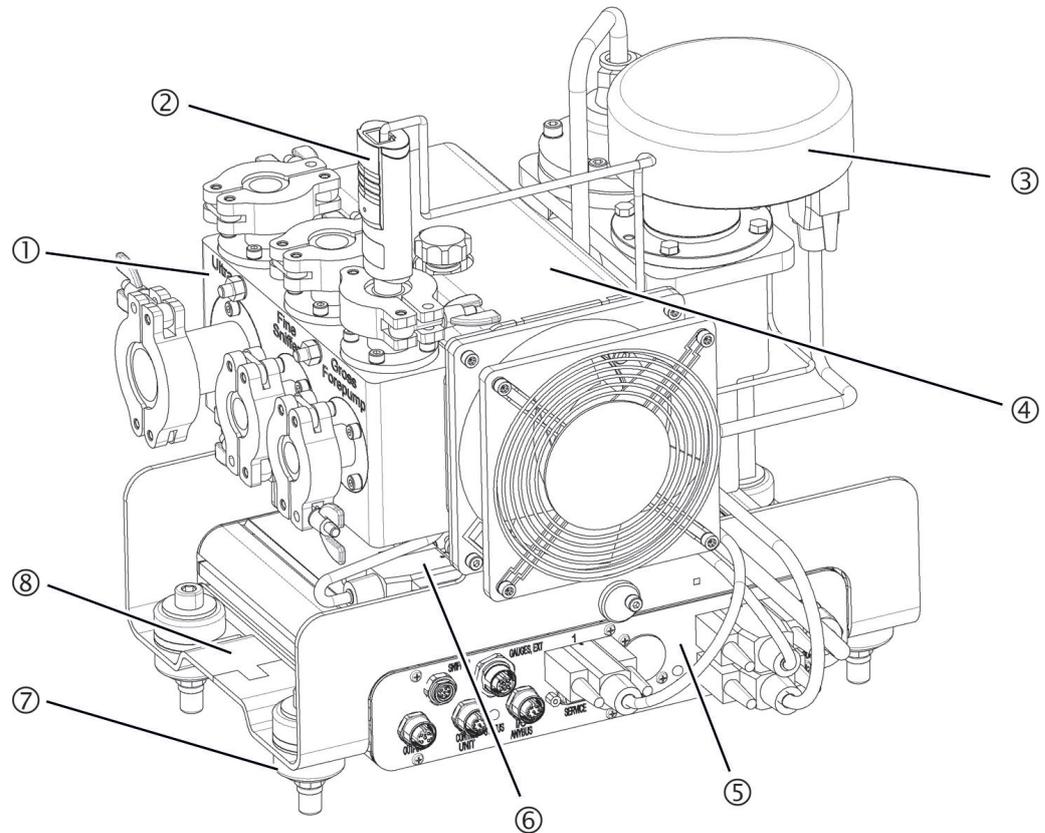


Fig. 1: Mass spectrometer module LDS3000

1	Connection block. Connections for test system, backing pump, pressure sensor PSG500, internal calibration leak and sniffer line, see also "Connection box [▶ 15]".
2	Pressure sensor PSG500 for measuring the pressure of the backing pump
3	Turbo molecular pump with cooling unit
4	Pre-amplifier of the mass spectrometer module
5	MSB box. Interfaces to the mass spectrometer module (see "MSB box [▶ 15]")
6	Inverter for turbo-molecular pump
7	Electronic controller of the turbo molecular pump
8	Fasteners for installing the mass spectrometer module in a test system
9	Rating plate containing mass spectrometer module specifications

4.2.2 Connection box

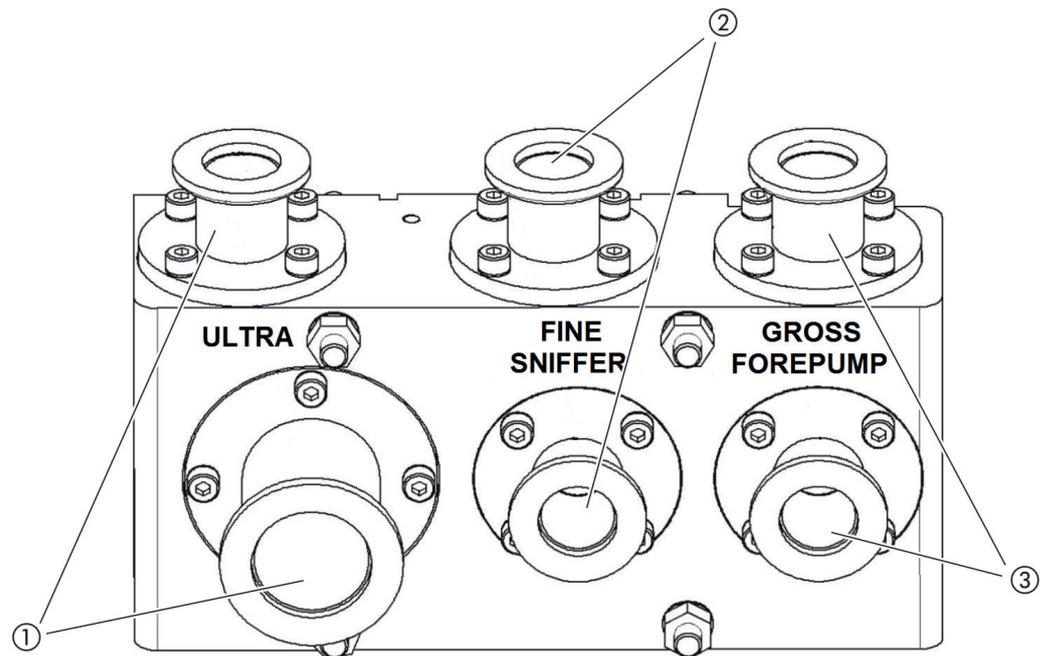


Fig. 2: Connection block

1	Connection ULTRA	3	Connection GROSS/FOREPUMP
2	Connection FINE/SNIFFER		

4.2.3 MSB box

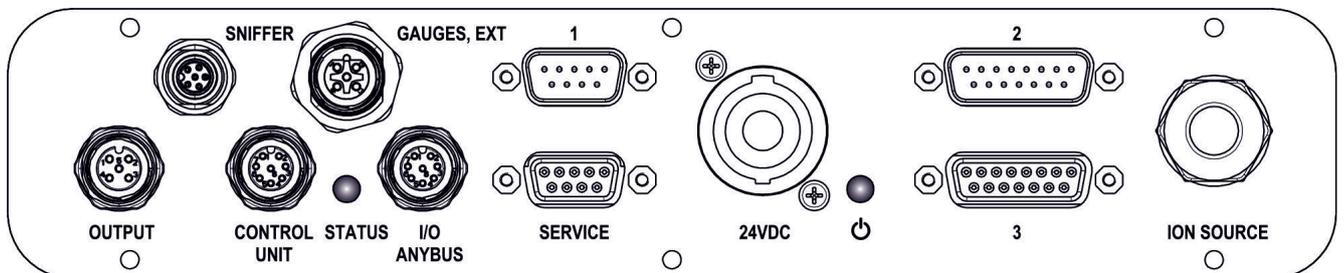


Fig. 3: MSB box connections

OUTPUT

Connection for gas ballast and three valves

Connection plug arrangement

1	Valve 2 (gas ballast), 24 V, max.1 A
2	Valve 3 (not used, reserve)
3	Valve 4 (not used, reserve)
4	Valve 6 (not used, reserve)
5	GND

SNIFFER

Electrical connection for the sniffer line

GAUGES, EXT

Connection for optional external service gauges (0 - 10 V / 0 - 20 mA) for INFICON service

Connection plug arrangement	
1	+24-V-Output, max. 200 mA
2	Input for P3 service gauge, 0 - 10 V
3	GND
4	Reference to input for P3 service gauge
5	20 mA input for P3 service gauge

1 (See also Figure MSB box)

Connection for pressure sensor PSG500, calibration leak and suppressor on the preamplifier (premounted, three-core cable)

24VDC

Connection for 24 V power supply pack used to supply mass spectrometer module, control unit, I/O module and bus module.

2 (See also Figure MSB box)

Connection for inverter turbo molecular pump and fan turbo molecular pump (pre-mounted, two-core cable)

ION SOURCE

Connection for ion source

3 (See also Figure MSB box)

Connection for preamplifier

Power LED / Status LED

The Power LED and Status LED indicate the status of the device.

Power LED	Status LED	Meaning
Off	Red	Device not ready for operation
Green	Blue	Turbo molecular pump is starting
Green	Orange	Emission is switched on
Green	Green	Emission is stable
Green	Violet	Speed of the turbo molecular pump is not within the normal range
Green	Error codes of the status LED	Different activities of the unit
Green, flashes slowly		Supply voltage < 21.6 V
Green, flashes fast		Supply voltage > 26.4 V
Green, flashes	Off	Software is being updated
Green	Green, flashes	Software is being updated

SERVICE

RS232 connection for INFICON Service

I/O / ANYBUS

CONTROL UNIT

Connection for I/O or bus module or control unit

The connections "I/O Anybus" and "Control Unit" have the same functions. You have the choice of connecting:

- Control unit CU1000 + I/O module IO1000
- Control unit CU1000 + bus module BM1000

STATUS

Status LED

The Power LED and Status LED indicate the status of the unit.

4.2.4 Nameplate

A nameplate is located on the device. The symbols on the nameplate have the following meaning:

 Li-ion	Label for the returns to the recycling circuit.
	Device cannot be scrapped with the normal domestic waste.

Information given on the nameplate are:

- Manufacturer's address
- Device name
- Year of production
- Catalog number
- Serial number
- Operating temperature
- Disposal instructions
- Detectable gases

4.3 Technical data

Mechanical data

	LDS3000
Dimensions (lxwxh)	320 mm x 280 mm x 240 mm
Inlet flange	1 x DN25 KF 5x DN16 KF

Electrical data

	LDS3000
Power input	max. 10 A
Protection class	IP40

Physical data

	LDS3000
Response time in Sniffer mode	Gross: < 5 s, Fine/Ultra: < 1 s
Maximum inlet pressure	0,2 mbar - 18 mbar
Run-up time	150 s
Ion source	2 longlife Iridium filaments, Yttrium-oxide coated
Minimum detectable leak rate vacuum mode	5E-12 mbar l/s
Minimum detectable leak rate sniffer mode	1E-7 mbar l/s
Detectable masses	4He, H2, Masse 3 (z. B. H-D, 3He oder H3)
	Helium, Wasserstoff

Ambient conditions

	LDS3000
Max. altitude above sea level	2000 m
Maximum induction	7 mT
Max. relative humidity above 40 °C	50%
Max. relative humidity from 31 °C to 40 °C	80% to 50% (linear abfallend)
Max. relative humidity to 40 °C	80%
Max. storage temperature	-20 °C - 60 °C
Pollution degree	II

5 Installation

5.1 Adjust the position of the connections to the installation dimensions

In order to ideally match the installation position space, the MSB box can be turned and rotated.

The MSB box is seated in two guide rails and can be pushed into the housing from the left or from the right. It can also be rotated, if necessary, so that the labels are upside down.

The locking washer must be released to pull out the MSB box.

If the MSB box is to be pushed into housing from the other side, the locking washer must also be tightened on the other side of the housing. An appropriate threaded hole is available.

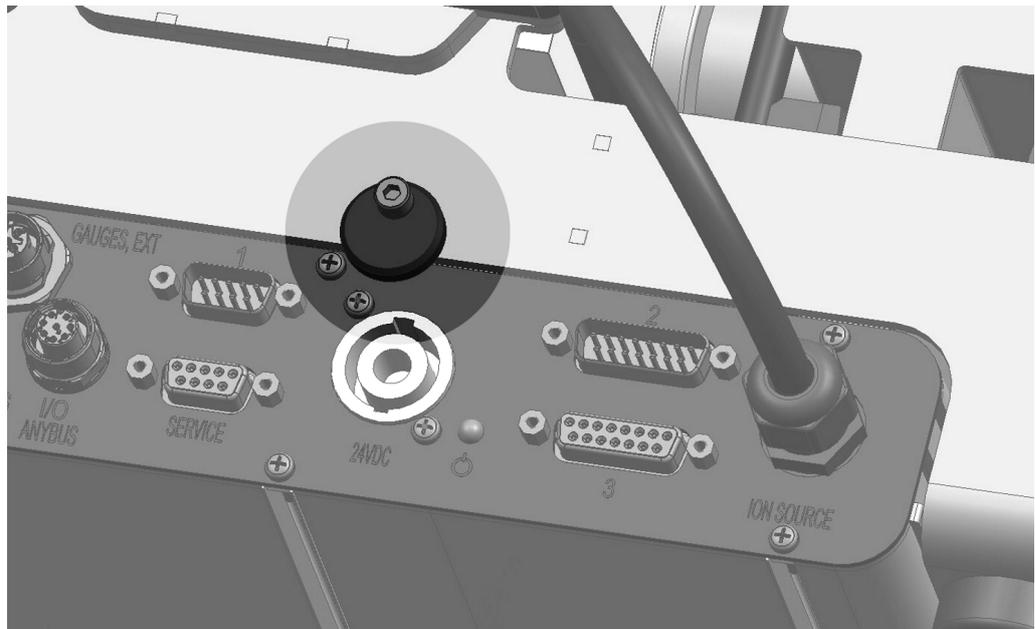


Fig. 4: Lock

5.2 Installing the mass spectrometer module on the test system

The mass spectrometer module can be mounted in any position.

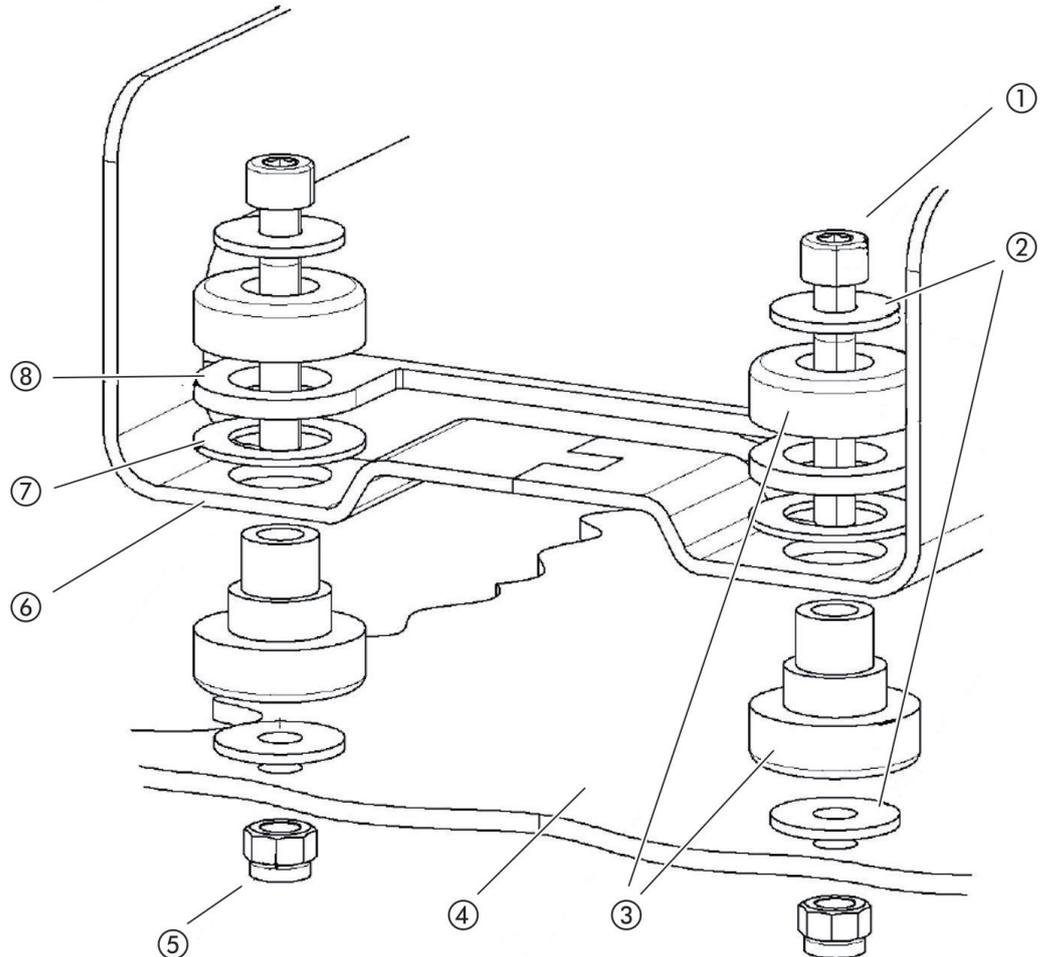


Fig. 5: Components of a fastener

1	Hexagon socket head screw M8 x 50	5	Nut M8 (self-locking)
2	Washer	6	Base frame
3	MO bearing	7	Spring rubber
4	test system	8	MSB box guide

You will need:

- Self-locking nuts M8
- Open-end wrench, SW13
- Allen wrench SW6
- Holes for installation inside the test system

In delivery condition, the bearings are attached to the base frame with the hexagon socket screws and transport nuts. Use the supplied self-locking nuts for the installation of the mass spectrometer module – not the transport nuts.

NOTICE

Material damage if washers are missing

Failure to install the washers can cause the MO bearings to pull out.

- ▶ Always install washers between test system and MO bearings.



WARNING

Severe injuries due to mass spectrometer module breaking out

If not screwed down properly, the mass spectrometer module can be caused to break out if the rotor of the turbo molecular pump suddenly locks up. This can result in injuries of the most severe kind.

- ▶ Make sure the mount of the mass spectrometer module is able to absorb a braking torque of 670 Nm.

- 1 Drill through-holes:
 - X distance: 283 mm
 - Y-distance: 121,5 mm
 - Through hole in sheet: \varnothing 9 mm
 - Fixing screws: M8 x 50
- 2 Remove transport nuts.
- 3 Place the mass spectrometer module on top of the through-holes and screw it down using the fasteners as shown in the upper figure .

5.3 Connecting the mass spectrometer module to the test system

The operation mode of the vacuum connection and the speed of the turbo molecular pump define:

- Minimum detectable leak rate (MDLR)
- Constantly permissible inlet pressure (p_{\max})
- Pumping speed (S)

The following information applies to the use of helium as a tracer gas.

To reach the MDLR, the following conditions must be met:

- The LDS3000 must be in operation for at least 20 minutes.
- Ambient conditions must be steady (temperature, no vibrations/shocks, clean environment)
- The specimen must be operated with switched-off ZERO until to the background is stable. The ZERO function may be switched on only after that.

Connection		Turbo molecular pump speed	
		1000 Hz	1500 Hz
ULTRA	MDLR:	5×10^{-12} mbar l/s	1×10^{-11} mbar l/s
	p_{\max} :	0.2 mbar	0.2 mbar
	p_{\max} short-term (< 3 s):	0.2 mbar	0.4 mbar
	S:	5 l/s	6 l/s
FINE	MDLR:	1×10^{-11} mbar l/s	5×10^{-11} mbar l/s
	p_{\max} :	0.9 mbar	0.4 mbar
	p_{\max} short-term (< 3 s):	0.9 mbar	0.7 mbar
	S:	1.8 l/s	2.5 l/s
GROSS	MDLR:	1×10^{-9} mbar l/s	2×10^{-8} mbar l/s
	p_{\max} :	18 mbar	15 mbar
	S:	depends on the backing pump	

Exceedance of the constantly permissible inlet pressure generates the warning "TMP overheating".

NOTICE

Material damage due to pressure surges

Pressure surges exceeding the maximum inlet pressure will damage the mass spectrometer module.

- Do not exceed the maximum inlet pressure.

- 1 Set the operating mode vacuum connection and the speed turbo molecular pump in accordance with the physical vacuum conditions found in the test system.
- 2 Connect the mass spectrometer module to the "ULTRA", "FINE" or "GROSS" connections on the vacuum system of the test system.
- 3 Set the speed of the turbo molecular pump.

5.4 Establish component connection

- 1 Connect pressure sensor PSG500 to one of the GROSS-/FOREPUMP connections.
- 2 Connect the backing pump to the second GROSS-/FOREPUMP connection.
- 3 For sniffer mode, connect the sniffer line to one of the FINE-/SNIFFER connections.
- 4 If available, connect internal calibration leak 560-323 to the second free flange (FINE or ULTRA) of the vacuum connection.

When using a sniffer valve: For the device to operate correctly upon opening of the sniffer valve, no additional line can be connected between the connection block and the sniffer valve or between the sniffer valve and the sniffer line.

5.5 Establish electrical connections

All electrical connections run from and to the MSB box.

NOTICE

Material damage if power supply pack has the wrong specifications or is connected improperly

A power supply pack that has the wrong specifications or is connected improperly can destroy the unit.

- ▶ Use a suitable power supply pack: Use a power supply pack that supplies an output voltage with electrically protective separation, output voltage: 24 V +/- 10%, current capacity: min. 8 A
- ▶ If the short-circuit current of the power supply pack is > 10 A, connect a fuse between power supply pack and mass spectrometer module.
- ▶ Use a power cable with a large enough cross section.

- 1 Connect the 24 V power cable to the included plug (connections: +24 V on 1+ and GND on 1-).
- 2 Connect the power cable to the socket "24VDC".
- 3 Connect the control unit to the socket "Control Unit".
- 4 Connect the I/O or bus module to the Socket "I/O" .
- 5 Connect pressure sensor PSG500 and, if used, calibration leak 560-323 on the cable of socket "1".
- 6 Connect the sniffer line to the socket "Sniffer" .
- 7 Connect gas ballast valve to the socket "Output".

6 Operation LDS3000

You can use the following accessories in combination with the mass spectrometer module:

- Control unit CU1000
- Bus module BM1000
- I/O module IO1000

With the available accessories XL sniffer adapter and sniffer line SL3000XL, it is possible to capture leaks at a larger distance from the expected leak if the detection limit is deteriorated (operation in "high flow" mode).

Additional information on the control unit, the modules and the XL sniffer adapter is included in the documents:

- Operating Manual Control Device CU1000
- Operating instructions I/O module IO1000
- Operating instructions bus module BM1000
- Operating instructions XL sniffer adapter
- Interface protocols LDS3000

References in the following sections paths are related to the operation

of the mass spectrometer module with the control unit CU1000. If the bus module or the I/O module is used, the actions must be implemented within the scope of the protocol that is used.

The path information for the control unit always starts in the main menu.



WARNING

Danger to life and material damage due to unsuitable operating conditions

There is danger to life due to unsuitable operating conditions. The device can become damaged.

- ▶ Avoid changing the position of the device in an abrupt manner.
- ▶ Avoid extreme external vibrations and impact.

6.1 Switching the device on

- 1 Switch on the backing pump.
 - 2 Establish the power supply to the mass spectrometer module.
- ⇒ System starts up automatically.

- ⇒ If an XL Sniffer Adapter and the CU1000 are connected, you will be asked after run-up, whether the "XL Sniffer Adapter" operating mode should be set.

6.2 Default settings

Language selection

Select the display language. The factory setting is English. (The display on the handle of the SL3000XL sniffer line shows messages in English instead of in Russian and Chinese.)

German
English
French
Italian
Spanish
Portuguese
Russian
Chinese
Japanese

Control unit	Settings > Set up > Control unit > Language
LD protocol	Command 398
ASCII protocol	*CONFig:LANG

Setting date and time

Setting the date

Format: DD.MM.YY

Control unit	Settings > Date/Time > Date
LD protocol	Command 450
ASCII protocol	*HOUR:DATE

Setting the time

Format: hh: mm

Control unit	Settings > Date/Time > Time
LD protocol	Command 450
ASCII protocol	*HOUR:TIME

6.3 Select Compatibility Mode

To retrofit an existing leak detection system LDS1000 / LDS2010 with a LDS3000, activate the appropriate compatibility mode:

- Compatibility mode for LDS1000 or
- Compatibility mode for LDS2010

When changing to a compatibility mode all parameters are to be reset to factory settings and the device is to be restarted.

If you want to use the LDS3000 later in normal operation mode, make sure to save your parameters on a USB flash drive, see "Loading and saving parameters [▶ 43]". You can load the saved parameters again after you have switched to normal operation.

Compatibility mode for the LDS1000

Compatibility mode for the LDS2010

Operating mode LDS3000

Operating mode XL Sniffer Adapter

Control unit	Settings > Set up > Compatibility > Compatibility mode
--------------	--

LD protocol	Command 2594 (dec)
-------------	--------------------

ASCII protocol	Command *CONFig:COMP
----------------	----------------------

The following table shows the functional differences between and common features of LDS2010 and LDS3000:

	LDS2010	LDS3000
Trigger outputs	without joint reference	with joint reference
other outputs	with joint reference	with joint reference
Trigger 1 (sniffer LED, relay exit, audio signal)	Control of sniffer LED, PWM audio outputs an the control unit for active speakers	Control of sniffer LED, audio outputs an the control unit for active speakers
Limit Low / High (serial interfaces, display, analogue output)	Limit Low affects all outputs, Limit High only the display	separately adjustable for interface protocols, display and analog outputs
Gas ballast (3 settings)	OFF: Switches the gas ballast valve of the pump module off. ON: Switches the gas ballast valve of the pump module on until the next mains-off.	0 = Off 1 = on, but controllable via digital input on IO1000 2 = on, but not controllable via digital input on IO1000

	LDS2010	LDS3000
	If "CAL fashion" is unequal to 3 (menu item 26), the gas ballast valve can be controlled with digital input DynCAL. F-ON: Fixed on enables switching the gas ballast valve on permanently (power failure-proof and independent of the digital inputs).	
Control mode	LOCAL, RS232, RS485	None, control is also possible from all control locations.
LDS1000 compatibility mode 9.2	other functions	Default values and error messages (default values are output via interface, the touchscreen shows the original message -> reason: new hardware can cause errors that did not exist with previous models)
Correcting the leak rate in Standby (machine factor)	adjustable (yes/no)	adjustable (yes/no)
ZERO with start		starting with V1.02 like LDS2010
Opening the sniffer valve	in SNIF after start	in SNIF after start
Rotational speed of turbo molecular pump	only 2 rotational speeds adjustable	Adjustable via serial interface from 750 Hz to 1500 Hz, via operator unit 1000 Hz and 1500 Hz
Address RS485	Yes, because bus capable	No, because not bus capable
Sniffer key on/off	selectable	selectable
Default value for int. calibration leak	1E-15 mbar l/s	9.9E2 mbar l/s
Default value ext. calibration leak VAC/SNIF mode	1E-7 mbar l/s	9.9E2 mbar l/s
Setting range for int. calibration leak	10E-7	1E-9 ... 9.9E-1 mbar l/s
Machine factor adjustment	manually	manually/automatically
Machine / sniff factor value range	Machine factor: 1E-3...9.9E+3 Sniffer factor: 1E-3...9.9E+3	Machine factor: 1E-4...1E+5 Sniffer factor: 1E-4...1E+4
Pressure: Capillary surveillance 20		available, pressure adjustable
Analog output	fixed characteristics	freely configurable
Calibration request	Preamplifier temperature change 5 K or 30 min	Preamplifier temperature change 5 K or 30 min. or TMP speed changed

	LDS2010	LDS3000
Pressure / leak rates units (VAC/ SNIF) for all interfaces	yes	Control unit and rest separated
User permissions	3 levels over PIN on the control unit or key switch	4 levels through control unit or optional key switch
Key-operated switch	permanently installed	can, if required, be connected externally, see "Assigning the digital inputs of the I/O module [▶ 62]" (Key switch)

6.4 Select operation mode

The device has the following operating modes:

- Vacuum mode
- Sniffer mode
- XL Sniffer Adapter (sniffer with a high flow rate, XL Sniffer Adapter required)



The device automatically switches over to the "XL Sniffer Adapter" if you connect an XL Sniffer Adapter.

Select operation mode	
0	VAC (vacuum)
1	SNIF (sniffing)
2	Operating mode XL Sniffer Adapter
Control unit	Operating mode vacuum operation or sniffing mode: Main menu > Features > VAC / SNIF Operation mode XL sniffer adapter: Settings > Set up > Accessories > XL Sniffer Adapter
LD protocol	Command 401
ASCII protocol	Command *CONFig:MODE

6.5 Select gas type (mass)

The machine, calibration and sniff factor are dependent on the configured mass and are saved in the mass spectrometer module.

2	H ₂ (Hydrogen, forming gas)
3	³ He or deuterated hydrogen (HD)
4	⁴ He (Helium) (factory setting)

Control unit	Settings > Mass
LD protocol	Command 506 with value 2 (3, 4)
ASCII protocol	Command *CONFig:MASS 2 (3, 4)

6.6 Calibrating the device

6.6.1 Time and general preferences

NOTICE

Incorrect calibration because of operating temperature that is too low

Calibrating the device in the cold state can deliver incorrect measurement results.

► For optimum accuracy the device should have been turned on at least 20 minutes previously.

The device only needs to be calibrated with the desired gas in the desired operating mode once per shift. Thereafter you can switch between the operating modes and gases without re-calibrating.

Additionally applicable for operation with the XL Sniffer Adapter:

The device should be calibrated once per shift in LOW FLOW and in HIGH FLOW. Thereafter you can switch between the different flows without re-calibrating.

Calibration is also required after the following actions:

- Sniffer line replacement
- Filter replacement
- Prompt for calibration by the system

Switching off the preamplifier test

The device tests the installed preamplifier during calibration. You can switch off of the amplifier test. This increases the speed of the calibration, but reliability drops off.

0	OFF
---	-----

1	ON
---	----

Control unit	Settings > Set-up> MS-module > Preamplifier > Test > Preamplifier test with CAL
--------------	---

LD protocol	Command 370
-------------	-------------

ASCII protocol	Command *CONFig:AMPTest (ON,OFF)
----------------	----------------------------------

Enabling calibration request

If Calibration request is enabled, the device will prompt the operator to perform a calibration 30 minutes after it has been switched on and in case of temperature changes greater than 5°C.

0	OFF
---	-----

1	ON
---	----

Control unit	Functions > CAL > Settings > CAL request. > Calibration request
--------------	---

or

Settings > Set-up> CAL request. > Calibration request

LD protocol	Command 419
-------------	-------------

ASCII protocol	*CONFig:CALREQ (ON,OFF)
----------------	-------------------------

Calibration warning Wrn650

The warning message Wrn650 "Calibration within the first 20 minutes is not recommended" can be allowed or suppressed.

0	OFF (suppressed)
---	------------------

1	ON (allowed)
---	--------------

Control unit	Functions > CAL > Settings > CAL request. > Calibration warning W650
--------------	--

or

Settings > Set-up> CAL request. > Calibration warning W650

LD protocol	Command 429
-------------	-------------

ASCII protocol	*CONFig:CALWarn ON (OFF)
----------------	--------------------------

Calibration Features

The device can be calibrated in all its operating modes. A distinction is made between internal and external calibration.

Internal calibration can be performed using the optional built-in test leak. A separate calibration leak is needed for external calibration.

External calibrations have the advantage that they can be performed under conditions such as pressure and measuring time, which are similar to the later measurement.

internal	<ul style="list-style-type: none"> - with internal calibration leak - autotune (mass adjustment) - determine the calibration factor with the steady signal of the test leak - amplifier test - determination of the background. Adjust if necessary after calibrating the machine or sniffer factor, see "Setting machine and sniff factor [▶ 40]" - Not with the XL Sniffer Adapter
external	<ul style="list-style-type: none"> - Vacuum operation: with external calibration leak in test equipment - Sniffing mode: with external calibration leak - Consideration of the characteristics of the testing equipment (pressure, partial flow ratio) - Amplifier test - Autotune (mass adjustment) - Determine the calibration factor after the signal of the calibration leak has settled - Determination of the background
external-dynamic	<ul style="list-style-type: none"> - with external calibration leak in test equipment - Consideration of the characteristics of the testing equipment (pressure, partial flow ratio, measuring time) - Measuring time according to the dynamic waveform - Amplifier test - Determine the calibration before the signal of the test leak has settled - Determination of the background

6.6.2 Internal Calibration Configuration and Start

Prerequisite for the calibration with the internal calibration leak is the one-time entry of the leak rate of the calibration leak.

Leak rate of internal calibration leak

Define the leak rate of the calibration leak you wish to use during calibration. Calibration will not be possible unless you enter the value here.

1E-9 ... 9.9E-1 mbar l/s

Control unit	Settings > Configuration > Operating Mode > Vacuum > Reference leak int. > Calibration leak internal or Features > CAL > Settings > Calibration leak int.
LD protocol	Command 394
ASCII protocol	Command *CONFig:CALleak:INT

Opening/closing the calibration leak

Opening/closing the calibration leak. This is automatically carried out with the internal calibration. If the calibration leak is opened using the control unit or the interface, then no internal calibration can take place. The calibration leak must first be closed again in this case.

0 close

1 Open

Control unit	Functions > Valves > Open internal calibration leak
LD protocol	Command 12
ASCII protocol	Command *STATus:VALVE:TestLeak (ON, OFF)

► Start calibration

Operating unit: Features > CAL > Intern

LD protocol: 4, Parameter 0

ASCII protocol: *CAL:INT

IO1000: CAL internal, see "Settings for I/O module IO1000 [► 55]"

⇒ Calibration is performed automatically.

6.6.3 External Calibration Configuration and Start

Requirement for the calibration with the external calibration leak is the one-time entry of the leak rate of the calibration leak and an open calibration leak.

In vacuum mode, the calibration leak is installed in or on the test system and opened before calibration.

In Sniffer mode, sniffing with the sniffer line is always performed on the open calibration leak.

Leak rate of external calibration leak vacuum

Define the leak rate of the calibration leak you wish to use during calibration. Calibration will not be possible unless you enter the value here.

A specific leak rate must be set for each gas (mass).

1E-9 ... 9.9E-2 mbar l/s

Control unit	Settings > Set up > Operation modes > Vacuum > Ext. calibration leak > Mass 2 (3, 4) > external calibration leak VAC H2 (M3, He) or Functions > CAL > Settings > Ext. calibration leak (for current mass in selected unit)
LD protocol	Command 390
ASCII protocol	Command *CONFig:CALleak:EXTVac (for current mass in selected unit)

Leak rate of external calibration leak sniffing

Define the leak rate of the calibration leak you wish to use during calibration. Calibration will not be possible unless you enter the value here.

A specific leak rate must be set for each gas (mass).

1E-9 ... 9.9E-2 mbar l/s

Control unit	Settings > Set up > Operation modes > Vacuum > Ext. calibration leak > Mass 2 (3, 4) > external calibration leak SNIF H2 (M3, He) or Functions > CAL > Settings > Ext. calibration leak (for current mass in selected unit)
LD protocol	Command 392
ASCII protocol	Command *CONFig:CALleak:EXTSniff (for current mass in device selected unit)

► LD and ASCII protocol: The history must be queried via: Command 260 or *STATUS:CAL

- 1 Open external calibration leak or hold sniffer line to calibration leak.
- 2 Start measurement.
- 3 Wait until leak rate signal is tuned and stable.
- 4 Start calibration:
Control unit: Features > CAL > Extern
LD protocol: 4, Parameter 1
ASCII protocol: *CAL:EXT
IO1000: see the figure below.

- ⇒ Request to "close calibration leak"
- 5** Vacuum mode: Close calibration leak inside the test system.
Sniffer mode: Remove sniffer line from calibration leak.
 - ⇒ Leak rate signal decreases.
- 6** Confirm measured background value is stable:
 - Control unit: "OK"
 - LD protocol: 11, Parameter 1
 - ASCII protocol: *CAL:CLOSED
 - IO1000 see the figure below.
- ⇒ Calibration is completed if:
 - Control unit: Old and new calibration factor are displayed
 - LD protocol LD instruction 260 provides 0 (READY)
 - ASCII protocol: Command *STATus:CAL? provides IDLE
 - IO1000 see the figure below.

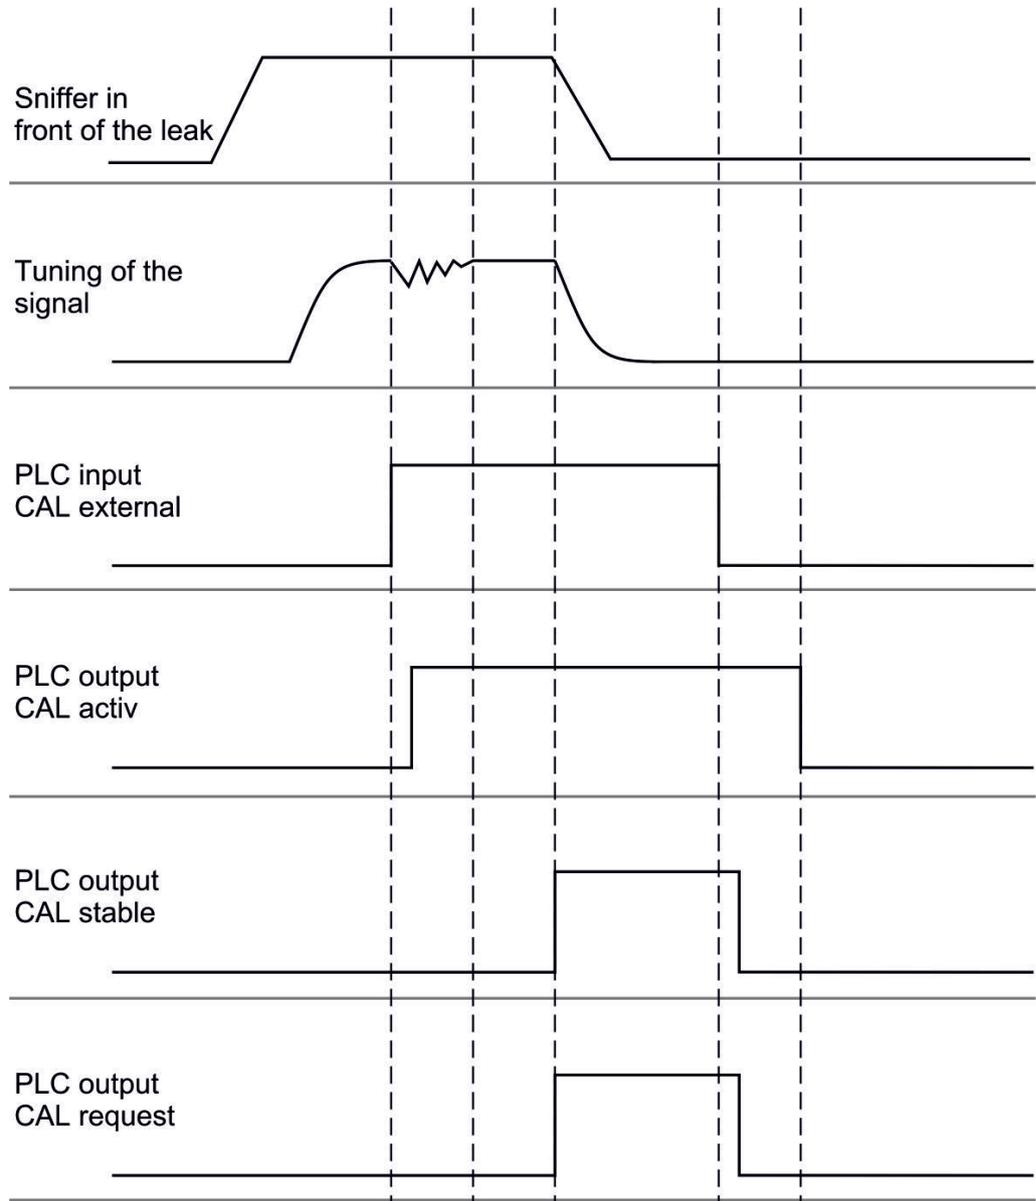


Fig. 6: External calibration with IO1000 using the example of sniffer line SL3000XL, description of PLC inputs and outputs: "Assigning inputs and outputs [▶ 55]"

6.6.4 Start external dynamic calibration

To taken into account the special time and pressure conditions of a test bench a dynamic calibration can be performed. No auto tuning takes place in the calibration mode. The time between opening the external calibration leak and activating the calibration can be selected so that it is optimally suited to the normal measurement sequence of the plant.

Requirements: One-time input of the leak rate of the calibration leak and an open calibration leak, see "External Calibration Configuration and Start [▶ 33]".

LD and ASCII protocol: The history must be queried via: Command 260 or *STATUS:CAL?

- 1 Open external calibration leak or hold sniffer line to calibration leak.

- 2** Start measurement.
 - 3** Wait until the leak rate signal is optimally suited to the normal measurement sequence of the plant.
 - 4** Start calibration:
Control unit: Features > CAL > Dynamic
LD protocol: 4, Parameter 2
ASCII protocol: *CAL:DYN
IO1000 see the figure below.
⇒ Request to "close calibration leak"
 - 5** Vacuum mode: Close calibration leak inside the test system.
Sniffer mode: Remove sniffer line from calibration leak.
⇒ Leak rate signal decreases.
 - 6** Confirm measured background value:
Control unit: "OK"
LD protocol: 11, Parameter 1
ASCII protocol: *CAL:CLOSED
IO1000 see the figure below.
- ⇒ Calibration is completed if:
Control unit: Old and new calibration factor are displayed
LD protocol LD instruction 260 provides 0 (READY)
ASCII protocol: Command *STATUS:CAL? provides IDLE
IO1000 see the figure below.

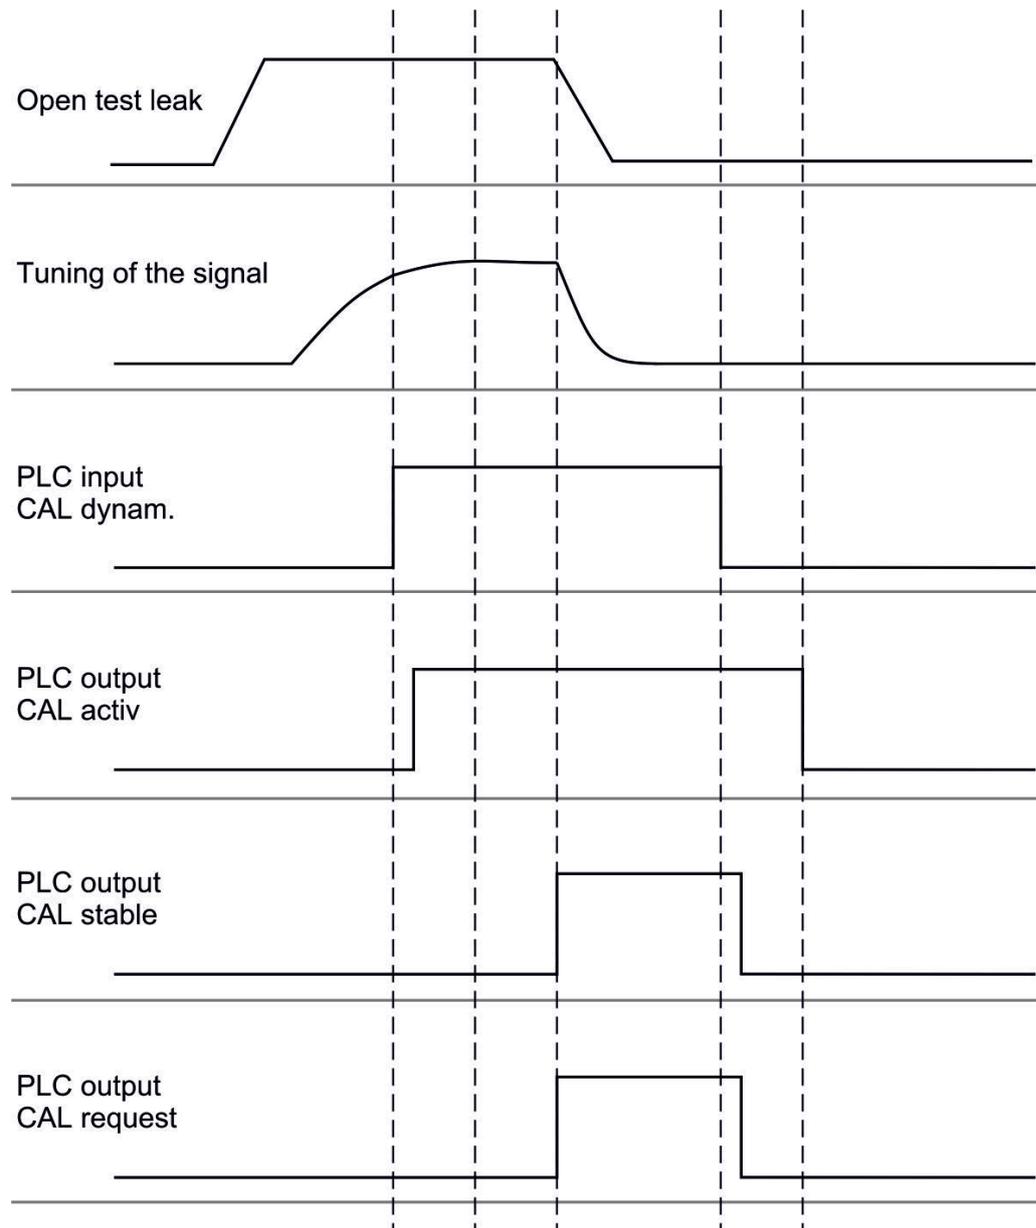


Fig. 7: Fig. 7 External dynamic calibration with IO1000 using the example of sniffer line SL3000XL, description of PLC inputs and outputs: "Assigning inputs and outputs [▶ 55]"

6.6.5 External calibration with sniffer line SL3000XL (accessories)

The procedure complies with that of external or external dynamic calibration in sniffer mode.

Low flow and high flow must be calibrated separately.

To ensure optimal calibration with hydrogen or forming gas for low flow and high flow, the calibration leak must meet the following requirements:

- 100 % H₂: LR > 1 x 10⁻⁴
- Forming gas (95/5): LR > 2 x 10⁻³

For calibration, we recommend our calibration leak with catalog number 12322.

6.6.6 Check the calibration

To check whether a re-calibration is necessary, check the already existing.

6.6.6.1 Calibration using the internal calibration leak test

The test is only possible with the setting "Mass 4".

► Start test:

Control unit: Features > CAL > Test int.

LD protocol: 4, Parameter 4

ASCII protocol: *CAL:PROOFINT

IO1000: CAL test internal, see "Settings for I/O module IO1000 [► 55]"

⇒ Test is performed automatically.

6.6.6.2 Calibration using the external calibration leak test

► LD and ASCII protocol: The history must be queried via: Command 260 or *STATUS:CAL

1 Open external calibration leak or hold sniffer line to calibration leak.

2 Wait until leak rate signal is tuned and stable.

3 Start test:

Control unit: Functions > CAL > Test ext.

LD protocol: 4, Parameter 5

ASCII protocol: *CAL:PROOFEXT

IO1000 compare figure in "External Calibration Configuration and Start [► 33]".

⇒ Request to "close calibration leak"

4 Vacuum mode: Close calibration leak inside the test system.

Sniffer mode: Remove sniffer line from calibration leak.

⇒ Leak rate signal decreases.

5 Confirm measured background value is stable:

Control unit: "OK"

LD protocol: 11, Parameter 1

ASCII protocol: *CAL:CLOSED

IO1000 compare figure in "External Calibration Configuration and Start [► 33]".

⇒ Test is completed if:

Control unit: Result is displayed

LD protocol: As with the other steps, the history must be queried

ASCII-Protocol: As with the other steps, the history must be queried

IO1000 compare figure in "External Calibration Configuration and Start [► 33]".

6.6.7 Entering the calibration factor

The calibration is usually determined by the appropriate calibration routine. Therefore, it is usually not necessary to adjust the calibration factor manually.

An incorrectly set calibration inevitably leads to wrong leak rate indicator!

6.6.7.1 Calibration factor sniffing

Entry of the calibration factors for masses 2, 3, 4 in low flow and in high flow.

The values will be overwritten during the next calibration.

"High Flow-" or XL settings are available only in operating mode "XL Sniffer Adapter".

The calibration factor for low flow also applies to sniffer applications that are not carried out in the operation mode "XL sniffer adapter".

The calibration factors are managed separately to earth and to "High Flow" and "Low Flow".

0.01 ... 100

Control unit	Settings > Set up > Operation modes > Sniffing > Calibr. factor > mass 2 (3, 4, 2 XL, 3 XL, 4 XL) > calibration factor SNIF H2 (M3, He, XL H2, XL M3, XL He)
LD protocol	Commands 519, 521
ASCII protocol	Command *FACTor:CALSniff or *FACTor:CALXML for the current mass

6.6.7.2 Calibration factor vacuum

Entry of calibration factors for masses 2, 3, 4.

The values will be overwritten during the next calibration.

0.01 ... 5000

Control unit	Settings > Set up > Operation modes > Vacuum > Calibr. factor > mass 2 (3, 4) > calibration factor VAC H2 (M3, He)
LD protocol	Command 520
ASCII protocol	Command *FACTor:CALVac

6.6.8 Setting machine and sniff factor

The internal calibration will only calibrate the measurement system of a mass spectrometer module that is uncoupled from the test system. If the measurement system is operated in parallel to an additional pump system after an internal calibration though

(following the split flow principle), the measurement system will indicate a leak rate that is too low based on the split flow ratio. With the help of a corrective machine factor for vacuum mode and a sniff factor for sniffer mode, the measurement system indicates the actual leak rate. The factors are taken into consideration along with the ratio of effective pumping speed of the measurement system in a comparison to the pumping speed of the measurement system on the test system.

6.6.8.1 Setting machine and sniff factor manually

- ✓ Mass spectrometer module calibrated internally.
 - 1 Measure external calibration leak using the test system.
 - ⇒ The device indicates a leak rate that is too low based on the split flow ratio.
 - 2 Setting machine or sniff factor, see below.
 - ⇒ The device indicates the actual leak rate.

Setting the machine factor

Corrects a possible deviation between internal and external calibration in vacuum mode.	
Should be at value 1.00 without the option internal calibration leak. After the value is changed, the leak rate resulting from the change is displayed. This simplifies adjustment.	
Value range 1E-4...1E+5	
Control unit	Settings > Set up > Operation modes > Vacuum > Machine factor > Mass 2 (3, 4) > machine factor VAC H2 (M3, He)
LD protocol	Command 522
ASCII protocol	Command *FACTOR:FACMachine

Setting the sniff factor

Corrects a possible deviation between internal and external calibration in sniffer mode	
Value range 1E-4...1E+4	
Control unit	Settings > Set up > Operation modes > Sniffing > Sniff factor Mass 2 (3, 4) > Sniff factor H2 (M3, He)
LD protocol	Command 523
ASCII protocol	Command *FACTOR:FACSniff

6.6.8.2 Setting machine and sniff factor using machine calibration

- ✓ Internal calibration leak connected.
- ✓ External calibration leak installed in or on the test system and closed.
- ✓ Leak rates of internal and external calibration leak are entered.

- ✓ LD and ASCII protocol: The history must be queried via: Command 260 or *STATUS:CAL
- 1 Start machine calibration.
Control unit: Functions > CAL > Machine (Sniffer)
LD protocol 4, Parameter 3
ASCII protocol: *CAL:FACTor_Machine, *CAL:FACTor_Snif
IO1000 see figure in "External Calibration Configuration and Start [▶ 33]"
⇒ Internal calibration is performed automatically.
⇒ Request "Open calibration leak" (external calibration leak).
 - 2 Open external calibration leak and valve (if present) between the leak detector and the system.
 - 3 Confirm tuned and stable leak rate signal.
Control unit: "OK"
LD protocol: 11, Parameter 1
ASCII protocol: *CAL:ACKnowledge
IO1000 see figure in "External Calibration Configuration and Start [▶ 33]"
⇒ Request "Close calibration leak" (external calibration leak).
 - 4 Close external calibration leak. Leave existing valve open.
 - 5 Confirm tuned and stable leak rate signal.
Control unit: "OK"
LD protocol: 11, Parameter 1
ASCII protocol: *CAL:CLOSED
IO1000 see figure in "External Calibration Configuration and Start [▶ 33]"
⇒ Machine or sniff factor is determined.

6.7 Starting and stopping the measurement

Switches between measuring and standby operation	
START = Standby --> Measuring	
STOP = Measuring --> Standby	
Control unit	Functions > Start/Stop
LD protocol	Commands 1, 2
ASCII protocol	Command *STArT, *STOp

Enable/disable correction of the leak rate in Standby

During the measurement		During standby
ZERO is possible.		ZERO is not possible.
The trigger outputs switch depending on the leak rate and the trigger threshold.		The output at the trigger outputs is: Leak rate value exceeded threshold.
Sniff is possible.		Sniff is not possible.
External calibration is started during the activation of digital input CAL.		Internal calibration is started during the activation of digital input CAL.
In vacuum mode, the machine factor can be activated or deactivated during the correction of the leak rate for Standby. The sniffer valve is closed in Sniffer mode in Standby. The Sniff factor is therefore canceled in this setting.		
0	OFF (machine factor is not considered in Standby.)	
1	On (machine factor is considered in Standby.)	
Control unit	Settings > Set up > Operation modes > LR correction > Machine factor in standby	
LD protocol	Command 524	
ASCII protocol	-	

6.8 Loading and saving parameters

You can use a USB flash-drive on CU1000 to backup and restore the control unit and mass spectrometer module parameters.

Save parameter:

- "Functions > Data > Parameter > Save > Save parameter"

Loading parameters:

- "Functions > Data > Parameter > Load > Load parameter"

6.9 Copying measurement data, deleting measurement data

The measurement data can be saved to a USB flash-drive with CU1000.

- "Functions > Data > Recorder > Copy > Copy files"

The measurement data can be deleted on the CU1000.

- "Functions > Data > Recorder > Delete > Delete files"

6.10 Suppressing gas backgrounds with "ZERO" functions

"ZERO" can be used to suppress undesired helium backgrounds. If "ZERO" is enabled, the currently measured leak rate value will be interpreted as a helium background and subtracted from all subsequently measured values. The background value suppressed by ZERO is adjusted automatically if the background changes inside the unit. The background value is adjusted automatically depending on the set ZERO time, except with filter setting I•CAL, see "Measurement result display with signal filters [▶ 45]".

Activating and deactivating "ZERO"

Activating/deactivating "ZERO"	
0	On
1	Off
Control unit	
Function > ZERO > ZERO	
LD protocol	
Command 6	
ASCII protocol	
Command *ZERO	

Activating and deactivating "ZERO with start"

ZERO with Start suppresses the helium background automatically when a measurement is started.	
0	On
1	Off
Control unit	
Settings > ZERO/Filter > ZERO > ZERO with start	
LD protocol	
Command 409	
ASCII protocol	
Command *CONFig:ZEROSTART	

Setting ZERO mode

Specified the level of the helium background suppressed by ZERO (not with filter I•CAL).	
0	all decades
1	1 – 2 decades
2	2 – 3 decades
3	2 decades
4	3 – 4 decades
5	19/20 of the helium background are suppressed
Control unit	
Settings > ZERO/Filter > ZERO > ZERO > mode	
LD protocol	
Command 410	
ASCII protocol	
Command *CONFig:DECADEZero	

Deactivating the ZERO key on the sniffer

Deactivation of the ZERO key (ZERO adjustment) prevents that the measurement is influenced inadvertently.	
0	On
1	Off
Control unit	
Settings > Set up > Operation modes > Sniffing > Sniffer > Keys > ZERO key sniffer	
LD protocol	Command 412
ASCII protocol	Command *CONFig:BUtSniffer

6.11 Measurement result display with signal filters

Select signal filter

With the signal filters, the leak rate indicator regarding slope and noise behavior can be influenced.	
<ul style="list-style-type: none"> – Generally select signal filter I•CAL for the operation mode "Vacuum". – Generally select signal filter I-Filter for the operation mode "Sniff". – If the signal filter should simulate the time behavior of older units, then select filter "Fixed" or "2-Zone". 	
I•CAL	The leak rates are averaged at time intervals that are optimized for the range of the leak rates. The algorithm used offers excellent sensitivity and response time. Use of this setting is strongly recommended.
fixed	The leak rates are averaged at fixed intervals of 0.2 seconds.
2-zone	The filter is compatible with LDS1000 and LDS2000. The averaging period is switched depending on the filter leak rate threshold.
I-Filter	Filter optimized for sniffer mode. (Default with XL Sniffer Adapter set)
I-Filter slope suppress.	Same as I-Filter, but with additional slope suppression. The edge suppression corrects the measurement changes during the warm-up phase.
Control unit	
Settings > ZERO/Filter > Filter > Filter mode	
LD protocol	Command 402
ASCII protocol	Command *CONFig:FILTER

Setting the filter leak rate threshold

Leak rate background in mbar l / s for the averaging period. The averaging period is 10.24 s below this value. Above this value, the averaging period is 160 ms. Setting applies only to filter "2-stage".

1E-11 ... 9.9E-3

Control unit	Settings > ZERO/Filter > Settings > Filter 2-zone
--------------	---

LD protocol	Command 403
-------------	-------------

ASCII protocol	Command *CONFig:LRFilter
----------------	--------------------------

Setting filter ZERO time

Update interval for the offset value with negative leak rate signal (except for I•CAL filter).

Resolution 0.1 s (50 = 5.0 s)

Control unit	Settings > ZERO/Filter > Settings filter > ZERO time
--------------	--

LD protocol	Command 411
-------------	-------------

ASCII protocol	Command *CONFig:ZEROTIME
----------------	--------------------------

6.12 Control of the Gas Ballast Valve of the Backing Pump

The mass spectrometer module can control an electric 24 V gas ballast valve of the backing pump via the "Output" connection.

Controlling the gas ballast valve

Controlling the gas ballast valve using digital outputs.

0	Off
1	On
2	Continuously on

Control unit	Functions > Valves > Open internal calibration leak
--------------	---

LD protocol	Command 228
-------------	-------------

ASCII protocol	–
----------------	---

6.13 Selecting a device for the leak rate

Leak rate device display

Selecting the leak rate device in the display for vacuum or sniff	
0	mbar l/s (factory setting)
1	Pa m3/s
2	atm cc/s
3	Torr l/s
4	ppm (not VAC)
5	g/a (not VAC)
6	oz/yr (not VAC)
Control unit	Display > Units (display) > Leak rate device VAC (SNIF)
LD protocol	Command 396 (vacuum) Command 396 (sniffing)
ASCII protocol	Command *CONFig:UNIT:VACDisplay Command *CONFig:UNIT:SNDisplay

Leak rate device interface

Selecting the leak rate device of the interfaces for vacuum or sniff	
0	mbar l/s (factory setting)
1	Pa m3/s
2	atm cc/s
3	Torr l/s
4	ppm (not VAC)
5	g/a (not VAC)
6	oz/yr (not VAC)
Control unit	Settings > Set up > Interfaces > Units (interface) > Leak rate device VAC (SNIF)
LD protocol	Command 431 (vacuum) Command 432 (sniffing)
ASCII protocol	Command *CONFig:UNIT:LRVac Command *CONFig:UNIT:LRSnif

6.14 Select device for pressure

Pressure device interface

Selecting the pressure device of the interfaces	
0	mbar (factory setting)
1	Pa
2	atm
3	Torr
Control unit	Settings > Set up > Interfaces > Units (interface) > Pressure unit
LD protocol	Command 430 (Vacuum/Sniff)
ASCII protocol	Command *CONFig:UNIT:Pressure

6.15 Selecting display limits

Display range

Lowering and raising the display limits:

If very small leak rates are not of interest for your application, raising the lower limit of the display can facilitate the assessment of the leak rate indicator.

– up to 15 decades in VAC

– up to 11 decades in SNIF

If an unsuitable setting causes the usable range to be less than the decade, the upper limit is shifted until a visible decade remains.

Note: The current display limits are shown in the control unit when setting between the two parameters. Using the command 399 with the LD protocol the current display limit can be read out.

Control unit	Settings > Set up > Interfaces > Units (interface) > Pressure unit
LD protocol	Command 397
ASCII protocol	Command *CONFig:DISPL_LIM:HIGH*CONFig:DISPL_LIM:LOW

6.16 Setting trigger values

The default is 1E-5 mbar*l/s

The mass spectrometer module has four independent trigger values. If the measured leak rate exceeds the set trigger values, the corresponding digital outputs of IO1000 are activated.

In addition, exceeding the Trigger 1 on the control unit is highlighted.

1 / 2 / 3 / 4

Control unit	Setting > Trigger > Trigger 1 (2, 3, 4) > Trigger level
--------------	---

LD protocol	Command 385
-------------	-------------

ASCII protocol	Command *CONFIg:TRIGger1 (2, 3, 4)
----------------	------------------------------------

6.17 Setting capillary surveillance

Pressure value capillary clogged

You set a minimum pressure value in order to detect if the 25/300-sccm capillaries are blocked. If the value is fallen short of, the system issues warning 540. Error message 541 is output with strong lower deviation.

1E-3 ... 18 mbar

Control unit	Settings > Set up > Operation modes > Sniff > Capillary > Blocked > Pressure capillary blocked
--------------	--

LD protocol	Command 452
-------------	-------------

ASCII protocol	Command *CONFIg:PRESSLow
----------------	--------------------------

Pressure value capillary broken

You set a maximum pressure value in order to detect if the 25/300-sccm capillaries are blocked. If the value is exceeded, the system issues warning 542.

1E-3 ... 18 mbar

Control unit	Settings > Set up > Operation modes > Sniff > Capillary > Broken > Pressure capillary broken
--------------	--

LD protocol	Command 453
-------------	-------------

ASCII protocol	Command *CONFIg:PRESSHigh
----------------	---------------------------

Detection of a missing sniffer line

Automatic detection of a missing sniffer line. This function should be deactivated if a sniffer line that is not automatically detected is used.	
0	On
1	Off
Control unit Settings > Set up > Operation modes > Sniff > Sniffer > Messages > Sniffer line detection	
LD protocol	Command 529
ASCII protocol	–

6.18 Set the speed of the turbo molecular pump

Rotational speed of turbo molecular pump

In some applications, it may be advisable to reduce the speed of the turbo-molecular pump, to increase the sensitivity of the device. As a result, however, the maximum allowable inlet pressure decreases at the GROSS, FINE and ULTRA connections. After changing the speed recalibration is required!

Rotational speed of turbo molecular pump in Hertz	
1000	
1500	
Control unit Settings > Set up > MS module > TMP > Settings > TMP rotational speed	
LD protocol	501
ASCII protocol	*CONFig:SPEEDTMP

6.19 Cathode Selection

Selecting a cathode

The mass spectrometer includes two cathodes. In the factory setting the device uses cathode 1. If it is defective, the device automatically switches to the other cathode. With this setting it is possible to select a certain cathode.

0	CAT1
1	CAT2
2	Auto Cat1 (automatic switching to cathode 2, factory setting)
3	Auto Cat2 (automatic switching to cathode 1)
4	OFF
Control unit	Settings > Set up > MS module > Ion source > Cathode selection
LD protocol	530
ASCII protocol	*CONFig:CAThode *STATus:CAThode

6.20 Settings for the XL sniffer adapter

For operation with the XL Sniffer Adapter you have to use the

– SL3000XL sniffer line,

- Select the "XL Sniffer Adapter" operating mode, see "Select Compatibility Mode [▶ 27]".

Function of right sniffer key

Activate or deactivating the right key of the SL3000XL sniffer line (switching between low flow and high flow). Deactivating the key prevents an inadvertent influencing of the measurement.

Control unit	Settings > Set up > Operation modes > Sniff > Sniffer > Keys > Sniffer flow key
LD protocol	Command 415
ASCII protocol	Command *CONFig:HFButton

Search Function

When the search function is activated, the alarm is automatically connected to Trigger 2 as soon as it is switched to High Flow.

- Switched-off Search Function: Alarm, when Trigger 1 is exceeded.
- Switched-on Search Function and operation in Low Flow: Alarm, when Trigger 1 is exceeded.
- Switched-on Search Function and operation in High Flow: Alarm, when Trigger 2 is exceeded.

0	Off
---	-----

1	On
---	----

Control unit	Setting > Trigger > Search
--------------	----------------------------

LD protocol	Command 380
-------------	-------------

ASCII protocol	Command *CONFig:SEARCh
----------------	------------------------

In the SL3000XL the following are dependent on the trigger used; the leak rate bar, changing the background lighting, the beeper and changing the sniffer tip lighting.

**Sniffer LEDs:
Brightness**

Set the brightness of the LEDs designed to illuminate the spot under examination. This setting refers to the measurement process without LED alarm configuration, see below.

From "0" (off) to "6" (max.)

Control unit	Settings > Set up > Operation modes > Sniff > Sniffer > LED > Sniffer LED brightness
--------------	--

LD protocol	Command 414
-------------	-------------

ASCII protocol	Command *CONFig:BRIGHtness
----------------	----------------------------

**Sniffer LEDs: Alarm
configuration**

Behavior of the LEDs on the sniffer, when trigger value 1 is exceeded.

Off	No response
-----	-------------

Flashing	The LEDs are flashing
----------	-----------------------

Brighter	The LEDs shine with maximum brightness.
----------	---

Control unit	Settings > Set up > Operation modes > Sniff > Sniffer > LED > Sniffer LED alarm config.
--------------	---

LD protocol	Command 413
-------------	-------------

ASCII protocol	Command *CONFig:LIGHtAlarm
----------------	----------------------------

Sniffer beep: Alarm configuration

Response by the beep on the sniffer if the trigger value is exceeded.	
Off	No response
Trigger	Acoustic signal / vibration alarm
Control unit	Settings > Set up > Operation modes > Sniff > Sniffer > Beep > Sniffer Beep
LD protocol	Command 417
ASCII protocol	Command *CONFig:BEEP

Display of the hydrogen percentage

The sniffing with forming gas involves the use of hydrogen. The hydrogen percentage is taken into consideration with this specification. This will increase the displayed leak rate by the corresponding factor. You can also set the gas percentage for other gases (M3, He).	
0 - 100%	
Control unit	Settings > Set up > Operation modes > Sniff > Gas percentage > Mass2 > Gas percentage H2
LD protocol	Command 416
ASCII protocol	Command *CONFig:PERcent

Auto standby interval

Defines the duration in minutes until standby is activated. If the device operates in high flow, the filters of the sniffer line will foul up more quickly. Auto standby switches to low flow for protection. Moving the sniffer line automatically switches the previously selected flow back on.	
From "0" (off) to "60" (max.)	
Control unit	Settings > Set up > Operation modes > Sniff > Auto standby > Interval auto standby
LD protocol	Command 480
ASCII protocol	Command *CONFig:STANDBYDel

Auto standby interval

You set a minimum pressure value in order to detect if the XL capillary (high flow, 3000 sccm) is blocked. If the value is fallen short of, the system issues warning 550. Error message 551 is output with strong lower deviation.	
100 - 300 mbar	
Control unit	Settings > Set up > Operation modes > Sniff > Capillary > Blocked XL > Pressure capillary blocked XL
LD protocol	Command 455
ASCII protocol	Command *CONFig:PRESSXLLow

Pressure value XL capillary broken (high flow)

You set a maximum pressure value in order to detect a disruption in the XL capillary (high flow, 3000 sccm). If the value is exceeded, the system issues warning 552.

200 - 600 mbar

Control unit	Settings > Set up > Operation modes > Sniff > Capillary > Broken XL > Pressure capillary broken XL
--------------	--

LD protocol	Command 456
-------------	-------------

ASCII protocol	Command *CONFig:PRESSXLHigh
----------------	-----------------------------

Select flow

Select low flow or high flow. Comment: The selection can also be made with the right sniffer key or assigned to one of the favorite keys of the control unit.

Small (low flow)

Large (high flow)

Control unit	Settings > Configuration > Operating Mode > Flow > Flow Control or Functions > Flow > Flow Control
--------------	--

LD protocol	Command 229
-------------	-------------

ASCII protocol	Command *CONFig:Highflow
----------------	--------------------------

6.21 Selecting the type of expansion module

Function of right sniffer key

Selecting the type of module connected to the I/O connection

I/O module

Bus module

Control unit	Settings > Configuration > Interfaces > Device Selection > Module on I/O connection or Settings > Configuration > Accessories > Device Selection. > Module on I/O connection
--------------	--

LD protocol	–
-------------	---

ASCII protocol	–
----------------	---

6.22 Settings for I/O module IO1000

6.22.1 General interface settings

Setting the interface protocol

Setting the protocol for the module connected to the I/O connection. This setting can be overwritten with the DIP switch on the IO1000.

LD
ASCII
Binary
LDS1000

Control unit	Settings > Set up > Interfaces > Protocol > I/O module protocol
LD protocol	2593
ASCII protocol	*CONFig:RS232

6.22.2 Assigning inputs and outputs

Assigning analog outputs of the I/O module

The analog outputs of I/O module IO1000 can with assigned with different measurement value displays.

Possible functions: see the following table

Control unit	Settings > Set up > Interfaces > I/O module > Analog outp. > Config. Analog outputs 1/2
LD protocol	Commands 222, 223, 224
ASCII protocol	Command *CONFig:REcorder:LINK1 Command *CONFig:REcorder:LINK2 Command *CONFig:REcorder:SCALE Command *CONFig:REcorder:UPPEREXP

Limit values can be defined for the output voltages.	
VAC:	Min. 1×10^{-13} ... 1×10^{-1} mbar l/s Max. 1×10^{-12} ... 1×10^{-1} mbar l/s
SNIF:	Min. 1×10^{-9} ... 1×10^{-1} mbar l/s Max. 1×10^{-8} ... 1×10^{-1} mbar l/s
Control unit	Settings > Set up > Interfaces > LR limits
LD protocol	Command 226 (Vac) Command 227 (Snif)
ASCII protocol	Command *CONFig:LIMITS:VAC Command *CONFig:LIMITS:SNIF

Functions, assignment of analog outputs:

Off	The analog outputs are switched off (Output voltage = 0 V).	
Pressure p1 / Pressure p2	1 - 10 V; 0.5 V / decade; 1 V = 1×10^{-3} mbar	
Leak rate mantissa	1 - 10 V; linear; in the selected unit	Useful only if the other analog output is assigned "Leak rate exponent".
Leak rate exponent	1 - 10 V; 0.5 V / decade; Step function; 1 V = 1×10^{-12} ; in selected unit	Useful only if the other analog output is assigned "Leak rate mantissa" or "Leak rate ma. Hys." is occupied.
Linear leak rate	x ... 10 V; linear; in the selected unit	
<p>The upper limit (= 10 V) is set via the parameter "Upper limit exponent". The lower value is always 0 (leak rate), which corresponds to 0 V output voltage. The exponent of the upper limit can be set in entire decades, such as 1×10^{-4} mbar l/s.</p> <p>Settings > Set up > Interfaces > I/O module > Analog scale > AO exponent upper limit.</p> <p>This setting is for both analog outputs, if an appropriate output function is selected. Depending on the selected leak rate device there is a different absolute limit.</p> <p>The selected range can be additionally narrowed by the limits, which is valid for all interfaces, see above.</p>		
Leak rate log.	x ... 10 V; logarithmic; in the selected unit	
<p>The upper limit (= 10 V) and the scale (V / decades) are set via the parameters "Upper limit exponent" and "Scale for leak rate". For example:</p>		

Upper limit set to 1×10^{-5} mbar l/s (= 10 V). Scale set to 5 V / decade. Lower limit is at 1×10^{-7} mbar l/s (= 0 V). The logarithmic output function of both the slope in V / decade as well as the upper limit (10 V limit) can be set. This results in the minimum displayable value. The following slopes are available: 0.5, 1, 2, 2.5, 3, 5, 10 V/decade. The higher the selected slope value, the smaller the displayable area. The logarithmic settings are the most useful when several decades can be displayed, so a setting of <10 V / decade. The upper limit is the same for both analog outputs. In both of the following figures the 1 V / decade and 5 V / decade with different upper limit settings are exemplified. Depending on the selected leak rate device there is a different absolute limit. The selected range can be additionally narrowed by the limits, which is valid for all interfaces, see above.

Set by interface	The output voltage can be specified for tests with command 221.	
Leak rate Ma. Hys.	0.7 - 10 V; linear; in the selected unit	Useful only if the other analog output is assigned "Leak rate exponent". Through an overlap of the mantissa in the range 0.7 to 1.0, a constant jumping between two decades is prevented. 0.7 V corresponds to a leak rate of 0.7×10^{-x} . 9.9 V corresponds to a leak rate of 9.9×10^{-x} .
Pressure p1 (1 V / Dec.)/ Pressure p2 (1 V / Dec.)	1 - 10 V; 1 V / decade; 2.5 V = 1×10^{-3} mbar; 8.5 V = 1000 mbar	
Leak rate log. H./ Leak rate exp. Inv.	Special function. Use only on the recommendation of INFICON.	

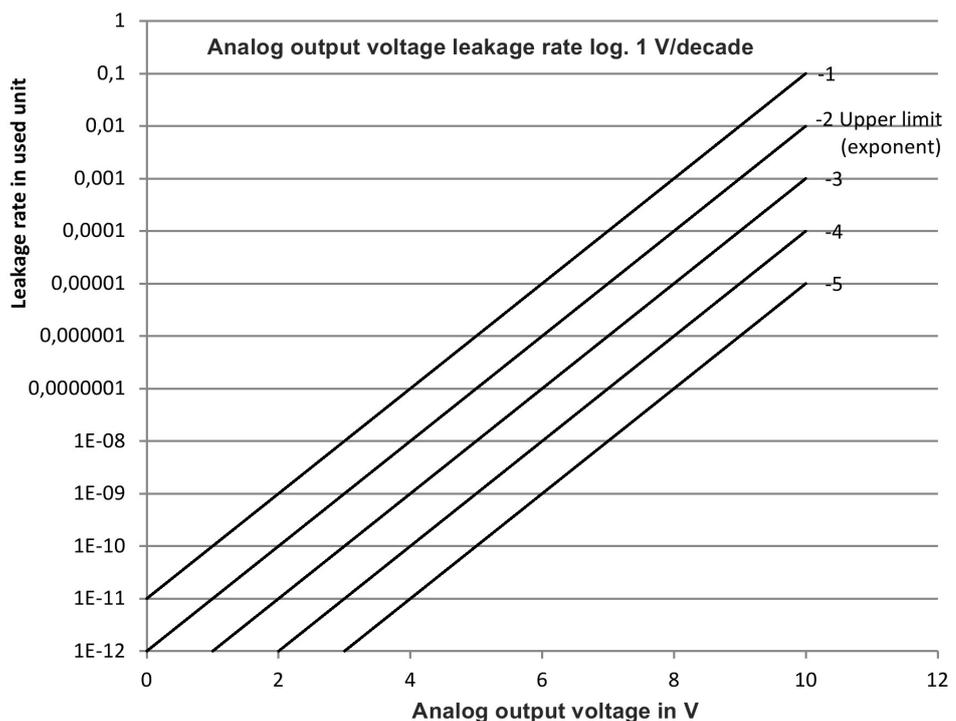


Fig. 8: Analog output voltage leak rate log. 1 V / decade

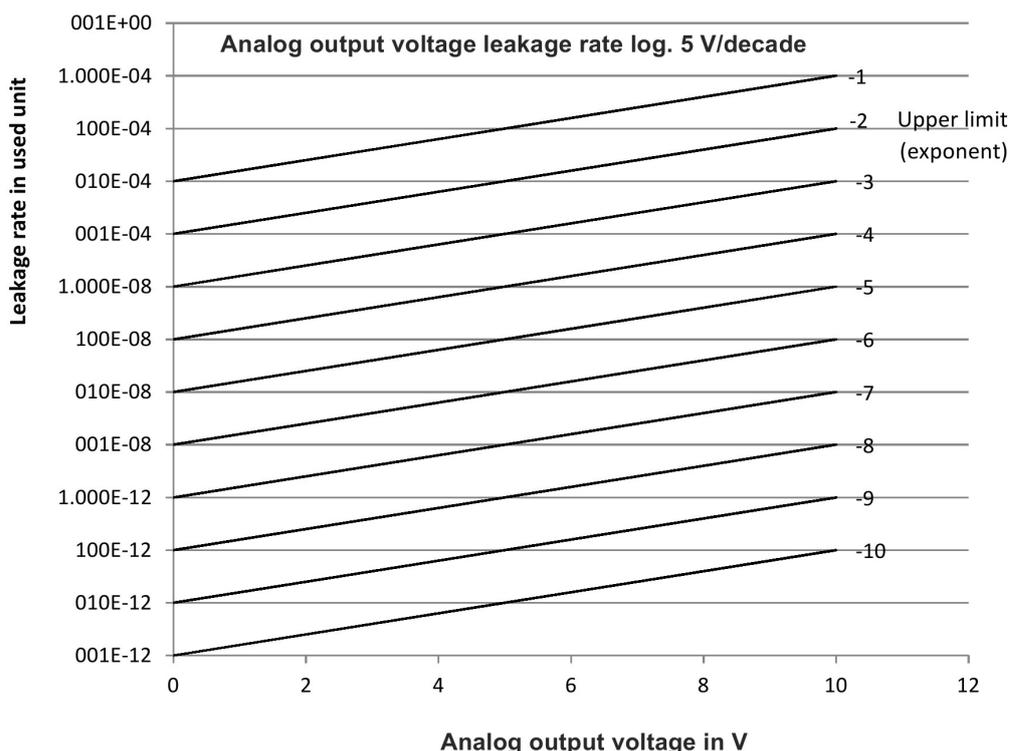


Fig. 9: Analog output voltage leak rate log. 5 V / decade

Output voltages in case of error The following voltages will be applied at the analog outputs in the event of an error:

Compatibility mode	Voltage
LDS1000	0 V
LDS2010	10 V
LDS3000	10.237 V

Configuration (LDS2010-compatible) The following table can be used for the transmission of settings from LDS2010 to LDS3000.

LDS2010 setting. Menu item 22	Analog output channel	Function LDS2010	Function LDS3000	Scaling of the leak rate	Upper limit (10 V = ...)
1	1	Leak rate mantissa in used unit. 1 ... 10 V	Leak rate mantissa	irrelevant	irrelevant
1	2	Leak rate exponent (step function) in used unit. . 1 ... 10 V, 0.5 V / Decade, 1 V = 1E-12	Leak rate exponent	irrelevant	irrelevant
2	1	Leak rate log. in used unit. 1 ... 10 V, 0.5 V / Decade, 1 V = 1E-12	Leak rate log.	0.5 V/dec.	1E6 [used unit]
2	2	Pressure p1 log. in used unit. 1 ... 10 V, 0.5 V / Decade, 1 V = 1E-3 mbar	Pressure p1	irrelevant	irrelevant

LDS2010 setting. Menu item 22	Analog output channel	Function LDS2010	Function LDS3000	Scaling of the leak rate	Upper limit (10 V = ...)
3	1	Leak rate mantissa in mbar·l/s 1 ... 10 V	Leak rate mantissa	irrelevant	irrelevant
3	2	Leak rate exponent (step function) in mbar·l/s 1 ... 10 V, -1 V / Decade, 0 V = 1E0 mbar l/s	LR exponent inverted	irrelevant	irrelevant
4	1	Leak rate log. 0 ... 10 V, 1 V / Decade, 0 V = 1E-10 mbar l/s	Leak rate log.	1 V/dec.	1.00E+00
4	2	Pressure p1 log. in mbar 1 V / decade, 2.5 ... 8.5 V, 2.5 V = 1E-3 mbar, 5.5 V = 1E0 mbar	p1 1 V/dec.	irrelevant	irrelevant
5	1	Leak rate mantissa in used unit. 1 ... 10 V rise, 0.7 ... 10 V fall	LR mantissa hyst.	irrelevant	irrelevant
5	2	Leak rate exponent in used unit. 1 ... 10 V, 0.5 V / Decade, 0 V = 1E-14	Leak rate exponent	irrelevant	irrelevant
6	1	Leak rate log. in Pa·m ³ /s 0 ... 10 V, 1 V/Decade, 0 V = 1E-12 Pa·m ³ /s = 1E-12 mbar l/s	Leak rate log.	1 V/dec.	1E-2 mbar l/s
6	2	Pressure p1 log. in Pa 1 V / decade, 2.5 ... 8.5 V, 2.5 V = 1E-3 mbar	p1 1 V/dec.	irrelevant	irrelevant
8	1	Leak rate log. in Pa·m ³ /s 0 ... 10 V, 1 V/Decade, 0 V = 1E-12 Pa·m ³ /s = 1E-12 mbar l/s	Leak rate log.	1 V/dec.	1E-2 mbar l/s
8	2	Pressure p2 log. in Pa 1 V / decade, 2.5 ... 8.5 V, 2.5 V = 1E-3 mbar	p2 1 V/dec.	irrelevant	irrelevant
9	1	Pressure p1 log. in Pa 1 V / decade, 2.5 ... 8.5 V, 2.5 V = 1E-3 mbar	p1 1 V/dec.	irrelevant	irrelevant
9	2	Pressure p2 log. in Pa 1 V / decade, 2.5 ... 8.5 V, 2.5 V = 1E-3 mbar	p2 1 V/dec.	irrelevant	irrelevant

LDS2010 setting. Menu item 22	Analog output channel	Function LDS2010	Function LDS3000	Scaling of the leak rate	Upper limit (10 V = ...)
10	1	Leak rate log. in mbar l/s 0 ... 8 V, 2 V / Decade, 0 V = 1E-3 mbar l/s	Leak rate log.	2 V/dec.	1E+2 mbar l/s
10	2	Leak rate log. in mbar l/s 0 ... 10 V, 3 V / Decade, 0 V = 1E-3 mbar l/s	Leak rate log.	Special 1	1E+1 mbar l/s
11	1	Leak rate log. in mbar l/s 0 ... 8 V, 2 V / Decade, 0 V = 1E-4 mbar l/s	Leak rate log.	2 V/dec.	1E+1 mbar l/s
11	2	Leak rate log. in mbar l/s 0 ... 10 V, 3 V / Decade, 0V = 1E-4 mbar l/s	Leak rate log.	Special 1	1E+0 mbar l/s
12	1	Leak rate log. in mbar l/s 0 ... 8 V, 2 V / Decade, 0 V = 1E-5 mbar l/s	Leak rate log.	2 V/dec.	1E0 mbar l/s
12	2	Leak rate log. in mbar l/s 0 ... 10 V, 3 V / Decade, 0 V = 1E-5 mbar l/s	Leak rate log.	Special 1	1E-1 mbar l/s
13	1	Leak rate log. in mbar l/s 0 ... 8 V, 2 V / Decade, 0 V = 1E-6 mbar l/s	Leak rate log.	2 V/dec.	1E-1 mbar l/s
13	2	Leak rate log. in mbar l/s 0 ... 10 V, 3 V / Decade, 0 V = 1E-6 mbar l/s	Leak rate log.	Special 1	1E-2 mbar l/s
14	1	Leak rate log. in mbar l/s 0 ... 8 V, 2 V / Decade, 0 V = 1E-7 mbar l/s	Leak rate log.	2 V/dec.	1E-2 mbar l/s
14	2	Leak rate log. in mbar l/s 0 ... 10 V, 3 V / Decade, 0 V = 1E-7 mbar l/s	Leak rate log.	Special 1	1E-3 mbar l/s
15	1	Leak rate log. in mbar l/s 0 ... 8 V, 2 V / Decade, 0 V = 1E-8 mbar l/s	Leak rate log.	2 V/dec.	1E-3 mbar l/s
15	2	Leak rate log. in mbar l/s 0 ... 10 V, 3 V / Decade, 0 V = 1E-8 mbar l/s	Leak rate log.	Special 1	1E-4 mbar l/s
16	1	Leak rate log. in mbar l/s 0 ... 8 V, 2 V / Decade, 0 V = 1E-9 mbar l/s	Leak rate log.	2 V/dec.	1E-4 mbar l/s
16	2	Leak rate log. in mbar l/s 0 ... 10 V, 3 V / Decade, 0 V = 1E-9 mbar l/s	Leak rate log.	Special 1	1E-5 mbar l/s
17	1	Leak rate log. in mbar l/s 0 ... 8 V, 2 V / Decade, 0 V = 1E-10 mbar l/s	Leak rate log.	2 V/dec.	1E-5 mbar l/s
17	2	Leak rate log. in mbar l/s 0 ... 10 V, 3 V / Decade, 0 V = 1E-10 mbar l/s	Leak rate log.	Special 1	1E-6 mbar l/s

LDS2010 setting. Menu item 22	Analog output channel	Function LDS2010	Function LDS3000	Scaling of the leak rate	Upper limit (10 V = ...)
18	1	Leak rate log. in mbar l/s 0 ... 8 V, 2 V / Decade, 0 V = 1E-11 mbar l/s	Leak rate log.	2 V/dec.	1E-6 mbar l/s
18	2	Leak rate log. in mbar l/s 0 ... 10 V, 3 V / Decade, 0 V = 1E-11 mbar l/s	Leak rate log.	Special 1	1E-7 mbar l/s
20	1	Leak rate lin. In mbar l/s 0 ... 10 V, 1 V = 1 mbar l/s	Linear leak rate	irrelevant	1E1 mbar l/s
20	2	Leak rate log. in mbar l/s 0 ... 4 V, 1 V / Decade, 0 V = 1E-3 mbar l/s	Leak rate log.	1 V/dec.	1E7 mbar l/s
21	1	Leak rate lin. In mbar l/s 0 ... 10 V, 1 V = 1E-1 mbar l/s	Linear leak rate	irrelevant	1E0 mbar l/s
21	2	Leak rate log. in mbar l/s 0 ... 4 V, 1 V / Decade, 0 V = 1E-4 mbar l/s	Leak rate log.	1 V/dec.	1E6 mbar l/s
22	1	Leak rate lin. In mbar l/s 0 ... 10 V, 1 V = 1E-2 mbar l/s	Linear leak rate	irrelevant	1E-1 mbar l/s
22	2	Leak rate log. in mbar l/s 0 ... 4 V, 1 V / Decade, 0 V = 1E-5 mbar l/s	Leak rate log.	1 V/dec.	1E5 mbar l/s
23	1	Leak rate lin. In mbar l/s 0 ... 10 V, 1 V = 1E-3 mbar l/s	Linear leak rate	irrelevant	1E-2 mbar l/s
23	2	Leak rate log. in mbar l/s 0 ... 4 V, 1 V / Decade, 0 V = 1E-6 mbar l/s	Leak rate log.	1 V/dec.	1E4 mbar l/s
24	1	Leak rate lin. In mbar l/s 0 ... 10 V, 1 V = 1E-4 mbar l/s	Linear leak rate	irrelevant	1E-3 mbar l/s
24	2	Leak rate log. in mbar l/s 0 ... 4 V, 1 V / Decade, 0 V = 1E-7 mbar l/s	Leak rate log.	1 V/dec.	1E3 mbar l/s
25	1	Leak rate lin. In mbar l/s 0 ... 10 V, 1 V = 1E-5 mbar l/s	Linear leak rate	irrelevant	1E-4 mbar l/s
25	2	Leak rate log. in mbar l/s 0 ... 4 V, 1 V / Decade, 0 V = 1E-8 mbar l/s	Leak rate log.	1 V/dec.	1E2 mbar l/s
26	1	Leak rate lin. In mbar l/s 0 ... 10 V, 1 V = 1E-6 mbar l/s	Linear leak rate	irrelevant	1E-5 mbar l/s
26	2	Leak rate log. in mbar l/s 0 ... 4 V, 1 V / Decade, 0 V = 1E-9 mbar l/s	Leak rate log.	1 V/dec.	1E1 mbar l/s

LDS2010 setting. Menu item 22	Analog output channel	Function LDS2010	Function LDS3000	Scaling of the leak rate	Upper limit (10 V = ...)
27	1	Leak rate lin. In mbar l/s 0 ... 10 V, 1 V = 1E-7 mbar l/s	Linear leak rate	irrelevant	1E-6 mbar l/s
27	2	Leak rate log. in mbar l/s 0 ... 4 V, 1 V / Decade, 0 V = 1E-10 mbar l/s	Leak rate log.	1 V/dec.	1E0 mbar l/s
28	1	Leak rate lin. In mbar l/s 0 ... 10 V, 1 V = 1E-8 mbar l/s	Linear leak rate	irrelevant	1E-7 mbar l/s
28	2	Leak rate log. in mbar l/s 0 ... 4 V, 1 V / Decade, 0 V = 1E-11 mbar l/s	Leak rate log.	1 V/dec.	1E-1 mbar l/s
29	1	Leak rate lin. In mbar l/s 0 ... 10 V, 1 V = 1E-9 mbar l/s	Linear leak rate	irrelevant	1E-8 mbar l/s
29	2	Leak rate log. in mbar l/s 0 ... 4 V, 1 V / Decade, 0 V = 1E-11 mbar l/s	Leak rate log.	1 V/dec.	1E-1 mbar l/s
30	1	Leak rate lin. In mbar l/s 0 ... 10 V, 1 V = 1E-10 mbar l/s	Linear leak rate	irrelevant	1E-9 mbar l/s
30	2	Leak rate log. in mbar l/s 0 ... 4 V, 1 V / Decade, 0 V = 1E-11 mbar l/s	Leak rate log.	1 V/dec.	1E-1 mbar l/s

- Analog input readout**
- No function can be configured for the analog input.
 - It is reserved for future applications.
 - LD command 220 can be used to read out the voltage value on the analog input.

6.22.2.1 Assigning the digital inputs of the I/O module

The available functions can be assigned in any way necessary to the digital inputs PLC-IN 1...10 of the I/O module.

- Active signal: typically 24 V
- Inactive signal: typically 0 V.

The 24V output of the I/O module can be used as an active signal.

Every function can be inverted.

Possible functions: see the following table

Control unit	Settings > Set up > Interfaces > I/O module > Digital inputs > Configuration PLC Input
LD protocol	Command 438
ASCII protocol	*CONFig:PLCINLINK:1 (2 ... 10)

Key-operated switch An external key switch with up to three switching outputs can be connected via three PLC inputs. The key switch can be used to select the access level of the operator of the control unit.

Button 1 - Operator

Button 2 - Supervisor

Button 3 - Integrator

Example for a suitable key switch: Hopt+Schuler, No. 444-05

Functions, assignment of digital inputs:

Function	Flank/state:	Description
No function	–	No function
CAL dynam.	inactive→ active: active→ inactive:	Start external dynamic calibration. Apply value for background and finish calibration.
CAL external	inactive→ active: active→ inactive:	Start external calibration. Apply value for background and finish calibration.
CAL intern	inactive→ active:	Start internal calibration.
SNIF/VAC	inactive→ active: active→ inactive:	Enable sniffer mode. Enable vacuum mode.
Start	inactive→ active:	Switch to Meas. (ZERO is possible, all trigger outputs switch depending on the leak rate.)
Stop	inactive→ active:	Switch to Standby. (ZERO is not possible, all trigger outputs will return "Leak rate threshold value exceeded".)
ZERO	inactive→ active: active→ inactive:	Switch ZERO on. Switch ZERO off.
ZERO pulse	inactive→ active:	Switching ZERO on or off.
Delete	inactive→ active:	Erase warning or error message / cancel calibration.
Gas ballast	inactive→ active:	Open gas ballast valve. Close gas ballast valve unless always open.

Function	Flank/state:	Description
	active→ inactive:	
Selection dyn/norm	inactive→ active: active→ inactive:	External calibration mode with activation of digital input "CAL": External dynamic calibration (without auto tune, allowing for the measuring times and pump cycle times set via the digital inputs) External normal calibration (with auto tune, not considering the system-specific measuring times and pump cycle times)
Start / Stop	inactive→ active: active→ inactive:	Switch to Meas. (ZERO is possible, all trigger outputs switch depending on the leak rate.) Switch to Standby. (ZERO is not possible, all trigger outputs will return "Fail".)
Key 1	active:	User "Operator"
Key 2	active:	User "Supervisor"
Key 3	active:	User "Integrator"
CAL	inactive→ active:	When set to Standby, the device will start an internal calibration. When set to Meas, the device will start an external calibration.
ZERO update	inactive→ active:	A new zero word is formed.
TL	inactive→ active: active→ inactive:	The internal calibration leak is opened. The internal calibration leak is closed.
TL Plus	inactive→ active:	The internal calibration leak opens or closes.
XL flow	inactive→ active: active→ inactive:	The XL flow is turned on with the XL Adapter. The XL flow is turned off with the XL Adapter.
CAL Mach	inactive→ active:	Start machine factor calibration
Internal PROOF	inactive→ active:	Start the internal Proof function.
External PROOF	inactive→ active:	Start the external Proof function.

Function	Flank/state:	Description
START / STOP impulse	inactive→ active:	Activate Start or Stop.
ZERO updated	inactive→ active: active→ inactive:	Update or switch on ZERO No function
Calibration leak open	inactive→ active: active→ inactive:	Open calibration leak Close calibration leak
calibration leak on pulse	inactive→ active: active→ inactive:	Open calibration leak if closed, or close if open No function
Flow	inactive→ active: active→ inactive:	Switch flow of SL3000XL to 3000 sccm (XL adapter) Switch flow of SL3000XL to 300 sccm (XL adapter)
CAL machine	inactive→ active:	Determining the machine factor or of the sniff factor
Internal CAL check	inactive→ active:	Check calibration with internal calibration leak
External CAL check	inactive→ active:	Check calibration with external calibration leak
Start / Stop impulse	inactive→ active:	Switching between measuring operation and standby
Mass 2 / Mass 4	inactive→ active: active→ inactive:	Activate mass 4 Activate mass 2

6.22.2.2 Assigning the digital outputs of the I/O module

The available functions can be assigned in any way necessary to the digital outputs PLC-OUT 1...8 of the I/O module.

Every function can be inverted.

Possible functions: see the following table

Control unit	Settings > Set up > Interfaces > I/O module > Digital outputs > Configuration PLC Output
LD protocol	Command 263
ASCII protocol	*CONFig:PLCOUTLINK:1 (2 ... 8)

Functions, assignment of digital outputs:

Function	State:	Description
Open	open:	always open
Trigger 1	closed:	Value exceeded leak rate threshold Trigger 1
	open:	Value fell below leak rate threshold Trigger 1
Trigger 2	closed:	Value exceeded leak rate threshold Trigger 2
	open:	Value fell below leak rate threshold Trigger 2
Trigger 3	closed:	Value exceeded leak rate threshold Trigger 3
	open:	Value fell below leak rate threshold Trigger 3
Trigger 4	closed:	Value exceeded leak rate threshold Trigger 4
	open:	Value fell below leak rate threshold Trigger 4
Ready	closed:	Emission switched on, calibration process inactive, no error
	open:	Emission switched off or calibration process active or error
Warning	closed:	Warning
	open:	no warning
Error	closed:	Error
	open:	no error
CAL active	closed:	Device is calibrated.
	open:	Device is not calibrated.
CAL request	closed:	and no external calibration: Calibration request (with temperature change from 5 °C or 30 minutes after the start-up or if default speed was changed)
	closed:	and external calibration or "CAL check": Request "Open or close external calibration leak"
	open:	no request

Function	State:	Description
Run up	closed:	Run up
	open:	no run-up
ZERO active	closed:	ZERO switched on
	open:	ZERO switched off
Emission on	closed:	Emission switched on
	open:	Emission switched off
Measuring	closed:	Measuring (ZERO is possible, all trigger outputs switch depending on the leak rate.)
	open:	Standby or emission disabled (ZERO is not possible, all trigger outputs will return "Leak rate threshold value exceeded".)
Standby	closed:	Standby (ZERO is not possible, all trigger outputs will return "Leak rate threshold value exceeded".)
	open:	Measuring (ZERO is possible, all trigger outputs switch depending on the leak rate.)
SNIF	closed:	SNIF
	open:	VAC
Error or warning	closed:	Error or warning
	open:	No error or warning
Gas ballast	closed:	Gas ballast is active
	open:	Gas ballast is inactive
Calibration leak open	closed:	calibration leak is active
	open:	calibration leak is inactive
CAL stable	closed:	Calibration completed with calibration leak (see "Time and general preferences [30]")
	open:	Assignment not stable or calibration is inactive
Cathode 2	closed:	Cathode 2 is active
	open:	Cathode 1 is active

6.23 Settings for bus module BM1000

Address of bus module

Setting the bus module address. (Node address with Profibus, MACID with DeviceNet)

0 - 255

Control unit Settings > Set up > Interfaces > Bus module > Address

LD protocol 326

ASCII protocol –

6.24 Warning and error messages

The device is equipped with extensive self-diagnostic functions.

Error messages

Errors are events that the device cannot correct itself and that force interruption of its operation. The error message consists of a number and a descriptive text.

After you have removed the cause of the error, start operation again with the restart key.

Warnings

Warnings warn of device modes that can impair the accuracy of measurements. Operation of the device is not interrupted.

Confirm acknowledgment of the warning with the OK key or the right key on the sniffer handle.

The following table displays all the warnings and error messages. It lists possible causes for the malfunction and instructions on how to eliminate these.

Please note that work marked with an asterisk must be carried out only by service staff that is authorized by INFICON.

Warning (Wrn) Error (Err)	Error message LDS3000	Error number		Limit values	Cause
		LD-S1000Protokoll	Binary or ASCII protocol compatibility mode LDS1000/LDS2010		
1xx system error (RAM, ROM, EEPROM, clock, ...)					
Wrn102	Timeout EEPROM MSB Box (Parameter number)	84	43		EEPROM on IF board or MSB defective

Warning (Wrn) Error (Err)	Error message LDS3000	Error number		Limit values	Cause
		LD-S1000Protokoll	Binary or ASCII protocol compatibility mode LDS1000/LDS2010		
Wrn104	An EEPROM parameter is initializing	84	43		Following software update or EEPROM defective
Wrn106	EEPROM parameter initializing	84	43		Following software update or EEPROM defective
Wrn110	Clock not set	16	16		Jumper for clock not set, battery drained, clock defective
Wrn122	No response from the BUS module	99	99		Connection to BUS module interrupted
Wrn123	Unsupported configuration INFICON from BM1000	99	99		The selected configuration is not supported by the connected INFICON BM1000-fieldbus type.
Wrn125	I/O module not connected	99	99		Connection to I/O module interrupted
Wrn127	Wrong bootloader version	99	99		Boot loader not compatible with application
Err130	Sniffer not connected	99	99		The sniffer line is not electrical connected. See also "Setting capillary surveillance [▶ 49]".
Wrn132	SL3000 not supported				Only the SL3000XL may be used with the XL Sniffer Adapter
Wrn150	Pressure sensor 2 is not connected	–	–		Connecting pressure sensor PSG500 to a FINE connection.
2xx operating voltage error					
Wrn201	U24_MSB too low	24	120	21.6V	24V power supply pack
Wrn202	U24_MSB too high	24	120	26.4V	24V power supply pack
Wrn203	24V_PWR12 voltage out of range (TL_valve/GB_valve)	24	120	20V 30V	Short circuit at valve 1 (calibration leak) or valve 2 (gas ballast)
Wrn204	24V_PWR34 voltage out of range (valve 3/4)	24	120	20V 30V	Short circuit at valve 3 or valve 4

Warning (Wrn) Error (Err)	Error message LDS3000	Error number		Limit values	Cause
		LD-S1000Protokoll	Binary or ASCII protocol compatibility mode LDS1000/LDS2010		
Wrn205	24V_PWR56 voltage out of range (Sniff_valve/valve6)	24	120	20V 30V	Short circuit at valve 5 (sniff) or valve 6
Wrn221	Internal voltage 24V_RC voltage out of range	24	120	20V 30V	Short circuit 24V at the control unit output
Wrn222	Internal voltage 24V_IO voltage out of range	24	120	20V 30V	Short circuit 24V at IO output
Wrn223	Internal voltage 24V_TMP voltage out of range	24	120	20V 30V	Short circuit 24V of the TMP
Wrn224	Internal voltage 24V_1 (Pirani) voltage out of range	24	120	20V 30V	Short circuit 24V Pressure sensor PSG500 (1,2,3), sniffer line
Wrn240	Voltage +15V out of range	24	120		+15V too low, IF board or MSB defective
Wrn241	Voltage -15V out of range	24	120		-15V too low, short circuit at preamplifier, IF board or MSB defective
Err242	+15V or -15V voltage shorted	24	120		+15V or -15V too low, short circuit at preamplifier, IF board or MSB defective
Wrn250	REF5V voltage out of range	24	120	4.5V 5.5V	+15V or 5V too low, short circuit at preamplifier, IF board or MSB defective
Err252	REF5V voltage shorted	24	120		+15V or REF5V too low, short circuit at preamplifier, IF board or MSB defective
3xx detection system (offset preamplifier, preamplifier test, emission, cathode test)					
Wrn300	Anode voltage too low	41	132	7V < the setpoint	Short circuit anode voltage, pressure in mass spectrometer too high, IF board, MSB or ion source defective
Wrn301	Anode voltage too high	40	131	7V > the setpoint	MSB defective

Warning (Wrn) Error (Err)	Error message LDS3000	Error number		Limit values	Cause
		LD-S1000Protokoll	Binary or ASCII protocol compatibility mode LDS1000/LDS2010		
Wrn302	Suppressor voltage too low	39	130	297V	Short circuit suppressor, IF board or MSB defective
Wrn303	Suppressor voltage too high	38	129	363V	MSB defective
Wrn304	Anode-cathode voltage too low	36	127	40V	Short circuit anode-cathode, IF board or MSB defective
Wrn305	Anode-cathode voltage too high	35	126	140V	MSB defective
Err306	Anode voltage faulty	36	127	40 V deviation from the default value	The anode voltage does not match the default value or the set value is outside the allowable setting range.
Wrn310	Cathode 1 is defective	45	136		Cathode defective, line to cathode interrupted, IF board or MSB defective
Wrn311	Cathode 2 is defective	46	137		Cathode defective, line to cathode interrupted, IF board or MSB defective
Err312	Cathode defective	47	138		Cathode defective, line to cathode interrupted, IF board or MSB defective
Err340	Emission error	44	135	< 90% of the target value > 110% of the target value	Emission was stable previously, pressure probably too high, message after 15s
Wrn342	Cathode not connected	47	138		Both cathodes defective during self-testing or plug not connected
Wrn350	Suppressor not connected	39	130		Suppressor cable during self-testing not connected or defective
Wrn352	Preamplifier not connected				Preamplifier defective, cable not plugged in

Warning (Wrn) Error (Err)	Error message LDS3000	Error number		Limit values	Cause
		LD-S1000Protokoll	Binary or ASCII protocol compatibility mode LDS1000/LDS2010		
Err358	Preamplifier oscillates between 2 ranges				Signal varies too much (see command 1120) Preamplifier defective
Err359	Overdriven preamplifier	31	123		Signal too large preamplifier defective
Wrn360	Preamplifier output too low	31	123	<-70 mV at 500 GΩ	Poor ion source or contaminated mass spectrometer
Wrn361	Preamplifier offset too high	31	123	>+/-50 mV at 500 GΩ, >+/-10 mV at 15 GΩ, <+/-10 mV at 470 MΩ, <+/-9 mV at 13 MΩ	Preamplifier defective
Wrn362	Preamplifier range error	31	123		Preamplifier or MSB box defective
Wrn390	500 G outside the range	31	123	450 GΩ 550 GΩ	Preamplifier defective, error at the suppressor, IF board or MSB defective
4xx TMP fault (also temperature)					
Err400	TMP fault number	49	15		
Wrn401	TMP warning number				
Err402	No communication with TMP	49	15		Cable to TMP / TMP defective, IF board or MSB defective
Err403	TMP rotational speed too low	53	142	< 95% of the target value	Pressure too high, TMP defective
Err404	TMP current consumption too high	49	2	3A	
Err405	No TMP run-up time	60	61	5 min.	Pressure too high, TMP faulty
Err410	TMP temperature too high	49	2	61°C	Cooling failed, check MSB module operating conditions

Warning (Wrn) Error (Err)	Error message LDS3000	Error number		Limit values	Cause
		LD-S1000Protokoll	Binary or ASCII protocol compatibility mode LDS1000/LDS2010		
Wrn411	High TMP temperature	49	2	60°C	Cooling failed, check MSB module operating conditions
Err420	TMP voltage too high	49	2		Power supply defective, TMP defective
Wrn421	TMP voltage too low				Cable cross-section 24 V supply for MSB modules too low, output current 24-V power supply too low (I < 10 A), power supply defective, TMP defective
Err422	TMP no run-up time	49	2	8 min.	TMP foreline pressure too high, VV pump final pressure too high, leakage high vacuum system, flood valve not close, TMP bearing damage, TMP flawed
Err423	TMP pressure rise	49	2		Inrush of air, flood valve defective or incorrectly dimensioned

5xx Pressure and flow errors

Wrn500	Pressure sensor not connected	58	144	0.5V	Pressure sensor PSG500 P1 not connected, IF board or MSB defective
Wrn502	Pressure sensor 2 not connected				Pressure sensor PSG500 P2 not connected, IF board or MSB defective.
Wrn520	Pressure too high	73	148	18 mbar	Pressure p1 too high
Wrn521	Pressure rise, anode voltage collapse	73	148	< Setpoint - 20V	Pressure p1 too high, message after 1.4s
Wrn522	Pressure rise, emissions collapsed	73	148	< 90% of the target value > 110% of the target value	Emission was stable previously, pressure p1 too high, message after 5s

Wrn540	Pressure too low, Sniffer blocked	63	62	Sniffer flow warning parameter	Sniffer clogged, sniffer valve defective, filter clogged
Err541	Sniffer blocked (p1)	62	146		Sniffer blocked, sniffer valve defective (pressure lower than half of the configured warning value), filter clogged
Wrn542	Sniffer broken	64	147		Sniffer broken
Wrn550	Pressure too low, XL Sniffer blocked				Clean or replace the high flow capillary of the sniffer line. Replace soiled filter.
Wrn552	XL Sniffer broken				Replace the high flow capillary of the sniffer line.
Wrn554	XL Sniffer P2 too small	63	62		Pressure on SL3000XL too low in low flow.
6xx Calibration errors					
Wrn600	Calibration factor too low	81	153	0.01	Calibration leak or machine factor set incorrectly
Wrn601	Calibration factor too high	81	153	10000	Calibration leak or machine factor set incorrectly, split flow factor too high
Wrn602	KalFaktor lower than last calibration	81	153	< 50% of the old value	Calibration leak, machine factor or split flow factor has changed
Wrn603	KalFaktor higher than last calibration	81	153	> 200% of the old value	Calibration leak, machine factor or split flow factor has changed
Wrn604	Int. Cal. not possible, lack of calibration leak control	81	153		calibration leak is not enabled
Wrn605	Difference during calibration too small				Calibration leak defective or signal too weak.
Wrn610	Machine factor too low	81	153	1.00E-04	Machine factor adjustment inaccurate
Wrn611	Machine factor too high	81	153	1.00E+04	Machine factor adjustment inaccurate, split flow factor too high
Wrn612	Machine factor lower than last time	81	153	< 50% of the old value	Split flow factor has changed

Wrn613	Machine factor greater than last time	81	153	> 200% of the old value	Split flow factor has changed
Wrn625	Int. calibration leak not set	0	0		Leak rate of int. calibration leak is still set to factory setting
Wrn626	Ext. Calibration leak not set	0	0		Leak rate of calibration leak is still set to factory setting
Wrn630	Calibration request	0	0		Temperature change of 5°C, Speed was changed since last calibration, 30-minute switch-on time and still no calibration conducted
Wrn650	Calibration is not recommended in the first 20 minutes				A calibration during the first 20 minutes after starting (warm-up phase) the leak detector is not recommended. The warning message can be turned off: - LD protocol: Bef 429 - ASCII: *CONFig:CALWarn (ON,OFF)
Wrn670	Calibration error	81	153		Since a problem has occurred during the calibration, you have to recalibrate.
Wrn671	Peak not found	81	153		The signal was too restless during the peak search. Calibration has been aborted.
Wrn680	Deviation to the calibration detected	0	0		The verification of calibration has shown that you should recalibrate.
7xx temperature errors (preamplifier, electronics)					
Wrn700	Preamplifier temp. too low	33	60	2°C	Temperature too low
Wrn702	Preamplifier temp. too high	32	124	60°C	Temperature too high
Wrn710	MSB temperature too high	54	44	55°C	Temperature too high
Err711	Max. MSB temperature exceeded	54	44	65°C	Temperature too high
8xx not used					
9xx maintenance messages (e.g. TMP)					
Wrn901	Maintenance bearing/lubricant	99	99	3 years	TMP maintenance necessary

Wrn910	Maintenance diaphragm pump	99	99		8000 hour maintenance of diaphragm pump required
--------	----------------------------	----	----	--	--

6.24.1 Illustration of error codes with the help of the status LEDs

Any errors or warnings occurring in the MSB box will be indicated both as an error code by the control unit and as a blink code by the Status LED.

The blink code is preceded by a long white signal. This is followed by an error or warning number. An error number is indicated by means of red signals, while a warning number is displayed using orange signals (the orange signals have a strong green tinge, however):

-> Blink code start: long white signal

- Hundreds digit: 0 ... 9 red signals for error or 0 ... 9 orange signals for warnings
- Break: blue signal
- Tens digit: 0 ... 9 red signals for error or 0 ... 9 orange signals for warnings
- Break: blue signal
- Units digit: 0 ... 9 red signals for error or 0 ... 9 orange signals for warnings

The blink code is repeated cyclically.

For example: The pressure is too high.

-> Error code = Warning 520

-> Blink code of the status LED: White (long), 5-orange, blue, 2-orange, blue

6.25 Resetting the settings

Mass spectrometer module

The settings of the mass spectrometer module can be reset to factory settings.	
0	Load factory settings
10	Reset the settings for compatibility mode LDS1000
11	Reset the settings for compatibility mode LDS2010
12	Reset the settings for XL sniffer adapter mode
Control unit	Functions > Data > Parameters > Reset > MSB settings
LD protocol	Command 1161
ASCII protocol	Command *RST:FACTORY
	–
	–
	Command *RST:SL3000

7 Operating CU1000 (optional)

7.1 Touchscreen elements

7.1.1 Measurement display elements

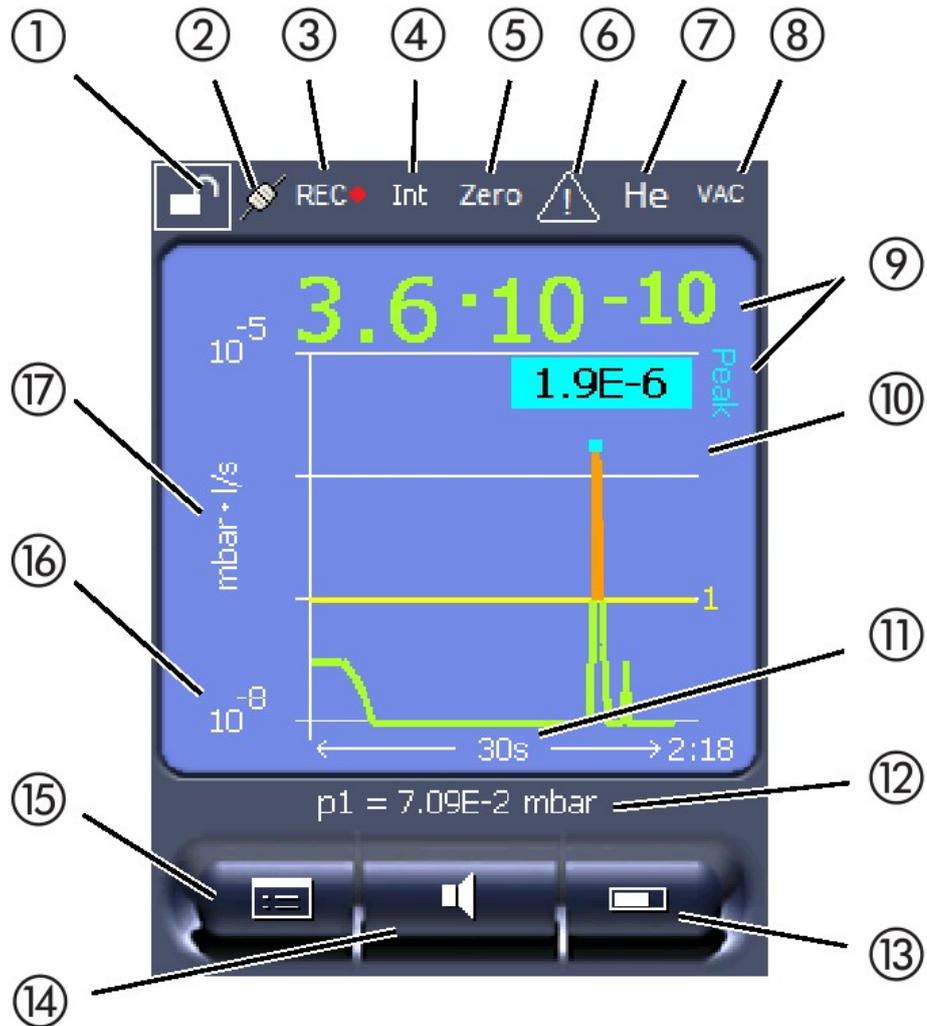


Fig. 10: Measurement display

1	Keyboard lock	10	Graphic representation of the leak rate and the peak hold function
2	Communication status	11	Time axis
3	Data recording	12	Backing pressure
4	Operator	13	Button "Favorite 2"
5	ZERO	14	Button "Favorite 1"
6	Message	15	Menu

7	Tracer gas	16	Value axis
8	Operating mode	17	Value axis
9	Leak rate with peak hold function		

1 - Keyboard lock

The control unit is locked or unlocked by pressing and holding the icon for the keyboard lock.

2 - Icon for the communication status

- Icon connected: The device communicates with the mass spectrometer module.
- Icon disconnected: The device does not communicate with the mass spectrometer module.

Establish communication:

- 1 Reset control unit.
- 2 Checking the status of the mass spectrometer module.
- 3 Check cable connection.

3 - Icon for the data recording

The measurement is recorded.

4 - Ser

The registered operator is shown abbreviated.

Display	Meaning
Ope	Operator
Sup	Supervisor
Int	Integrator
Ser	Service

For more information, see Chapter 6.2.2., Page 20.

5 - ZERO

Background suppression is active.

6 - Caution icon

Active warnings are stored in the unit.

The active warnings can be displayed via the menu "Info > History > Warnings".

7 - Tracer gas

Set tracer gas and tracer gas concentration percentage.

Display	Meaning
He	Helium (^4He)
H2	Hydrogen
M3	E.g. H-D, ^3He or H_3

8 - Operation mode

Configured operation mode

Display	Operating mode
VA	Vacuum
SNIF	Sniff
LOW FLOW	XL sniffer adapter in LOW FLOW
HIGH FLOW	XL sniffer adapter in HIGH FLOW
Standby	XL sniffer adapter in HIGH FLOW on standby

9 - Leak rate

Current measurement for the leak rate.

10 - Graph

Graphic display of the leak rate $Q(t)$.

11 - Leak rate

Time axis of the leak rate $Q(t)$.

12 - Primary vacuum pressure (not with operating mode XL Sniffer Adapter)

Backing pressure p_1 .

13 - Button "Favorite 2"

You can assign preferred parameters to this button (see Page 19). In Fig. 4 the button "Favorite 2" is assigned the function "Start/Stop" for example.

14 - Button "Favorite 1"

You can assign preferred parameters to this button (see Page 19). In Fig. 4 the button "Favorite 1" is assigned the function "ZERO" for example.

15 - Icon for the menu

All functions and parameters of the control unit can be accessed using the "Menu" key .

A full display of the menu of the menu is included as a file on the USB stick supplied with the LDS3000.

16 - Value axis

Value axis of the leak rate $Q(t)$.

17 - Device of measurement

Device of measurement of the value axis.

7.2 Settings and functions

Settings and functions of the control unit are explained in the following. You will find the settings and functions of the mass spectrometer module LDS3000 you can set using the control unit in the operating instructions of the mass spectrometer module.

7.2.1 Touch screen settings

The touch screen grays out the parameters if

- the user is not authorized to modify the values,
- the older version of the software run by mass spectrometer module LDS3000 does not support this parameter.

Scaling of the $Q(t)$ axis

Linear or logarithmic	
Lin.	
Log.	
Control unit	Display > $Q(t)$ axis > Linear or logarithmic
Number of decades with logarithmic view	
1	
2	
3	
4	
Control unit ü	Display > $Q(t)$ axis > Decades

	Auto scale	
	Off	
	On	
	Control unit	Display > Q(t) axis > Auto scale
Scaling of the time axis	Scaling of the time axis	
	15 s	240 s
	30 s	480 s
	60 s	960 s
	120 s	
	Control unit	Display > Time axis > Time axis scale
Display units	Device of pressure	
	Mbar	Atm
	Pa	Torr
	Control unit	Display > Units (display) > Pressure unit
Measured value display	Type of graphic display	
	Diagram	
	Bar graph	
	Control unit	Display > Measurement view > Measurement view mode
Display brightness	Numeric representation of the measurements	
	Off	
	On	
	Control unit	Display > Measurement view > Show value
Display brightness	Display brightness	
	20 - 100%	
	Control unit	Display > Brightness > Display brightness

Trigger display on the touch screen	Selection of the trigger (leak rate threshold) displayed on the touch screen.	
	1	
	2	
	3	
	4	
	Control unit	Settings > Trigger > Trigger sel.
Assigning favorite buttons	The favorite buttons offer direct access to individual functions. They can be assigned with access control "Supervisor" or higher by the user.	
	Favorite 1: Middle button (see Fig. 4, Page 15).	
	Favorite 2: Right button	
	Favorite 3: Button on the bottom right of the main menu.	
	CAL	Volume
	ZERO	- - - (= without function)
	Measurement view	Check CAL
	Start/Stop	Flow switching
	View settings	
	Control unit	Settings > Favorites > Favorite 1 (2, 3)
Display of messages on the touch screen	Warnings and error messages can be displayed on the touch screen.	
	Off	
	On	
	Control unit	Settings > Set up > Control unit > Messages > Show warnings
Show calibration note	Suppress or allow the calibration note with the following content:	
	<ul style="list-style-type: none"> • Leak rate of the applied calibration leak • No calibration should take place during the first 20 mins 	
	OFF (suppressed)	
	ON (allowed)	
	Control unit	Settings > Set up > Control unit > Messages > Show calibration notes

Show calibration request

The calibration request can be allowed or suppressed.	
OFF (suppressed)	
ON (allowed)	
Control unit	Settings > Set up > Control unit > Messages > Show calibration request

Setting the audio alarm

Warnings and error messages can be displayed on the touch screen.	
Off	
On	
Control unit	Settings > Set up > Control unit > Messages > Show warnings

Volume of the headphones or active speaker	
--- No sound	
Proportional: The frequency of the audible signal is proportional to the bar graph display or diagram height. The frequency range is 300 Hz to 3300 Hz.	
Setpoint: The pitch is proportional to the leak rate. The signal sounds if the leak rate exceeds the selected trigger value.	
Pinpoint: The sound of the acoustic signal changes its frequency within a specific range of leak rates. Range: A decade below the selected trigger threshold up to one decade above. The sound keeps at a constant low and a constant high frequency below and above this range, respectively.	
Trigger: If the selected trigger threshold is exceeded, a two-pitch signal sounds.	
Control unit	Settings > Set up > Control unit > Audio > Audio alarm mode

Behavior with warnings or error messages: If the touch screen shows a warning or an error, then a two-pitch signal sounds simultaneously.

Automatic switch off of the touch screen

The touch screen can be switched off automatically after a specific time without any operation to save energy.	
30 s	10 min
1 min	30 min
2 min	1 h ∞ (=never)
5 min	
Control unit	Settings > Set up > Control unit > Energy > Display off after

7.2.2 Operator types and authorizations

There are four different operator types that are distinguished by different authorizations. The integrator is registered ex works.

Additional operators can be registered. The following table shows options for individual operator types to register new operator types.

Operator registration

Viewer	Operator	Supervisor	Integrator
-	Operator	Supervisor	Integrator
	Viewer	Operator	Supervisor
		Viewer	Operator
			Viewer

For the types "Integrator", "Supervisor" and "Operator", a four-digit PIN must be assigned during registration (0000 ... 9999). "0000" is assigned to all operators ex works.

If an operator keeps the pin "0000", this operator will always be registered is during the start up of the system (without PIN query).

A key-operated switch can be used in addition to a PIN if an I/O module is connected. The key-operated switch is connected to the I/O module via three digital inputs (see operating instructions of the LDS3000).

The following table shows the authorizations of individual operator types.

Function	Viewer	Operator	Supervisor	Integrator
Changing parameters	-	x	x	x
Changing the display of error information	-	x	x	x
Calling up factory settings	-	-	-	x
Entering maintenance history	-	-	-	x

The menu "Service" is accessible only to INFICON service staff.

Load parameters

The saved/backed-up parameters of control unit CU1000 and of the mass spectrometer module can be loaded from a USB flash drive.

Menu Function > Data > Parameters > Load

Save parameters

The parameters of control unit CU1000 and of the mass spectrometer module can be saved to a USB flash drive.

Menu Function > Data > Parameters > Save

Display error information	The type of error information can be set differently for each operator type. The Integrator always receives the complete information. Number: Message text: Short description info: Expanded message information	
	<ul style="list-style-type: none"> • Only numbers • Number and text • Number, text and info 	
	Menu	Function > Data > Parameter > Error info Viewer (Operator, Supervisor)
Parameter list display and change	Parameters can be displayed as an alphabetical list with names and current value s. Each list entry is a button which, when pressed, will open the parameter's set-up dialog box.	
	Menu	List > Parameters list or : Functions > Data > Parameters > List
Display list of parameter change authorizations	Parameters can be displayed as an alphabetical list with names and current change authorizations. Each list entry is a button which, when pressed, will change access control. Changes are possible in accordance with the hierarchy of the operator.	
	Menu	Functions > Data > Parameters > Parameter Access

7.2.2.1 Logging out the operator

The operator activates access level "Viewer" to log out. "Access Ctrl > Viewer"

7.2.3 Functions

7.2.3.1 Resetting the settings

Mass spectrometer module	The settings of the mass spectrometer module can be reset to factory settings.	
	Menu	Functions > Data > Parameters > Reset > MSB settings
Access controls	The authorization for changing parameters can be reset to factory setting.	
	Menu	Functions > Data > Parameters > Reset > Param. access control
Control unit	The control unit settings can be reset to factory settings.	
	Menu	Functions > Data > Parameters > Reset > Control unit settings

7.2.3.2 Recording data

The data is saved as a TXT file. Each TXT file contains the following information:

- Date created
- Software version
- Serial number
- Start time
- Time stamp (measurement indicates offset in seconds in relation to start time)
- File name
- Time stamp (offset in seconds in relation to start time)
- Leak rate (expressed in selected unit)
- Pressure p1 (expressed in selected unit)
- Device status

Switching on/off

Switching data recording on/off	
<ul style="list-style-type: none"> • Off • On 	
Menu	Functions > Data > Recorder > Settings > Data recording

Record interval

Time interval between data recordings	
<ul style="list-style-type: none"> • 100 ms, 200 ms, 500 ms, 1 s, 2 s, 5 s 	
Menu	Functions > Data > Recorder > Settings > Record interval

Memory location

The data stored in the control unit can be saved to a USB flash drive. The memory in the control unit is limited to the recording of a 24-hour measurement.	
<ul style="list-style-type: none"> • USB stick • Control unit 	
Menu	Functions > Data > Recorder > Settings > Storage location

Copy data

The data stored in the control unit can be saved to a USB stick. The memory in the control unit is limited to the recording of a 24-hour measurement.	
<ul style="list-style-type: none"> • USB stick • Control unit 	
Menu	Functions > Data > Recorder > Settings > Storage location

Deleting data	The data stored in the control unit can be saved to a USB flash drive. The memory in the control unit is limited to the recording of a 24-hour measurement.	
	<ul style="list-style-type: none"> • USB stick • Control unit 	
Menu	Functions > Data > Recorder > Settings > Storage location	

7.2.3.3 Calling up information

Different information and states of the system can be called up with the info menu.

Measurement	<ul style="list-style-type: none"> • Preamplifier • Environment • TMP
Temperature	<ul style="list-style-type: none"> • Electronic • TMP
Energy and operating hours	<ul style="list-style-type: none"> • Energy values: Information on consumption values • Operation hours: Display for operating hours • Supply voltages: Information on internal supply voltages • Power supply: Information on the supply voltages of the components
History	<ul style="list-style-type: none"> • Error, error history / warning history • Calibration, calibration history • TMP error, TMP history • Warnings, active warnings • Maintenance, maintenance history
Control unit	<ul style="list-style-type: none"> • Version control unit: Information on the software version • Memory: Information on available memory • Settings: Control unit settings. • Serial port wired: Information on the communication connection • Data exchange: Information on the data exchange between mass spectrometer module and the control unit
Mass spectrometer module	<ul style="list-style-type: none"> • MSB (1): Information on the software version • MSB (2): Information on operating parameters • TMP controller (1): Information on the turbo molecular pump • TMP controller (2): Information on the turbo molecular pump, continued • Ion source: Information on the ion source used • Preamplifier: Information on the preamplifier • Preamplifier test: Information on the preamplifier test.

Interfaces

- I/O module (1): Information on the software version, inputs and outputs
- I/O module (2): Visualized information to the digital inputs

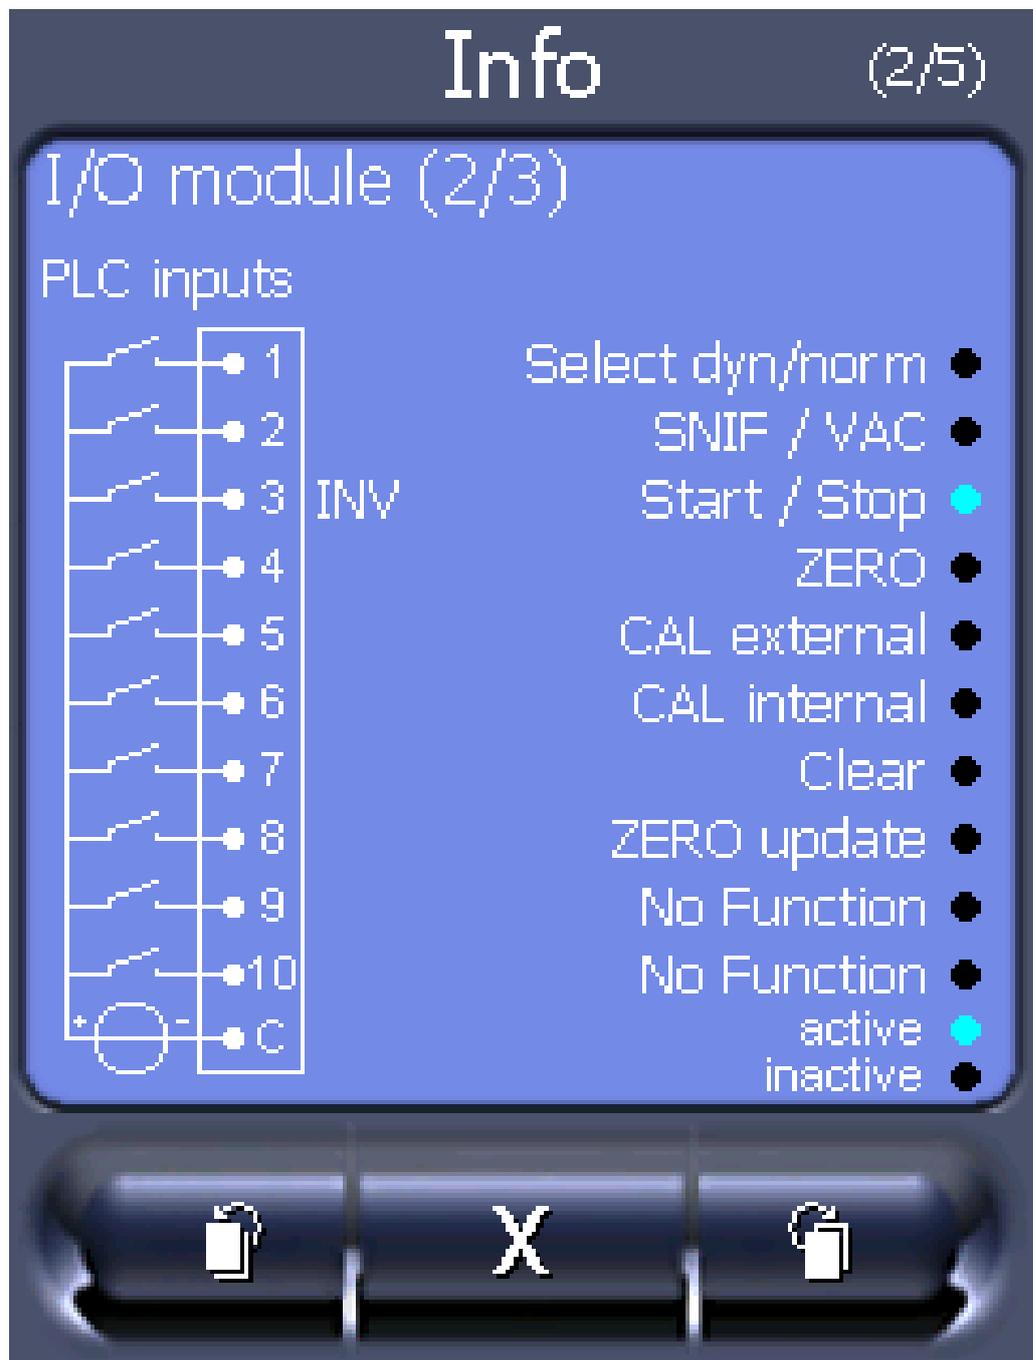


Fig. 11: I/O module (2): Visualized information to the digital inputs

1	Input signal condition	2	Configured function (INV = Function is inverted)
3	Status of the function (active or inactive)		

- I/O module (3): Visualized information to the digital outputs

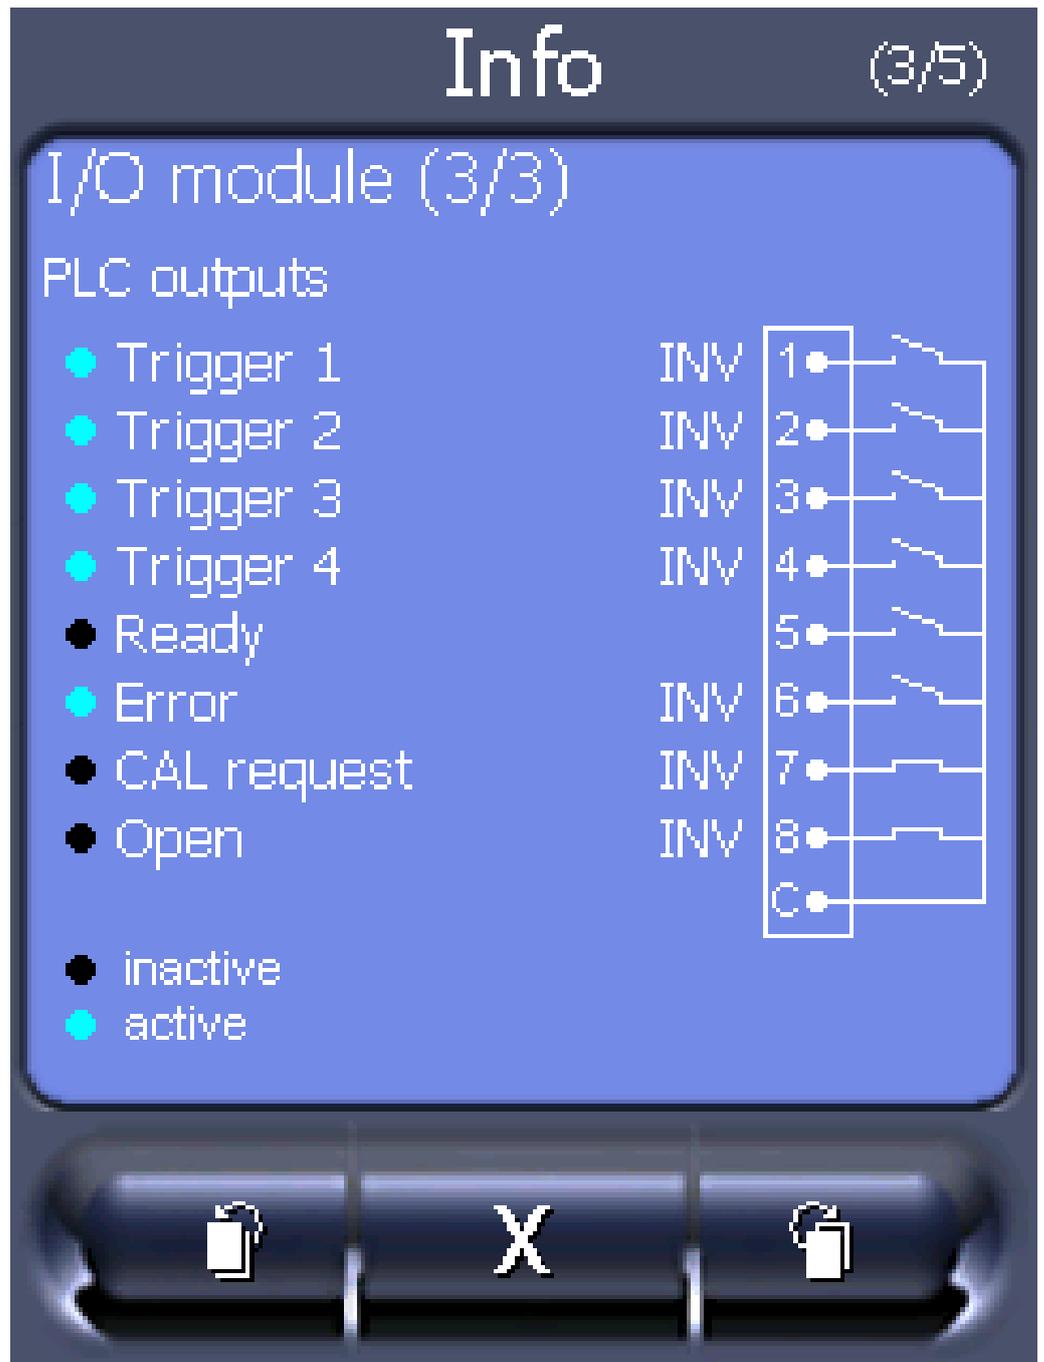


Fig. 12: Visualized information to the digital outputs

1	Configured function (INV = Function is inverted)	2	Output signal condition
3	Status of the function (active or inactive)		

- Bus module (1): Information on the bus module
- Bus module (2): Information on the bus module, continued

7.2.4 Updating the software

Software updates from INFICON are installed with the aid of a USB stick. The update function of the device can be found under "Functions > Data > Update".

An update is possible,

- if one or several updates are available on the USB stick, but only one update per type at most (control unit, MSB box, I/O module),
- if these parts are also connected free of disturbances and have an update function.

The corresponding buttons in the update menu such as "Control Unit", "MSB Box", and "I/O Module" are active and can be activated individually.

NOTICE

Aborted connection

Data loss due to an aborted connection

- ▶ Do not switch off the device and do not remove the USB stick while the software is being updated.
-
- ▶ Switch the device off and back on after a software update has taken place.

7.2.4.1 Updating the software of the control unit

The software is included in two files named Handset_IFC_Vx.xx.xx.exe and Handset_IFC_Vx.xx.xx.key.

- 1 Copy the file into the main directory of a USB stick.
- 2 Connect the USB flash drive to the USB port on the device.
- 3 Select: "Functions > Data > Update > Control unit".
 - ⇒ Do not switch off the device and do not remove the USB stick while the software is being updated.
- 4 Check the version information.
- 5 Select the "Start" button to start the update. Do not switch off the device and do not remove the USB stick while the software is being updated.
- 6 Follow the instructions on the touchscreen and wait until the update is complete.

7.2.4.2 Checking and updating the software version of the MSB box

The current software is available from the Inficon support.

The functions of the XL Sniffer adapter set are taken into consideration in system software version 2.11 or higher.

- 1** Copy the file `Flash_LDS3000_MSB_Vxx.xx.xxx.bin` into the main directory of a USB stick.
- 2** Connect the USB flash drive to the USB port on the device.
- 3** Select: "Functions > Data > Update > MSB".
 - ⇒ The display shows information on the current and the new software version as well as on the boot loader.
- 4** Check the version information.
 - ⇒ Select the "Start" button to start the update.
 - ⇒ Do not switch off the device and do not remove the USB stick whilst the software is being updated! Do not switch off the device and do not remove the USB stick while the software is being updated.
- 5** Follow the instructions on the touchscreen and wait until the update is complete.
- 6** If the system displays warning 104 or 106, confirm with "C".

7.2.4.3 Updating the software of the I/O module

The software of the I/O module can be updated from the control unit if the mass spectrometer module has the software version "MS module 1.02" or higher.

- 1** Copy the file `Flash_LDS3000_IO_Vxx.xx.xxx.bin` into the main directory of a USB stick.
- 2** Connect the USB flash drive to the USB port on the device.
- 3** Select: "Functions > Data > Update > I/O module"
 - ⇒ The display shows information on the current and the new software as well as on the current boot loader.
- 4** Check the version information.
- 5** Select the "Start" button to start the update.
 - ⇒ Do not switch off the device and do not remove the USB stick while the software is being updated.
- 6** Follow the instructions on the touchscreen and wait until the update is complete.
 - ⇒ The following tips are shown after selecting the "Start" button on the touchscreen:
 - Connect and switch on the IO1000.
 - Activate boot mode (switch DIP S2.3 on and off once).
 - When the STATUS LED flashes green, press OK.

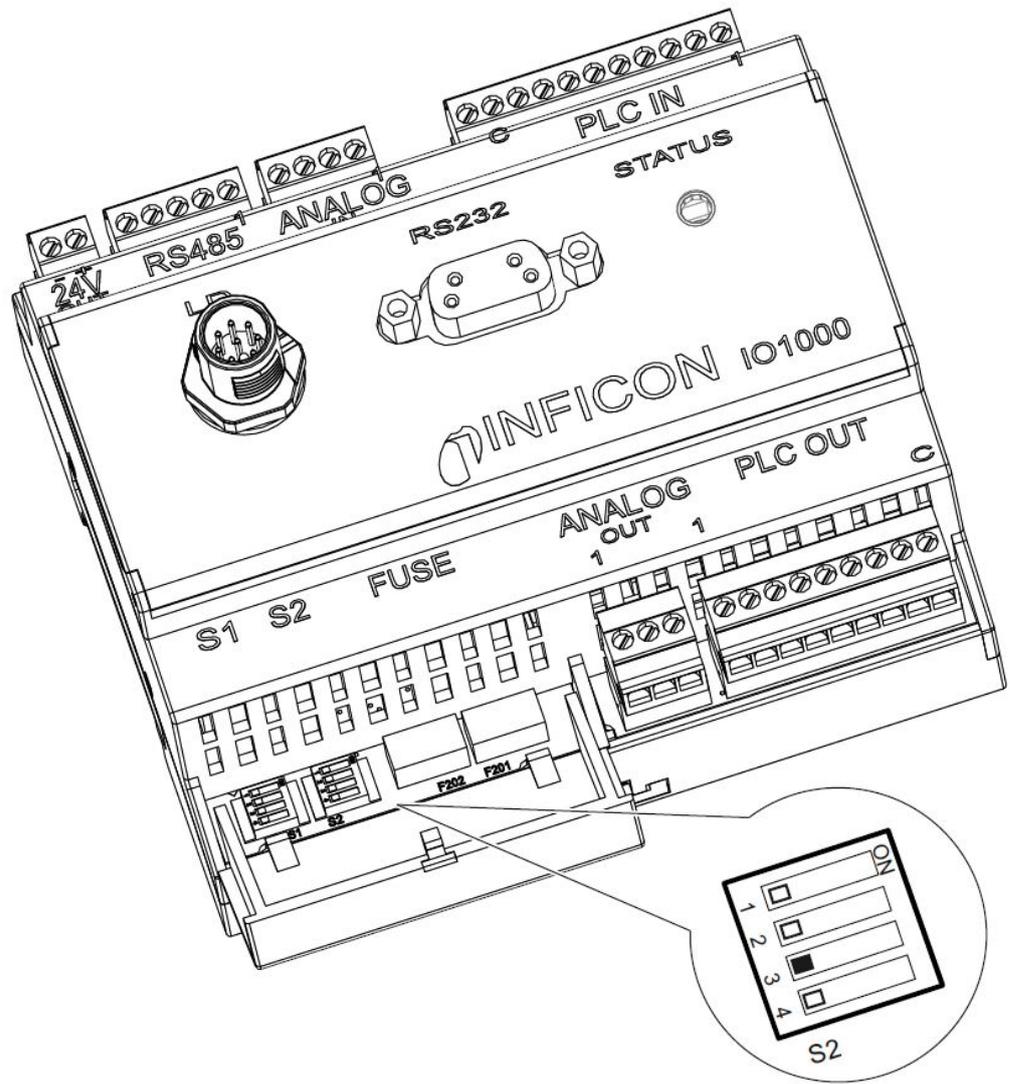


Fig. 13: DIP switch on the I/O module

8 Maintenance

The mass spectrometer module is a leak testing unit that is intended for industrial applications. The device is composed of parts and assemblies that are, for the most part, low maintenance.

Servicing the mass spectrometer module merely requires that you change the operating fluid reservoir of the turbo molecular pump and check the fan on the turbo molecular pump.

We recommend that you sign a service agreement with INFICON or one of INFICON's authorized service partners.

8.1 Maintenance at INFICON



WARNING

Danger to health

Contaminated devices could endanger the health of INFICON employees.

- ▶ Fill in the declaration of contamination completely.
- ▶ Attach the declaration of contamination to the outside of the packaging.

The declaration of contamination is a legal requirement and serves to protect our employees. INFICON sends devices which are sent without a completed declaration of contamination back to the sender. See "[--- FEHLENDER LINK ---](#)".

8.2 General maintenance information

The maintenance work that needs to be performed on the mass spectrometer module is grouped into three service levels:

- Service level I: Customer without any technical training
- Service level II: Customer with technical and INFICON training
- Service level III: INFICON Service



DANGER

Life threatening hazard from electric shock

High voltages are inside the device. Touching parts where electrical voltage is present can result in death.

- ▶ Disconnect the device from the power supply prior to any maintenance work.

NOTICE

Material damage from pollution

The mass spectrometer module is a precision measurement device. Even little pollution can already damage the device.

- Make sure that the working environment is clean and you use clean tools whenever performing any maintenance work.

8.3 Maintenance plan

Failure to perform the maintenance work specified in the maintenance schedule will void the warranty granted on the mass spectrometer module LDS3000.

Maintenance work	Operating hours	24	8000	16000	24000	36000	Service level
	Duration		1 years	2 years	3 years		
Turbo-molecular pump	Changing the oil wick cartridge , spare part no.: 200003801				X2		II and III
	Replace bearing (recommended)					X2	III
	Clean fan and check for proper operation		1				I and II
Accessories	Clean sniffer valve		X				III
	Calibrate internal calibration leak		X2				III
Internal calibration	Perform internal calibration	X1					I
External calibration	Perform external calibration	X1					I
Leak test MS module	Perform helium leak test on MS module		X				III

X: after operating hours or time period

X1: after operating hours

X2: by duration

1: depending on environment and use

8.4 Maintenance work

8.4.1 Change operating fluid reservoir of turbo molecular pump

The turbo molecular pump is filled with an operating fluid for the lubrication of the ball bearings. The operating fluid reservoir must be replaced every 2 years at the latest. With extreme strain of the pump or in unclean processes, the lubricant reservoir must be replaced at shorter intervals.

The cover of the operating fluid reservoir can be unscrewed only when the turbo molecular pump is flooded.

Flood the turbo molecular pump

- 1** Shut down mass spectrometer module, see "Decommissioning the device [▶ 100]".
 - 2** Wait until turbo molecular pump is drained (at least 1 min).
 - 3** Disconnect 24 V power supply pack from MSB box.
 - 4** Allow the turbo molecular pump to cool down if necessary.
 - 5** Remove turbo molecular pump.
 - 6** Open the ventilation screw slowly.
- ⇒ Turbo molecular pump is flooded until it reaches atmospheric pressure.

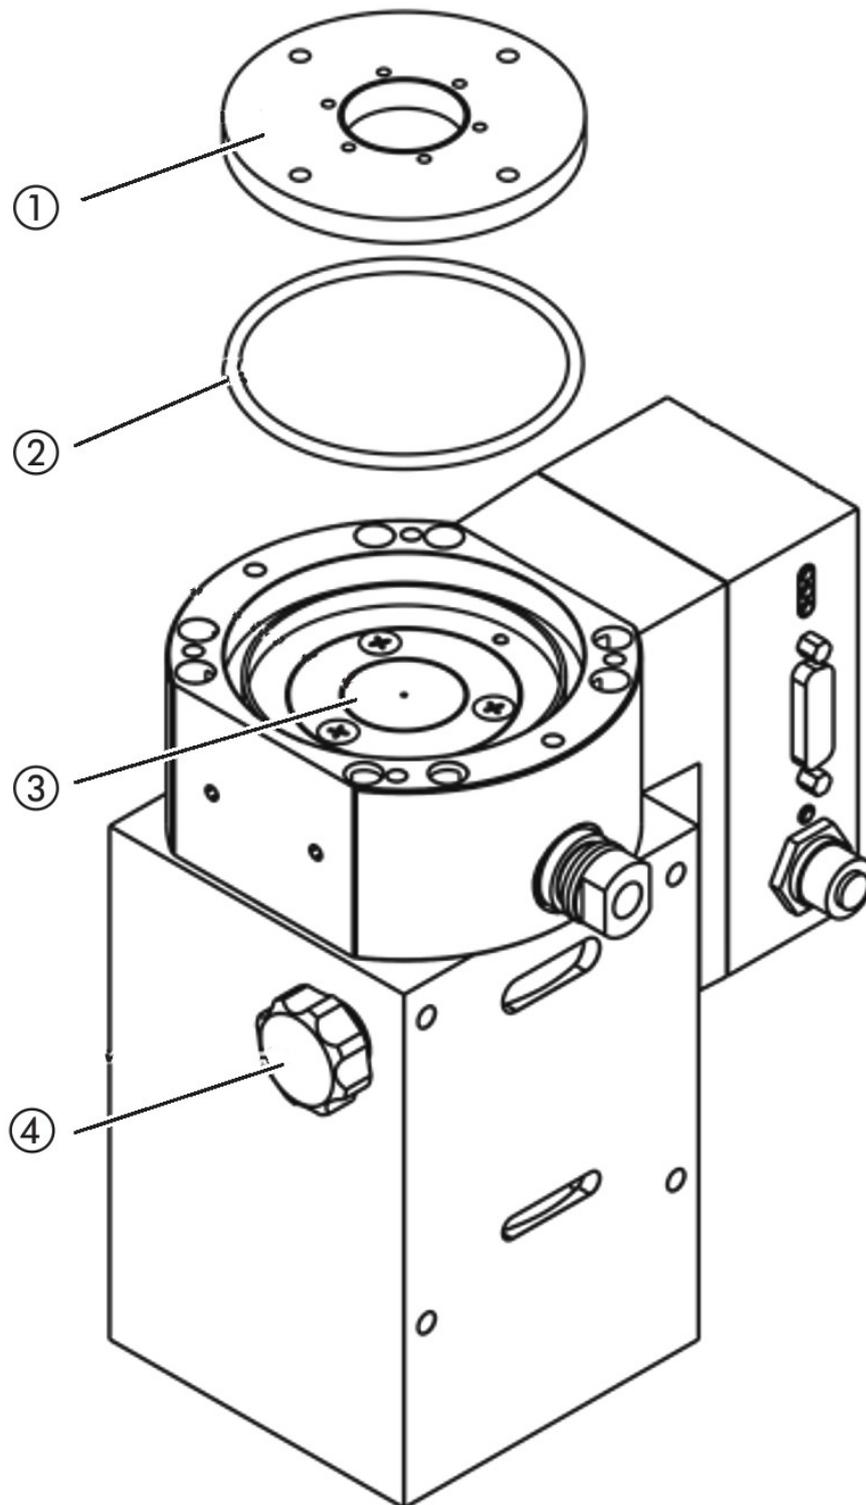


Fig. 14: Turbo molecular pump SplitFlow 80

1	Cover	3	Oil wick cartridge
2	O-ring	4	Ventilating screw

Removing old oil wick cartridge



WARNING

Danger of poisoning due to harmful substances

The oil wick cartridge and parts of the turbo molecular pump can be contaminated with toxic substances that are contained in the pumped media.

- ▶ Take suitable safety precautions.
- ▶ Decontaminate contaminated parts prior to any maintenance work.
- ▶ Dispose of old operating fluid reservoirs in compliance with applicable regulations.

- ✓ Pin wrench, P/N: 551-200
- ✓ Two screwdrivers
- ✓ Tweezers
- ✓ O-ring
- ✓ Oil wick cartridge, P/N: 200 003 801
- ✓ Mass spectrometer and turbo molecular pump flooded.
- ✓ The new oil wick cartridge contains a sufficient level of operating fluid.
 - 1** Check the expiration date of the new operating fluid reservoir.
 - 2** Do not fill in any more operating fluid.
 - 3** Use a face pin wrench to unscrew the cover.
 - 4** Remove old o-ring.
 - 5** Use two screwdrivers to lift out the oil wick cartridge.

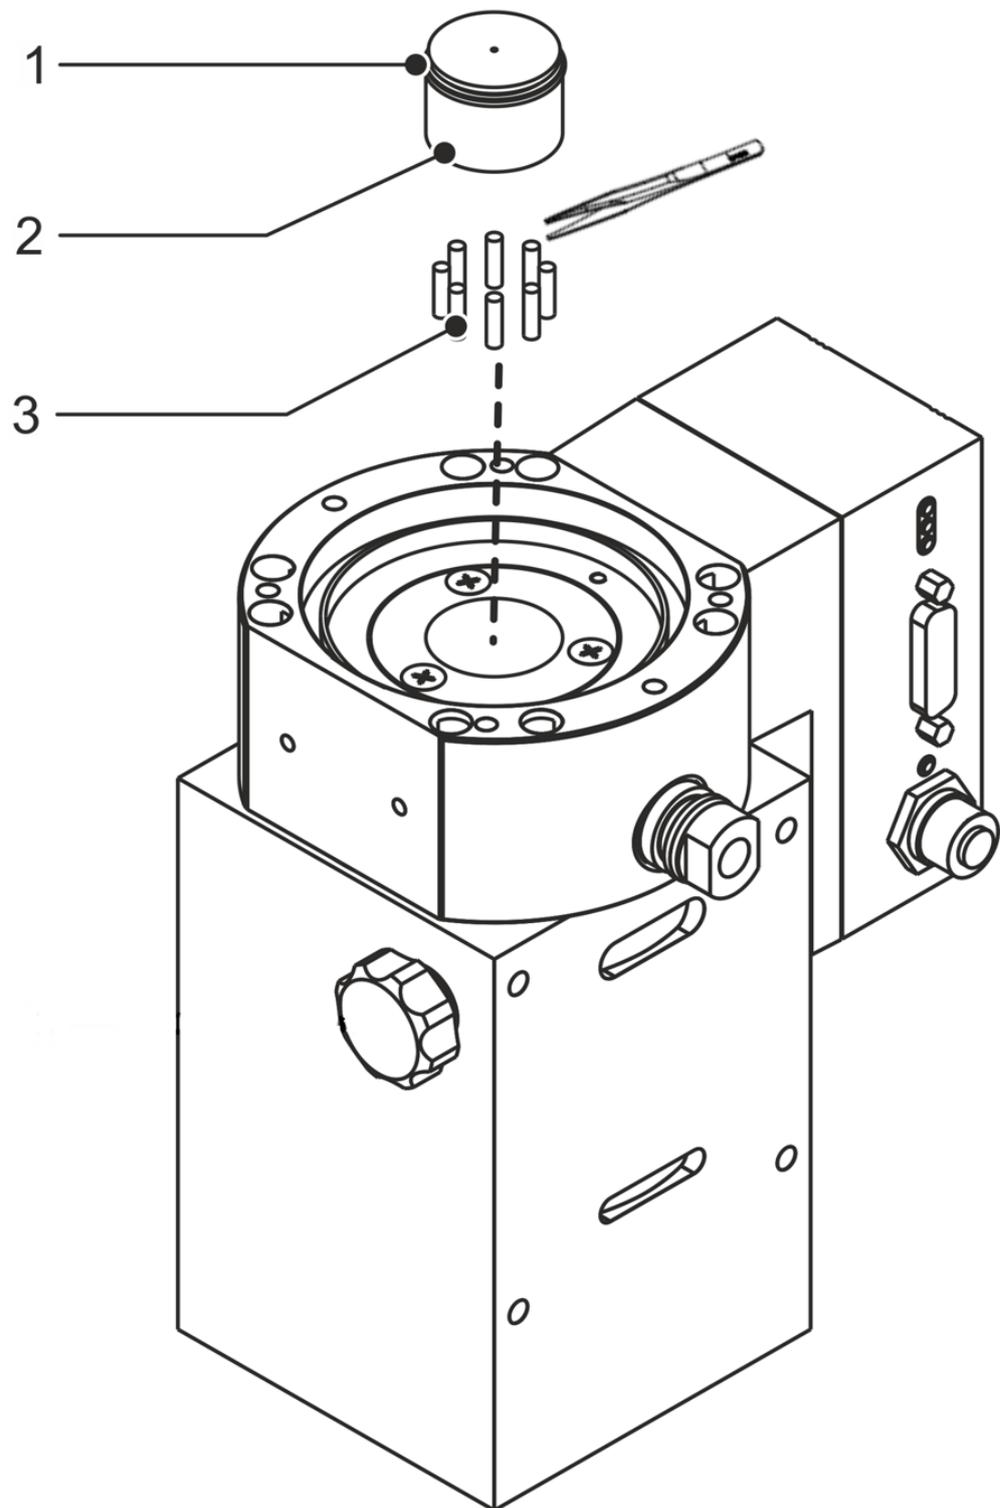


Fig. 15: Changing the oil wick cartridge

1	O-ring	3	Porex rods
2	Oil wick cartridge		

Replacing Porex rods

NOTICE

Material damage due to cleaning liquids

Cleaning liquids can damage the unit.

- ▶ Do not use any cleaning liquids.
- ▶ Use a clean, lint-free cloth.

- 1 Pull-out the old Porex rods (8) using a pair of tweezers.
- 2 Remove any contaminants found on the turbo molecular pump and the cover using a clean, lint-free cloth.
- 3 Insert new Porex rods (8 pcs) using a pair of tweezers.

Inserting a new oil wick cartridge

NOTICE

Material damage if o-ring is mounted improperly

An improperly mounted o-ring can cause leaks. The device will experience malfunctions and become damaged.

- ▶ Insert the o-ring carefully.

The new oil wick cartridge will be positioned correctly when you screw in the cover:

- 1 Do not slide in the new oil wick cartridge into the pump completely, but stop once you reach the o-ring.
- 2 Insert a new o-ring for the cover.
- 3 Use a face pin wrench to screw in the cover (tightening torque 13 Nm+/-10%).
- 4 Tighten the ventilation screw by hand.
- 5 Install the turbo molecular pump.
- 6 Put the mass spectrometer module into operation.

Confirm maintenance work

- ✓ Control unit installed
- ✓ Access = Integrator
- ▶ Confirm maintenance work on control unit: "Access ctrl > Integrator > Maintenance > Maintenance work"

9 Decommissioning the device

9.1 Shutting down the leak detector

- 1 Switch off the leak detector on the power supply pack.
- 2 Wait until the turbo molecular pump has stopped running.

9.2 Disposing of the mass spectrometer module

The operator can dispose of the device or it can be sent to INFICON.

The device consists of materials that can be recycled. This option should be exercised to prevent waste and also to protect the environment.

- ▶ For disposal, always comply with local and regional environmental and safety regulations.

9.3 Returning the mass spectrometer module



WARNING

Danger to health

Contaminated devices could endanger the health of INFICON employees.


- ▶ Fill in the declaration of contamination completely.
- ▶ Attach the declaration of contamination to the outside of the packaging.

The declaration of contamination is a legal requirement and serves to protect our employees. INFICON sends devices which are sent without a completed declaration of contamination back to the sender.

See "--- FEHLENDER LINK ---".

10

10.1 Declaration of Incorporation

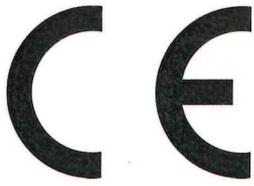

EU Declaration of Conformity

We – INFICON GmbH - herewith declare that the products defined below meet the basic requirements regarding safety and health and relevant provisions of the relevant EC Directives by design, type and the versions which are brought in to circulation by us.

In case of any products changes made without our approval, this declaration will be void.

Designation of the product:

Mass spectrometer module

Models: **LDS3000**

The products meet the requirements of the following Directives:

- **Directive 2014/30/EU (Electromagnetic Compatibility)**

Applied harmonized standards:

- **DIN EN 61326-1:2013**
Class A according to EN 55011

Catalogue numbers:

560-300

Cologne, February 23, 2016

Dr. Döbler, President LDT

Cologne, February 23, 2016

Bausch, Research and Development

INFICON GmbH
Bonner Strasse 498
D-50968 Köln
Tel.: +49 (0)221 56788-0
Fax: +49 (0)221 56788-90
www.inficon.com
E-mail: leakdetection@inficon.com

10.2 Declaration of Incorporation



EC DECLARATION OF INCORPORATION

We – INFICON GmbH - herewith declare that the products defined below meet the basic requirements regarding safety and health and relevant provisions of the relevant EC Directives by design, type and the versions which are brought in to circulation by us.

The products meet the requirements of the following Directives:

- **Directive 2006/42/EC (Machinery)**

In case of any products changes made without our approval, this declaration will be void

Designation of the product:

Mass spectrometer module

Applied harmonized standards:

- **DIN EN ISO 12100:2010**

Models: **LDS3000**

Catalogue numbers:

560-300

The partly completed machinery must not be put into service until the final machinery into which it is to be incorporated has been declared in conformity with the provisions of this Directive (2006/42/EC), where appropriate.

The manufacturer will electronically transmit, in response to a reasoned request by the national authorities, relevant information on the partly completed machinery.

The relevant technical documentation is compiled in accordance with part B of Annex VII.

Authorised person to compile the relevant technical files:

Rene Bausch, INFICON GmbH, Bonner Strasse 498, D-50968 Köln

Cologne, February 23, 2016

Dr. Döbler, President LDT

Cologne, February 23, 2016

Bausch, Research and Development

INFICON GmbH
 Bonner Strasse 498
 D-50968 Köln
 Tel.: +49 (0)221 56788-0
 Fax: +49 (0)221 56788-90
 www.inficon.com
 E-mail: leakdetection@inficon.com

10.3 Declaration of Contamination



Declaration of Contamination

The service, repair, and/or disposal of vacuum equipment and components will only be carried out if a correctly completed declaration has been submitted. Non-completion will result in delay.
 This declaration may only be completed (in block letters) and signed by authorized and qualified staff.

1 Description of product

Type _____

Article Number _____

Serial Number _____

2 Reason for return

3 Operating fluid(s) used (Must be drained before shipping.)

4 Process related contamination of product:

toxic	no <input type="checkbox"/> 1)	yes <input type="checkbox"/>
caustic	no <input type="checkbox"/> 1)	yes <input type="checkbox"/>
biological hazard	no <input type="checkbox"/> 1)	yes <input type="checkbox"/> 2)
explosive	no <input type="checkbox"/>	yes <input type="checkbox"/> 2)
radioactive	no <input type="checkbox"/>	yes <input type="checkbox"/> 2)
other harmful substances	no <input type="checkbox"/> 1)	yes <input type="checkbox"/>

2) Products thus contaminated will not be accepted without written evidence of decontamination!

The product is free of any substances which are damaging to health yes

1) or not containing any amount of hazardous residues that exceed the permissible exposure limits

5 Harmful substances, gases and/or by-products

Please list all substances, gases, and by-products which the product may have come into contact with:

Trade/product name	Chemical name (or symbol)	Precautions associated with substance	Action if human contact

6 Legally binding declaration:

I/we hereby declare that the information on this form is complete and accurate and that I/we will assume any further costs that may arise. The contaminated product will be dispatched in accordance with the applicable regulations.

Organization/company _____

Address _____ Post code, place _____

Phone _____ Fax _____

Email _____

Name _____

Date and legally binding signature _____ Company stamp _____

This form can be downloaded from our website.

Copies: Original for addressee - 1 copy for accompanying documents - 1 copy for file of sender

INFICON GmbH

Bonner Str. 498, 50968 Cologne, Germany
 Tel: +49 221 56788-112 Fax: +49 221 56788-9112
 www.inficon.com leakdetection.service@inficon.com

zisa01e1-b (1106)

